



ENCHEN COCO 2 Automatic Foaming Soap Dispenser User Manual

[Home](#) » [ENCHEN](#) » ENCHEN COCO 2 Automatic Foaming Soap Dispenser User Manual 

ENCHEN COCO 2 Automatic Foaming Soap Dispenser



Contents

- 1 Remove the liquid bottle, prepare for filling
- 2 Distinguish suitable liquid soap?
- 3 The ratio of lotion-to-water
- 4 Product Parameters
- 5 The instruction of charging
- 6 Power switch instructions
- 7 Sensing distance of usage
- 8 Product Warranty Card
- 9 Non-warranty Regulations
- 10 Documents / Resources
 - 10.1 References

Remove the liquid bottle, prepare for filling

1. Hold the bottom container and rotate it clockwise to remove the bottle.

1



2. Remove the bottle cap by turning it counter clock-wise.

2



Distinguish suitable liquid soap?

Add a small amount of lotions and water to shake. If the mixed liquid generated lots of foam, then the detergents are suitable. Ideal for various brands of hand sanitizers, laundry detergents, shampoos, shower gels and other liquid soap.

3



Attention :Do not use liquids containing abrasive particles, powders, pearlescent, and non-foaming liquids like conditioners, essential oil, it is extremely easy to affect the normal use of the machine.

The ratio of lotion-to-water

No need to dilute the water like liquid soap, it can be used directly.

4

VISCOUS LIQUID
soap



Dilution and shake
it evenly to use

1(liquid soap)

:

2-6times(water)



Please appropriately adjust the actual soap -to -water ratio according to the concentration of the liquid soap.

Product Parameters

Product Model: COCO 2

Product Name: Automatic Soap Dispenser


Waterproof Rating: IPX4

Rated Power: 1.5W
Rated Voltage: 3.7V



The instruction of charging

1. Remove the Power silicone on the back.
2. Plug in the attached USB charging cable.
3. The device must be charged with 5V, 2A adaptor, otherwise, it will be damaged, and it needs 3-5 hours to be full charged.
4. The red light will flash twice when the battery is low,

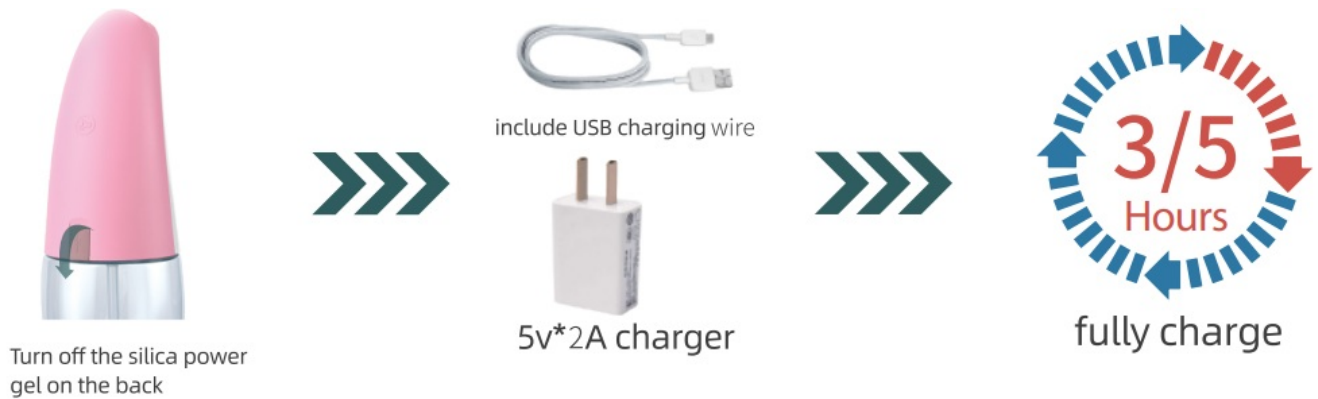

Power switch instructions

1. Do not touch the power switch with wet hands, which will cause touch sense to fail.
2. If you find the touch is not sensitive, please change your fingers or dry the water on the dolphin which at the back of the machine and try again.



Switch power



For the first use, the first three times will not bubble, which is a usual case.



Blue light

Touch twice continuously power on/out foaming volume about 0.6g



White light

Out foaming volume about 1.Sg



Red light

Power off /low power alert

Attention

Do not tilt or invert to avoid damage to the machine.



Sensing distance of usage

from the top within 4CM reach out your hand, trigger machine foaming.



Product Warranty Card

Product Name	Automatic Soap Dispenser	Warranty Period
Product Model		One year since the purchasing date
Purchasing Date	Year Month Day	To Year Month Day
Customer' s Address		

Non-warranty Regulations


Non-warranty Regulations

* Unauthorized maintenance, misuse collision, negligence, abuse, liquid infusion, accident, modification, incorrect use of non-product accessories, or tear up, alter stickers and anti-counterfeiting marks.

* Damage caused by force majeure.

AMEUDA TECHNOLOGY CO., Ltd.
Add: Room 2102, Comprehensive Building,
Jiangjin Comprehensive Free Trade Zone, No.88,
Maya Avenue, Luohuang Town,
Jiangjin District, Chongqing City, China

Documents / Resources

	ENCHEN COCO 2 Automatic Foaming Soap Dispenser [pdf] User Manual COCO 2, Automatic Foaming Soap Dispenser, COCO 2 Automatic Foaming Soap Dispenser, F oaming Soap Dispenser, Soap Dispenser, Dispenser
---	--

References

- [User Manual](#)