



# ENCHEN COCO Hand Soap Dispenser Set Instruction Manual

[Home](#) » [ENCHEN](#) » ENCHEN COCO Hand Soap Dispenser Set Instruction Manual 

## Contents

- [1 ENCHEN COCO Hand Soap Dispenser Set](#)
- [2 PRODUCT INFORMATION](#)
- [3 Product Description](#)
- [4 Installation](#)
- [5 Features of Hand Soap Dispenser](#)
- [6 Using](#)
- [7 Maintenance](#)
- [8 Precautions](#)
- [9 Product Parameters](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)
- [11 Related Posts](#)

# ENCHEN

**ENCHEN COCO Hand Soap Dispenser Set**



## PRODUCT INFORMATION

### Important Precautions

#### Danger

1. This product and its accessories are not toys, please keep out of reach of children to avoid danger.
2. Do not plug or unplug the power cord with wet hands, avoid power cord sticking to or contacting with liquid.
3. Make sure the adapter and power cord are dry.
4. This product contains a built-in rechargeable battery, do not throw it into fire, or charge, use and place it at a high temperature.
5. Do not use when the power cord or adapter is damaged, or the socket is loose.

 
The symbol on the right indicates that the body cannot be cleaned under the tap.

#### Warnings

1. Make sure that the power cord is dry, and do not rinse the hand soap dispenser with water.
2. Before connecting the product for charging, make sure that the voltage matches the local voltage.
3. Go to the manufacturer or the after-sales service department to purchase the original model for replacement if the power cord is damaged or lost.
4. Use and store the product at a temperature between 5 °C and 35°C.
5. Stop using it immediately when you find any abnormality or trouble of this product, and dealing with it according to the type of failure. Handing it over to the maintenance department for repair if necessary.
6. Do not disassemble the body to replace the battery.
7. Do not immerse this product in water or any liquid.
8. Do not knock or drop this product. Stop using it if it is damaged due to collision or drop.
9. People with impaired limbs, mental disorders and lack of relevant experience and knowledge (including children) should use it under the supervision and guidance of their guardians.


10. Before taking out the battery, the motor must be power off.

## Product Description

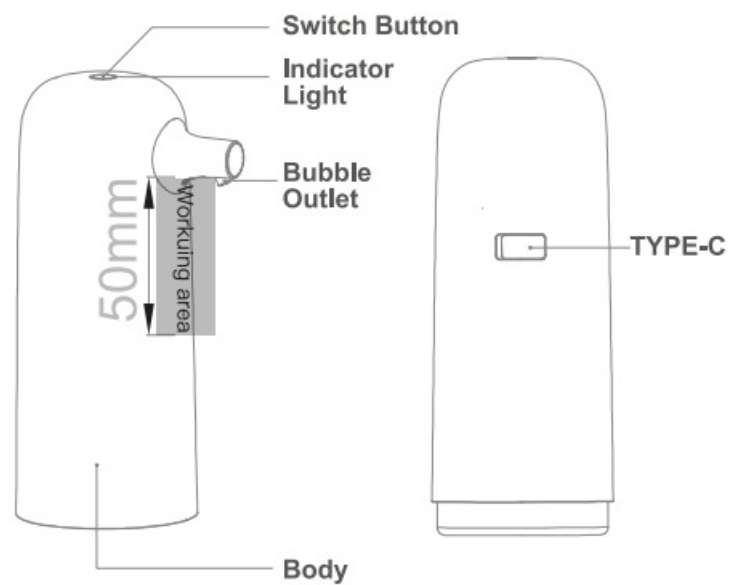


## Installation

 
1. Twist the cap counterclockwise

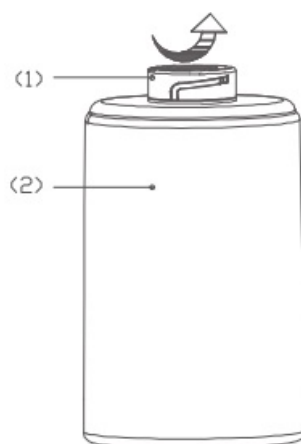

 
2. Pull the cap up to open it

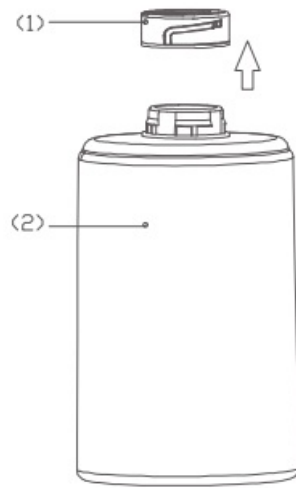

 3. Pour hand sanitizer into the bottle

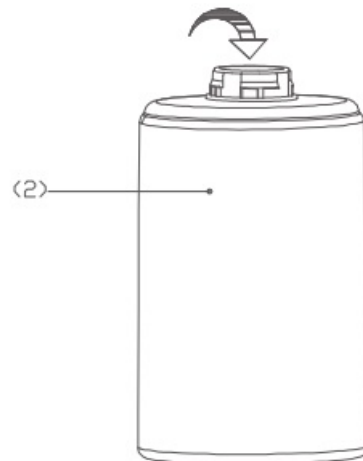


 4. Twist the cap clockwise until it's tightened

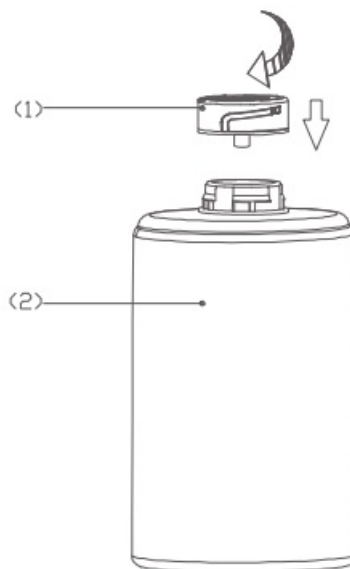

### Features of Hand Soap Dispenser

 - Durable Motor
- 12:1 Gas-liquid Ratio Dense Foam
- 0.25 Seconds Rapid Induction of Bubbles
- Splash Proof
- Convenient Liquid Replacement
- Rechargeable Battery

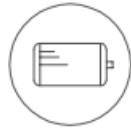

Durable Motor



12:1 Gas-liquid Ratio  
Dense Foam



0.25 Seconds Rapid  
Induction of Bubbles



Splash Proof



Convenient Liquid  
Replacement



Rechargeable  
Battery

## Using

1. Tap the power button, and successfully turn on the Enchen automatic soap dispenser when red light flashes twice. Switch to different gears : first gear, second gear and power off. Green light stands for the first gear, blue light stands for the second gear, red lights flashes twice for power off.
2. It is recommended to rinse hands until moist.
3. Reaching to the induction area to get rich foam. There is less foaming in the first gear and more foaming in the second gear. In the second gear, the amount of foam is 1.5 times of that in the first gear.
4. It is recommended to rub your hands fully.
5. Dry your hands after washing.



State	Indicator Display
Boot up	Green/ Blue light flashes once and goes out
Shutdown	The red light flashes twice and goes out
Low battery	The red light is on during induction

- In the bootup state, touch the switch button to the shutdown gear and you can shut down it.
- \*The product cannot be turned on under the charging state.

### Description of hand soap dispenser features

1. The gas-liquid ratio is 12:1 at a temperature of 25 °C tested by the experiment.
2. The longest triggering time of foam is 0.25 seconds tested by the experiment.
3. It can effectively inhibit Escherichia coli and Staphylococcus aureus under experimental conditions.

**Tips:** When the hand soap dispenser is not working, it will automatically enter the standby state without manual shutdown.

### Maintenance

1. If you need to clean, it is recommended to use a wet towel to gently wipe the surface of the hand soap dispenser when it is turned off.
2. If this product is left unused for a long time, please take out the liquid soap to avoid deterioration of it.

### Precautions

1. Do not immerse this product in water or rinse it with water directly to avoid short circuit.
2. Do not tilt the bottle when installing or replacing liquid soap. It is normal that a small amount of liquid flows out, and it can still be used normally after wiping it clean.
3. Do not use non-foam type liquid soap for replacement, so as not to cause machine failure.
4. Store this product in a cool place away from direct sunlight or heat sources.

### Product Parameters

- **Product Name:**Automatic Induction Hand Soap Dispenser
- **Product Model:**COCO
- **Rated Voltage:**5V=
- **Rated Power:**5W
- **Charging Time:**1 Hour

### Troubleshooting

Problem	Cause	Measure
Unable to switch on/off	The battery is exhausted	Connect to power to charge
Indicator light is not on	The product is not turned on	Boot up correctly
No bubbles	The liquid soap has been exhausted	Replace liquid soap
White light flashes quickly	Black induction area is blocked by foam	Shut down, wipe the induction area and restart

## Troubleshooting of Automatic Hand Soap Dispenser Set

Name	Cause
Automatic hand soap dispenser	Unable to switch on/off Indicator light is not on No bubbles
Liquid soap	Leakage


## Environmental Protection

The built-in rechargeable battery may contain substances that pollute the environment. Be sure to take out the battery or send this product to an officially designated recycling bin for disposal before throwing it. You can also send the discarded hair clipper to the company's designated recycling department, and the maintenance department will disassemble and recycle the battery.

## Warnings:

- Do not short-circuit the battery to prevent it from burning and causing a fire.
- Do not throw the battery into fire to prevent explosion or release of hazardous substances.

## Documents / Resources

 <p>ENCHEN Instruction Manuals for Automatic Hand Soap Dispenser Set COCO AMBUDA TECHNOLOGY CO., LTD.</p>	<p><a href="#">ENCHEN COCO Hand Soap Dispenser Set</a> [pdf] Instruction Manual COCO, COCO Hand Soap Dispenser Set, Hand Soap Dispenser Set, Soap Dispenser Set, Dispenser Set, Set</p>
--	---

## References

- [User Manual](#)