

**Enerlites 17017-F3 3  
Speed Slide Fan Control  
and Light Switch**



# Enerlites 17017-F3 3 Speed Slide Fan Control and Light Switch Installation Guide

[Home](#) » [ENERLITES](#) » Enerlites 17017-F3 3 Speed Slide Fan Control and Light Switch Installation Guide 

## Contents

- [1 Enerlites 17017-F3 3 Speed Slide Fan Control and Light Switch](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 SPECIFICATIONS](#)
- [5 DESCRIPTION FEATURES](#)
- [6 WIRING DIRECTIONS](#)
- [7 OPERATING INSTRUCTIONS](#)
- [8 WARRANTY INFORMATION](#)
- [9 CONTACT](#)
- [10 Documents / Resources](#)
  - [10.1 References](#)

# Enerlites®

**Enerlites 17017-F3 3 Speed Slide Fan Control and Light Switch**



Enerlites 17017-F3 3-speed fan and on/off switch provide convenient control over your ceiling fan's speed and power with ease. Featuring three adjustable fan speeds, you can customize the airflow to your liking. The on/off switch allows you to effortlessly turn the fan on or off, providing simple and efficient operation for your comfort needs. Perfect for any room, this switch offers practicality and convenience at your fingertips.

### Product Usage Instructions

1. Insert the HOT wire to the fan's HOT terminal.
2. Insert the FAN wire to the fan's LOAD terminal.
3. Insert the LIGHT wire to the fan's LIGHT LOAD terminal.
4. Insert the GROUND wire to the fan's GROUND terminal.

### WARNING

Turn off the power at the circuit breaker before installing the Fan Control. Please read and understand these instructions before proceeding with the installation. This device is designed for installation under the National Electric Code and local regulations. We recommend that a qualified electrician perform the installation. Ensure that the circuit breaker or fuse(s) are turned off and power is disconnected before wiring the device.

### CAUTION

- To reduce the risk of overheating and possible damage to other equipment, Do Not Install to control a receptacle, motor-operated appliance, fluorescent lighting fixture or a transformer-supplied appliance.
- Risk of Electric Shock – More than one disconnect switch may be required to de-energize the device before servicing. Use copper wire only.

Before using this switch to control your fan, be sure to first set the speed on the ceiling fan to high. Some fan models may have a pull string attached to its side or underside. Please check the fan manufacturer's instructions on how to change fan speed.

**Pull String:** The fan control is off when the slider is at the zero position. Then as you slide it up through positions 1-3, the fan speed increases from low to high.

**Fan Control:** The light switch at the bottom controls the connected light/load.

## FAQ

- **Q:** Can this switch be used with all types of ceiling fans?
- **A:** The switch is compatible with most standard ceiling fans, but it's recommended to check with the fan manufacturer for compatibility.

## SPECIFICATIONS

- Voltage .....120VAC, 60Hz
- Fan Load.....2.5A
- Incandescent/Halogen/LED/CFL.....720W or 6A
- Operating Temperature.....32°F-104°F

## DESCRIPTION FEATURES

Enerlites 17017-F3 3-speed fan and on/off switch provide convenient control over your ceiling fan's speed and power with ease. Featuring three adjustable fan speeds, you can customize the airflow to your liking. The on/off switch allows you to effortlessly turn the fan on or off, providing simple and efficient operation for your comfort needs. Perfect for any room, this switch offers practicality and convenience at your fingertips.

- Single Pole light and fan control
- No neutral wire is required.
- Slim is designed with terminals for easy installation.

## WARNING

Turn off the power at the circuit breaker before installing the Fan Control.


Please read and understand these instructions before proceeding with the installation. This device is designed for installation under the National Electric Code and local regulations. We recommend that a qualified electrician perform the installation. Ensure that the circuit breaker or fuse(s) are turned off and power is disconnected before wiring the device.

**CAUTION** – To reduce the risk of overheating and possible damage to other equipment, Do Not Install to control a receptacle, motor-operated appliance, fluorescent lighting fixture or a transformer-supplied appliance.

Risk of Electric Shock – More than one disconnect switch may be required to de-energize the device before servicing


## WIRING DIRECTIONS

1. Insert the HOT wire to the fan's HOT terminal.
2. Insert the FAN wire to the fan's LOAD terminal.
3. Insert the LIGHT wire to the fan's LIGHT LOAD terminal.
4. Insert the GROUND wire to the fan's GROUND terminal.

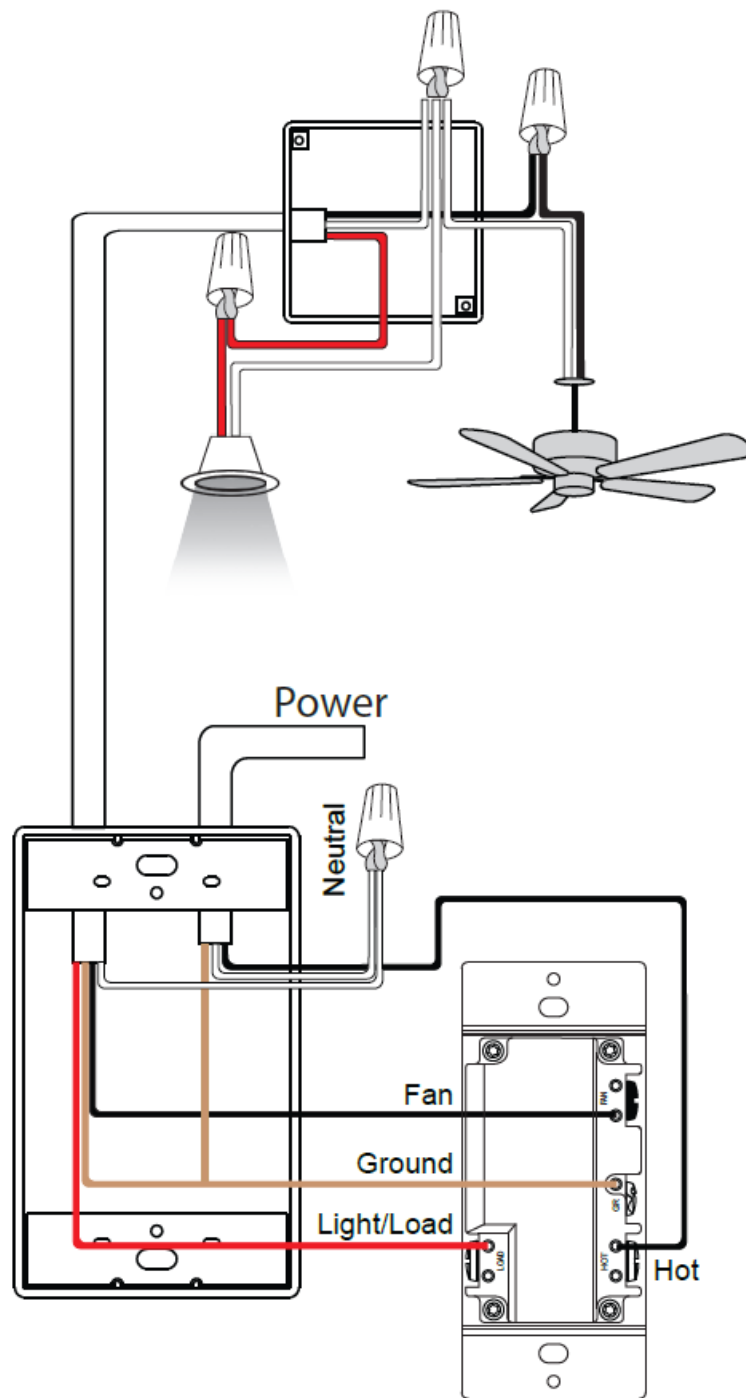


## OPERATING INSTRUCTIONS

- Before using this switch to control your fan, be sure to first set the speed on the ceiling fan to high. Some fan models may have a pull string attached to its side or underside.
- Please check the fan manufacturer's instructions on how to change fan speed.

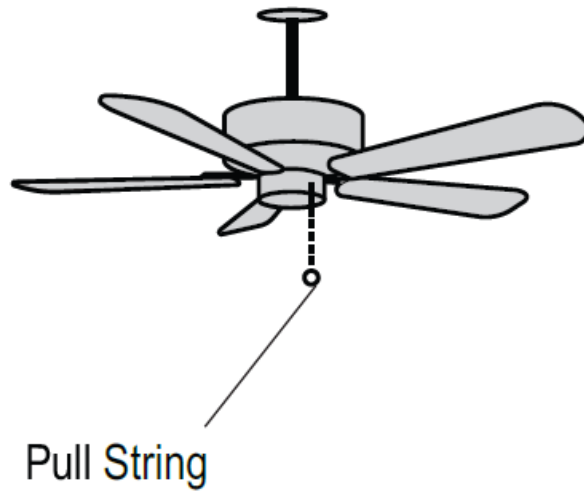

Pull String

- The fan control is off when the slider is at the zero position. Then as you slide it up through positions 1-3, the fan speed increases from low to high.
- The light switch at the bottom controls the connected light/load.

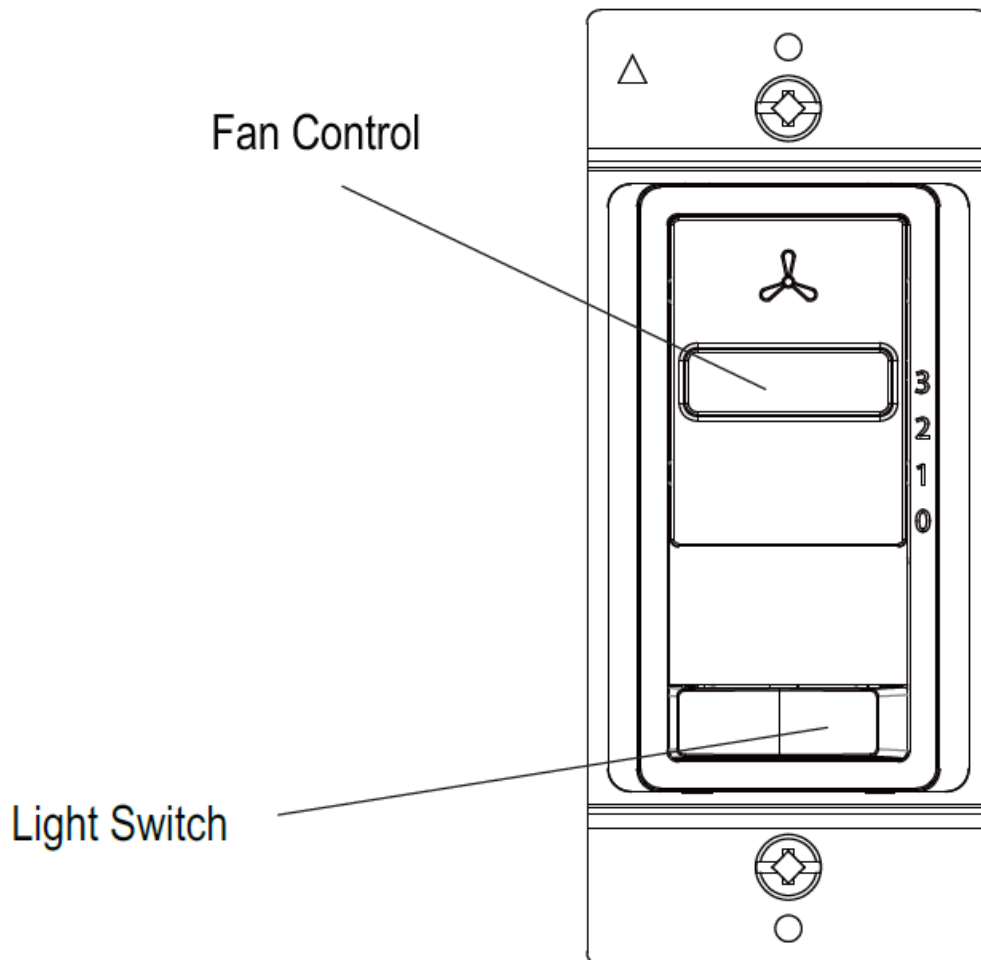

Fan Control

Light Switch

## WARRANTY INFORMATION


This device is warranted to be free of material and workmanship defects for 2 years from the date of purchase. An original receipt or proof of purchase from an authorized retailer must be presented upon warranty claim. ALL claims must be verified and approved by Enerlites, Inc. Warranties from other Enerlites products may vary. This warranty is non-transferable and does not cover normal wear and tear or any malfunction, failure, or defect resulting from misuse, abuse, neglect, alteration, modification, or improper installation. To the fullest extent permitted by the applicable state law, Enerlites shall not be liable to the purchaser or end-user customer of Enerlites products for direct, indirect, incidental, or consequential damages even if Enerlites has been advised of

the possibility of such damages. Enerlites' total liability under this or any other warranty, express or implied, is limited to repair, replacement or refund. Repair, replacement or refund are the sole and exclusive remedies for breach of warranty or any other legal theory.

## CONTACT

- © 2024 Enerlites Inc. CA, U.S.A.
- [WWW.ENERLITES.COM](http://WWW.ENERLITES.COM)
- 0203240244
- REV 20232103

## Documents / Resources

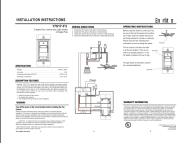	<a href="#">Enerlites 17017-F3 3 Speed Slide Fan Control and Light Switch</a> [pdf] Installation Guide 17017-F3 3 Speed Slide Fan Control and Light Switch, 17017-F3, 3 Speed Slide Fan Control and Light Switch, Fan Control and Light Switch, Light Switch, Switch
---	---

## References

- [E Manufacturing Lighting Controls & Wiring Devices - Enerlites](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.