




CS40962 Zigbee Interface



EnerSys CS40962 Zigbee Interface Installation Guide

[Home](#) » [EnerSys](#) » EnerSys CS40962 Zigbee Interface Installation Guide 

Contents

- [1 EnerSys CS40962 Zigbee Interface](#)
- [2 Product Usage Instructions](#)
- [3 INTRODUCTION](#)
- [4 USE CONDITIONS](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)



EnerSys CS40962 Zigbee Interface



Product Usage Instructions

Installation:

1. The Zigbee Interface is an electronic component and cannot be used as is by end users. It must be integrated into electronic equipment as a component.
2. Handle the Zigbee Interface with care as the component is sensitive to ESD. Special equipment must be used to handle it.

Use Conditions:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

By FCC requirements, changes or modifications not expressly approved by Enersys could void the user's authority to operate this product.

FAQ

• **Q: Can the Zigbee Interface be used independently without integration?**

A: No, the Zigbee Interface is an electronic component meant for integration into electronic equipment.

• **Q: What precautions should be taken while handling the Zigbee Interface?**

A: Handle with care as it is sensitive to ESD. Use special equipment to prevent damage.

INTRODUCTION

1. The Zigbee Interface is an electronic component and can not be used as is by the end user. it must be integrated in an electronic equipment as a component.
2. The Zigbee Interface must be handled with care, the component is sensitive to ESD, and special equipment must be used to handle it.

USE CONDITIONS

1. Place the Zigbee Interface in a free area, the interface must not be put in a metallic enclosure.
2. **Nominal Voltage range:** 3.3 V (3.0 to 3.6 V)
3. **Temperature range:** [-20°C ; 70°C]
4. **Altitude < 2000m, Pollution level protection:** 3
5. **Technical support:** Refer to our website: www.enersys-emea.com to find your local contact.
6. **Federal Communications Commission (FCC):**
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION. BY FCC REQUIREMENTS, CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY ENERSYS COULD VOID THE USER'S AUTHORITY TO OPERATE THIS PRODUCT.

For more details, please contact your local Enersys representative or:

EnerSys S.A.R.L. Rue Alexander Flemming Z.I. EST – CS40962 – F 62033 Arras Cedex

Documents / Resources

| | |
|---|---|
|  | EnerSys CS40962 Zigbee Interface [pdf] Installation Guide CS40962 Zigbee Interface, CS40962, Zigbee Interface, Interface |
|---|---|

References

- [OPERATION.IN](#)
- [EnerSys](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.