



ENFORCER SD-962AR-36G Grade 1 Rim-Type Exit Device Instruction Manual

[Home](#) » [ENFORCER](#) » ENFORCER SD-962AR-36G Grade 1 Rim-Type Exit Device Instruction Manual

Contents [[hide](#)]

- [1 ENFORCER SD-962AR-36G Grade 1 Rim-Type Exit Device](#)
- [2 Introduction](#)
- [3 Specifications](#)
- [4 Parts List](#)
- [5 Screws Included](#)
- [6 Dimensions](#)
- [7 Overview](#)
- [8 Sample Applications](#)
- [9 Mounting](#)
- [10 Final Installation](#)
- [11 LIMITED WARRANTY](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



ENFORCER SD-962AR-36G Grade 1 Rim-Type Exit Device



Introduction

The ENFORCER Grade 1 Rim-Type Exit Device, when mounted on the inside of a door to block entry to a protected premises, securely locks the door from outside access while allowing users inside the protected premises to exit. The stainless steel enclosure protects the exit device from abuse, yet easily unlocks the door from the inside by users who require exit. It can be connected to an entry-type lever trim or to any physical locking device on the outside of the door in order to allow entry to authorized personnel.

Specifications

- Construction ANSI Grade 1 steel
- For doors 13/4" (44mm) thick, wood or metal
- Hand Non-handed
- Latch bolt Stainless steel, 3/4" (19mm) throw
- Dead latch Stainless steel 5/8" (16mm) throw
- Strike For 5/8" (16mm) stop
- Spring Stainless steel
- Chassis Plated steel
- Cover Plated zinc cast
- Rail assembly Aluminum
- End cap Plated zinc cast
- Dogging Hex-type dogging standard
- Dimensions 33"x8"x23/16" (838x203x56 mm)
- Weight 9-lb 12-oz (4.4kg)

Parts List

- 1x Grade 1 Rim-Type Exit Device
- 1x Manual
- 1x Mounting template
- 1x Strike
- 1x Hex key
- 1x End cap
- 1x End cap bracket
- Mounting hardware

Screws Included

Mounting chassis to door:

- 4x 1/4"x3/4" machine screws
- 4x 1/4"x3/4" wood screws
- 4x sex bolts

Connecting end cap to end cap bracket:

2x M4x6mm machine screws


Mounting end cap bracket to door:

- 2x 1/4"x3/4" machine screws
- 2x 1/4"x3/4" wood screws


Mounting strike to door:

- 2x 1/4"x3/4" machine screws
- 2x 1/4"x3/4" wood screws
- 1x #12x3/4" machine screw

Dimensions

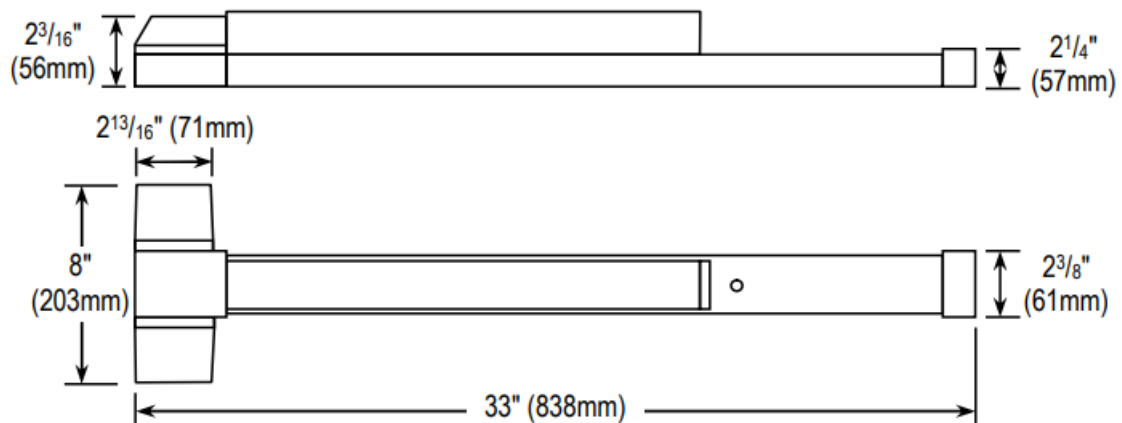


Overview

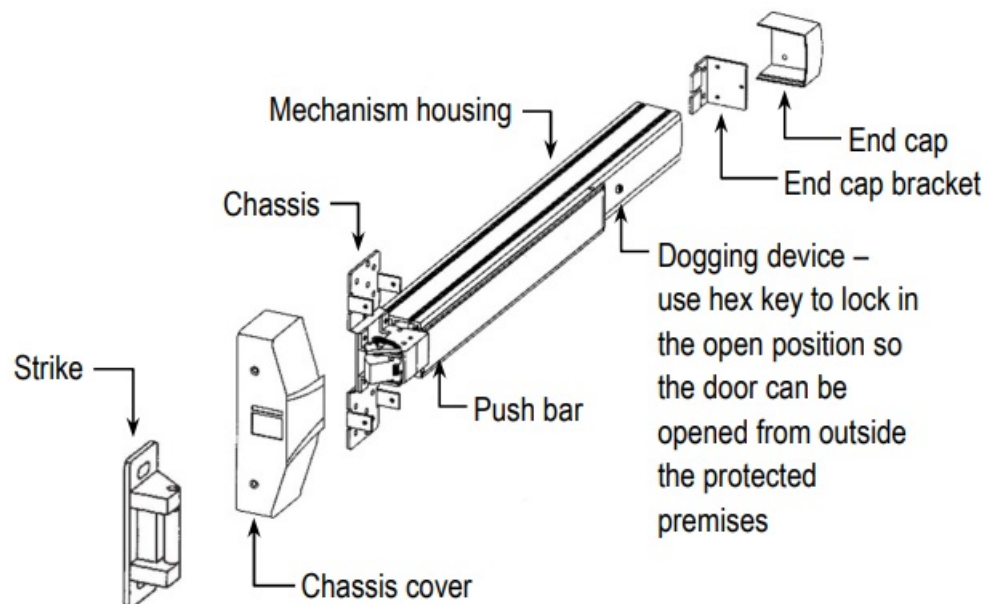


Sample Applications


Single Door

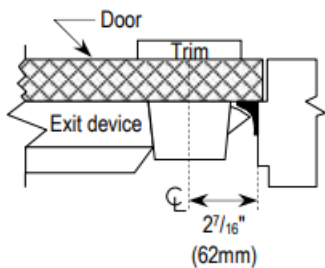




Double Door with Mullion

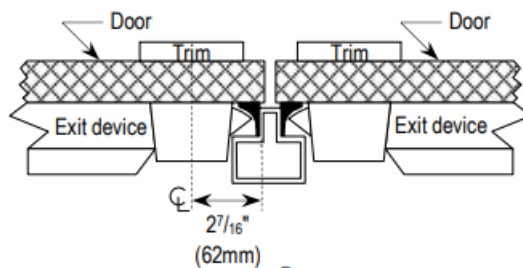



Double Door without Mullion

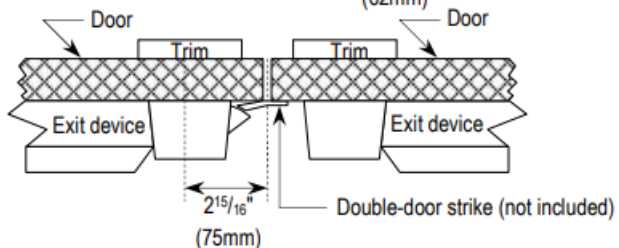

Mounting

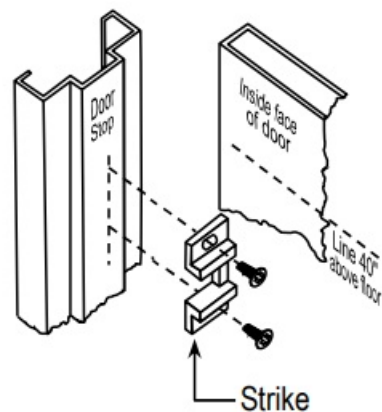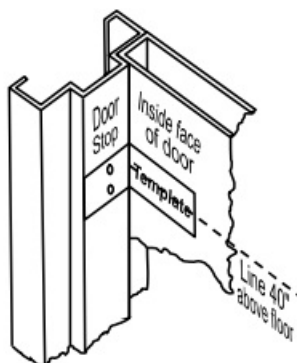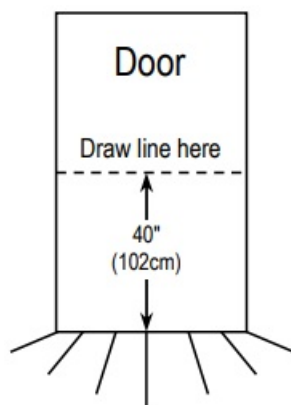

Final Installation

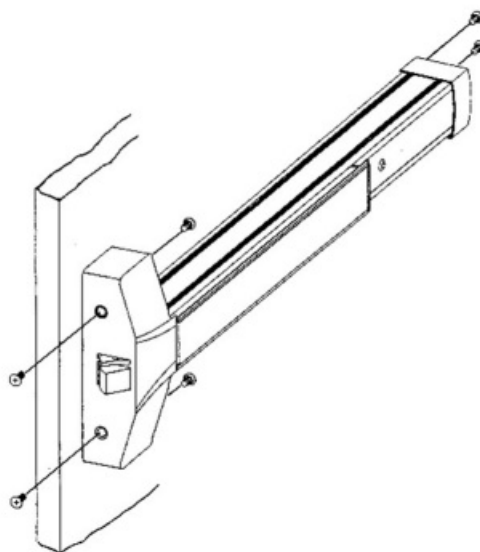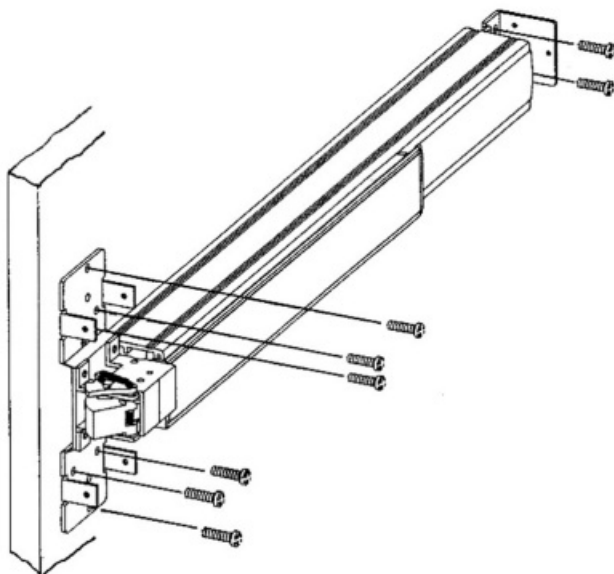

NOTE:

Diagram shows 6 screws for mounting the chassis. Product only includes 4 screws. For best results, use 6 screws.

1. Mark the vertical center line of the exit bar by drawing a line across the door at 40" above the floor. See "Mounting" on page 3.
2. Fold the included template, and align the center lines on the template with the center line drawn on the door. Then mark the position of the mounting holes for the latch assembly. See "Mounting" on.
3. Move the template against the door stop and then mark the mounting holes for the strike.
4. Drill the holes as marked on the door and the mullion. See "Mounting" on.

California Proposition 65 Warning: These products may contain chemicals which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

WARNING:

Incorrect mounting that leads to exposure or moisture inside the enclosure could damage the device and will void the warranty.

LIMITED WARRANTY

This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for one (1) year from the date of sale to the original customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM and the purchaser's exclusive remedy, shall be limited to the replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damage of any kind to the purchaser or anyone else.


NOTICE:

The SECO-LARM policy is one of continual development and improvement. For that reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints. All trademarks are the property of SECO-LARM U.S.A., Inc. or their respective owners. Copyright © 2021 SECO-LARM U.S.A., Inc. All rights reserved.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606 Website: www.seco-larm.com
Phone: (949) 261-2999 | (800) 662-0800 Email: sales@seco-larm.com

Documents / Resources

	<p>ENFORCER SD-962AR-36G Grade 1 Rim-Type Exit Device [pdf] Instruction Manual SD-962AR-36G, SD-962BR-36G, SD-962AR-36G Grade 1 Rim-Type Exit Device, SD-962AR-36G, Grade 1 Rim-Type Exit Device, SD-962DR-36G</p>
---	--

References

-  [La Armería de Madrid - fabricantes de armas y rifles](#)
-  [P65Warnings.ca.gov](#)
-  [- SECO-LARM USA Inc](#)