




ENFORCER SKPR-Bxxx-xQ Bluetooth Access Controllers User Guide

[Home](#) » [ENFORCER](#) » ENFORCER SKPR-Bxxx-xQ Bluetooth Access Controllers User Guide 

Contents

- [1 ENFORCER SKPR-Bxxx-xQ Bluetooth Access Controllers](#)
- [2 Getting Started](#)
- [3 Installation](#)
- [4 Setup](#)
- [5 Log In to the Device](#)
- [6 Manage Device and Set Device Settings](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

ENFORCER®

ENFORCER SKPR-Bxxx-xQ Bluetooth Access Controllers



Getting Started



Download the SL Access™ app from the corresponding store for your phone (iOS 11.0 and above, Android 5.0 and above). Get the complete Installation Manual, SL Access App User Manual, and more at SECO-LARM's website.

NOTES:

- Be sure to set your smartphone to automatically download app updates so that you always have the latest version of the app.
- The app will appear in your device's default language if available. If the app does not support your device language, it will default to English.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SECO-LARM is under license. Other trademarks and trade names are those of their respective owners.


Installation

This manual is for installers looking to do a basic installation and setup of the ENFORCER Bluetooth® keypad/reader (SK-B141-PQ shown, others similar).

Mounting and Installation


See the Additional Information sheet included in your product for basic mounting and installation instructions. For more in-depth installation and advanced programming instructions, see the corresponding product page at www.seco-larm.com and download the Installation Manual and Administrator Guide.

Basic Wiring Diagram

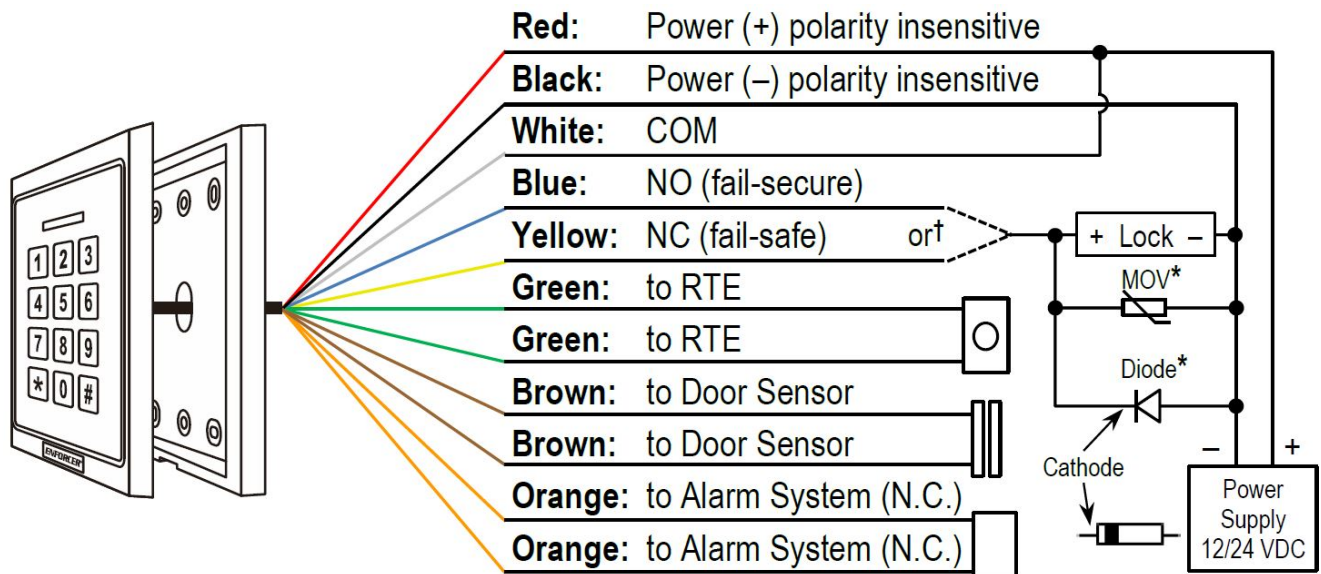


AC-Powered Lock Wiring

AC powered locks should be wired as follows. Their peripherals are wired the same as above.

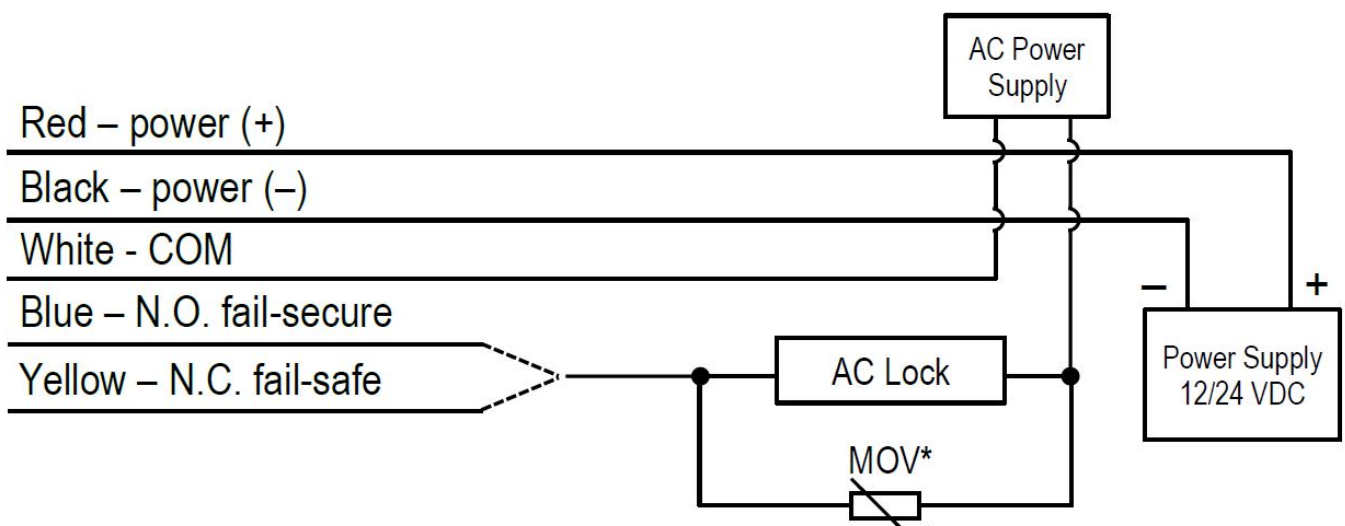

IMPORTANT NOTES:


To protect the relay, you must install the enclosed diode—with the cathode (striped end)

toward the positive side—for DC-powered locks and install the varistor (MOV, ) for AC-powered locks and for electromagnetic locks unless your lock has a diode/MOV built-in. Failure to use these as directed will void the warranty. Use the blue wire for fail-secure applications and the yellow wire for fail-safe applications. Use electrical tape to insulate the end of any unused wire. See Installation Manual and Administrator Guide online for

details.

Setup

Understanding the SL Access Home Screen

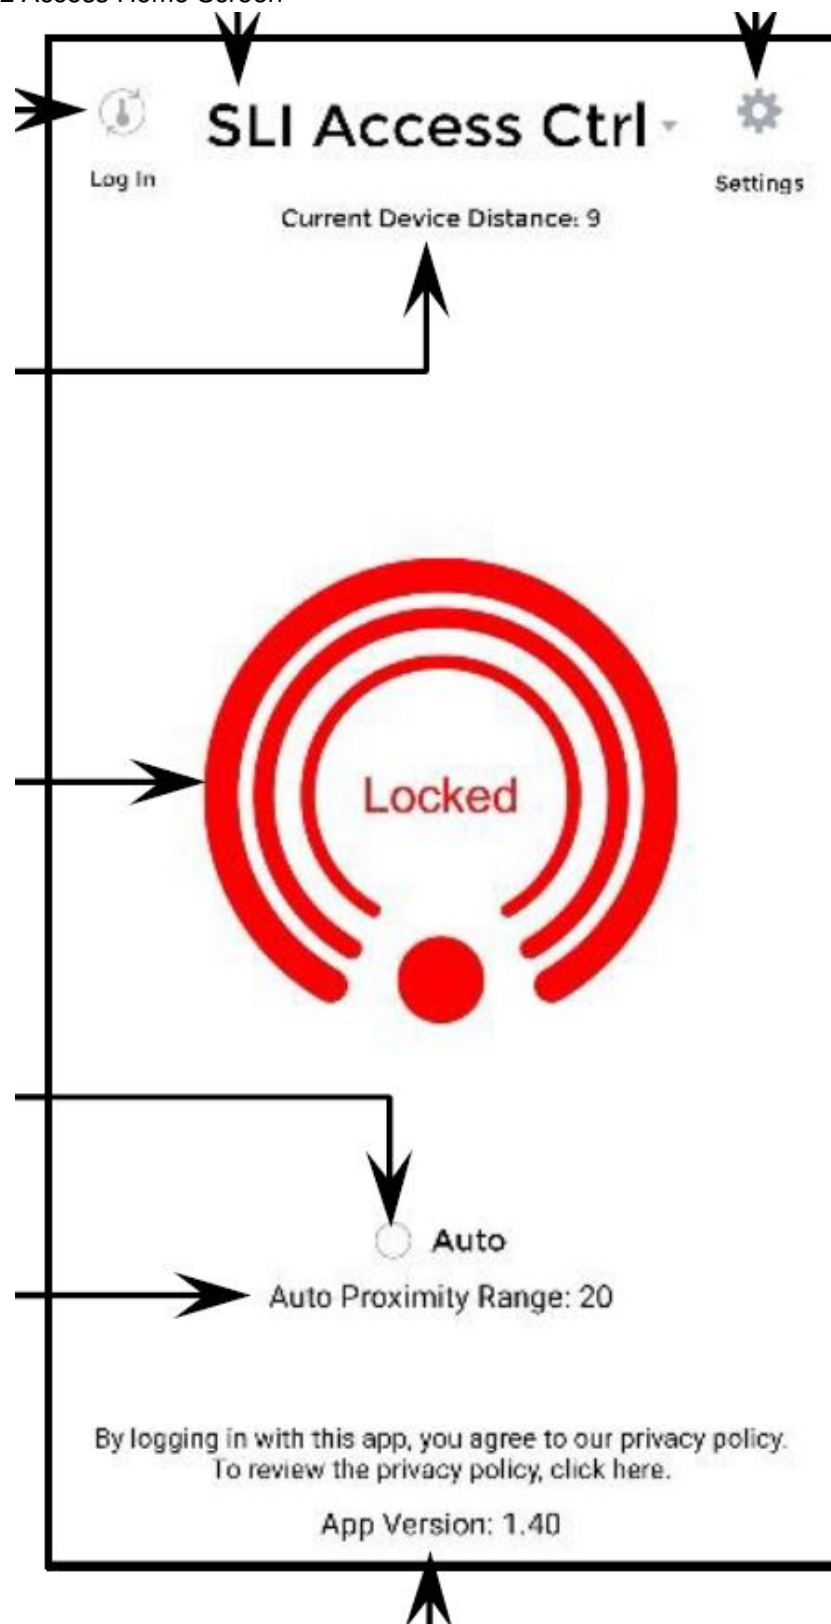

1. "Login" icon
2. "Device Name"
3. "Settings" icon
4. "Current Device Distance" with a number showing

5. "Locked" icon
6. "Auto" selector
7. "Auto Proximity Range" showing the current setting
8. App version number

NOTES:

- On opening the app, you may get a message asking you to enable Bluetooth. Bluetooth must be enabled to use the app and the device must be in range.
- You may see the word "Searching..." at the top of the screen (see below). Bluetooth has a limited range of about 60 feet (20m), but will be much less in practice. Move closer to the device, but if "Searching..." continues to show you may need to exit and reopen the app.



Log In to the Device



1. From a position near the device, click “Login” at the top left of the home screen.
2. Type “ADMIN” (case sensitive) in the ID section.
3. Type the factory default ADMIN passcode “12345” as the passcode and click “Confirm.”

NOTES:

- The administrator’s ID is ADMIN and cannot be changed.
- The factory default passcode should be changed from the “Settings” page immediately for better security (see pg. 4)
- Users will use the same app, and will log in in the same manner The home and login screens will look the same, however their functionality will be limited to unlocking the door, choosing “Auto,” and adjusting their “Auto Proximity Range” for the app’s “Auto” unlock feature.

Manage Device and Set Device Settings



Settings



Manage Users



Audit Trail



Back up Settings



Restore Settings

Device Name

Front Door

ADMIN Passcode

54321

ADMIN Card/Fob

0002444284

Door Sensor



Output Mode
(Global)

Timed Relock

Output Time
(Seconds)

5

Number of Wrong Codes (3~10 Times)	10
Wrong-Code Lockout Time (1~5 Minutes)	1
Tamper Alarm	<input type="checkbox"/>
Tamper Sensitivity	High Sensitivity
Tamper Alarm Time (Minutes)	1
Auto Proximity Range	20
Device Time	Dec 1, 2020 10:09 AM
Key Sounds	<input type="checkbox"/>
Help	
Legal Notices and Privacy Policy	
About	
Firmware Version: V2.22	

Four function buttons allow you to:


- Open the user page to add or manage users
- View and download the audit trail
- Back up and restore device settings (also convenient for replicating to another device).

Below the function buttons are device settings:

- Device name – give a descriptive name
- ADMIN passcode – change immediately
- ADMIN proximity card (except SK-B141-DQ)
- Door sensor – required for the door-propped-open / door-forced-open alarm)
- Output mode (global) – timed relock, remain unlocked, remain locked, or toggle
- Timed relock output time – 1~1,800 sec
- Number of wrong codes – Number that will trigger a temporary device lockout
- Wrong code lockout time – how long the device will remain locked out
- Tamper alarm – Vibration sensor
- Tamper vibration sensitivity – 3 levels

- Tamper alarm duration – 1~255 min
- Auto proximity range – for ADMIN app “Auto”
- Device time – automatically syncs with ADMIN phone date and time
- Key tone – keypad sounds can be disabled

Manage Users

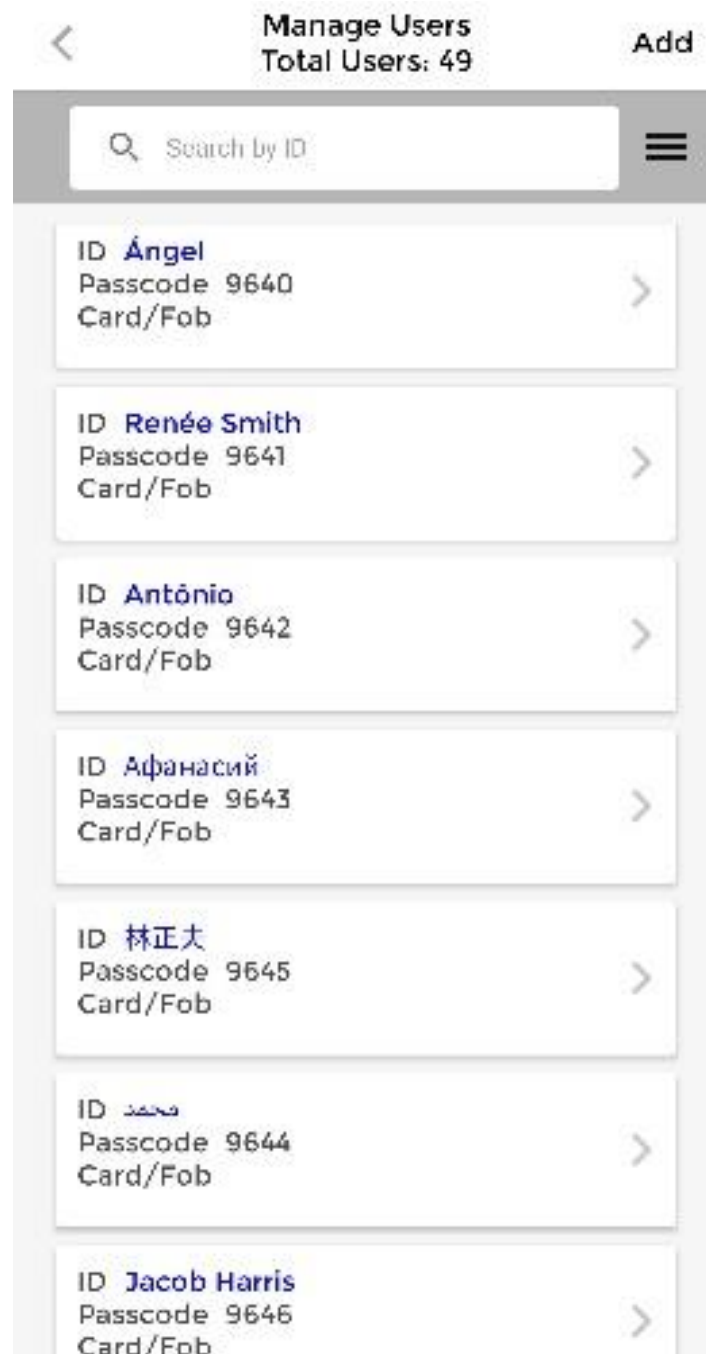

Add users by pressing the “Add” button top right. Current users will be listed in order of their addition

User Info

<

User Info

Delete

ID

Terry White

Passcode

369898

Card/Fob

Click the blank field below and either enter the card/fob number or scan the card on the keypad/reader

0296831480

Delete

App Access

☒

Card/Fob Access

☒

Keypad Access

☒

Access Type

Permanent

Output Mode

Global

Edit users, add card/fob (except SD-B141-DQ), set access, and override global output mode

Audit Trail

Audit Trail		
<div> <div></div> <div>Search by "ID/Event" or "By"</div> </div>		
ID/Event	Date/Time	By
Renee Smith	2020-12-01 10:20:32 AM	Keypad
陳得威	2020-12-01 10:20:07 AM	Keypad
John Davis	2020-12-01 10:19:50 AM	Keypad
Kate James	2020-12-01 10:19:37 AM	Error - permitted time exceeded
Larry	2020-12-01 10:19:15 AM	Error - keypad use restricted
Jane Smith	2020-12-01 10:18:26 AM	Card/Fob
Unregistered in	2020-11-27	Card/Fob

View last 1,000 events, save to phone, share, or email for archive

NOTICE: The SECO-LARM policy is one of continual development and improvement. For that reason, SECO-LARM reserves the right to change specifications without notice. SECO-LARM is also not responsible for misprints. All trademarks are the property of SECO-LARM U.S.A., Inc. or their respective owners. Copyright © 2022 SECO-LARM U.S.A., Inc. All rights reserved.

SECO-LARM ® U.S.A., Inc.
16842 Millikan Avenue, Irvine, CA 92606 **Website:** www.seco-larm.com **Phone:** (949) 261-2999 | (800) 662-0800 **Email:** sales@seco-larm.com

Documents / Resources



ENFORCER SKPR-Bxxx-xQ Bluetooth Access Controllers [pdf] User Guide SKPR-Bxxx-xQ Bluetooth Access Controllers, SKPR-Bxxx-xQ, Bluetooth Access Controllers

References

-  [La Armería de Madrid - fabricantes de armas y rifles](#)
-  - [SECO-LARM USA Inc](#)
-  [SECO-LARM - ENFORCER Home Page - Burglar Security & Accessories, Vehicle Alarms & Accessories, Security Systems for Residential, Commercial and Vehicle, CCTV](#)
-  [SL Access on the App Store](#)

Manuals+.