




## ENONEO CH-911 Key Lock Box Instructions

[Home](#) » [ENONEO](#) » ENONEO CH-911 Key Lock Box Instructions 

ENONEO CH-911 Key Lock Box



## Contents

- [1 Features](#)
- [2 How To Set Your New Password](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

## Features

- Double Protection



- Anti Hammering



- **Anti-Freeze**



- **Waterproof**



## How To Set Your New Password

### Step 1:

Enter the initial password 0-0-0-0, move the switch downward, and then pull the switch outward to open the key box.



### Step 2:

Move the switch up again and push the metal rod from position A to position B.




### Step 3:

Scroll the numbers to set a new password, please ensure that each number is aligned with the password line!



### Step 4:

After confirming the new password, push the metal rod from position B to position A.

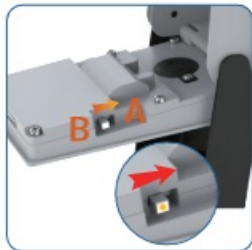

#### Step 5:

Enter your new password. If the switch can be toggled, the password setting is complete. Otherwise, please try again according to the above steps.



---

## Documents / Resources



[ENONEO CH-911 Key Lock Box](#) [pdf] Instructions  
CH-911 Key Lock Box, CH-911, Key Lock Box, Lock Box

## References

- [User Manual](#)

### Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.