

ENRG
PS4 Dual
Charger For
Controller



ENRG PS4 Dual Charger For Controller User Guide

[Home](#) » [ENRG](#) » ENRG PS4 Dual Charger For Controller User Guide 

Contents

- [1 ENRG PS4 Dual Charger For Controller](#)
- [2 FAQs](#)
- [3 Product Overview](#)
- [4 PRODUCT INFORMATION](#)
- [5 Product Specifications](#)
- [6 Use Instructions](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)



ENRG PS4 Dual Charger For Controller



FAQs

- **Q: How do I know when my PS4 controller is fully charged?**
 - A: When the charging indicator icon of the corresponding PS4 controller turns from red to blue and remains on in green, it indicates a full charge.
- **Q: Can I charge other devices besides PS4 controllers with this charger?**
 - A: This charger is specifically designed for PS4 controllers and may not be compatible with other devices.
- **Q: What is the input voltage required for this charger?**
 - A: The charger uses standard DC 5V input voltage and is compatible with various USB interfaces.

Product Overview



PRODUCT INFORMATION

This product is designed to charge two PS4 controllers at the same time. After the product is connected to the power supply, you can learn about the charging state of the PS4 controller in real-time through the product trademark and the charging state indicator lamp displayed on the translucent lens in the front part of the product. The charger uses standard DC 5V input voltage and is compatible with various USB interfaces special power supply is needed. Featuring a novel and beautiful appearance, convenient use, and good practicality, this product is a game accessory worth buying for PS4 users.

Product Specifications

- Voltage: USB 5V (connected to the console via accessory USB cable);
- Current: Maximum charging current is up to 800mA in the case of charging a single original PS4 controller; the maximum charging current is 400mA for either of the two original PS Move controllers being charged at the same time.
- Charging time: The original PS4 controller can be fully charged in 2.5 to 3 hours
- Dimensions (Length*Width*Height) : 185x59x55mm
- Material: ABS
- USB Cable Length: 100cm

Use Instructions


- Insert the MicroUSB plug of the provided standard charging cable into the MicroUSB socket of the charger and then insert the USB plug of the cable into the PS4 console (or into the USB socket of a computer or other

standard DC 5V power adapters). Now the trademark on the front lens will become on in blue and the two PS4 icons will become on in blue to wait for PS4 controllers to be inserted for charging.

- Mount PS4 controller upright onto the charger and ensure that the EXT interface of the PS4 controller is correctly inserted into the charging terminal of the product. When the controller is normally charged on the charger, the corresponding PS4 controller icon on the front lens will turn from blue to red.
- When the PS4 controller is fully charged, the charging indicator icon of the corresponding PS4 controller will turn from red to blue and remain on in green to show that the PS4 controller has been fully charged.

Points for attention during the charging process:

1. When the PS4 controller is charged without connection to the PS4 console, the indicator lamp on the controller blinks in the orange color and is off when fully charged; when a fully charged controller is connected to the charger, only the yellow indicator lamp blinks and then turns off.
2. When the PS4 controller is charged with connection to the PS4 console, the indicator lamp is blue all the way.

To check if it is being charged, press and hold the PS button and a controller battery symbol  will appear at the right bottom of the screen; check the three electricity bars to see if they are flowing; if not, it indicates that the controller is fully charged.

3. when being charged, the PS4 controller receives the electric energy required for vibration through the rechargeable battery, so the indicator lamp may change between red and blue. When the PS4 controller is fully charged, the indicator lamp on the controller will be off and there will be no light in the charging socket, showing that the controller has been fully charged.

The built-in battery of the PS4 controller with a protective function begins to charge only when the power is below 70%. If the controller is interrupted in the charging process, then put it for charging again, and if its power is over 70% but below 100%, the charging will stop. In this power status, the controller's use time can be a bit shorter than if it was otherwise fully charged.

Caution

- Please keep the 5-year-old or younger children away from this product.
- Please use the standard USB cable for this product.
- Please disconnect this product from the power cord before cleaning the product
- Please use a dry cloth to clean this product, and avoid contact with liquids, otherwise, the product may be damaged by short circuit.
- If this product fails to function when soaked, flooded, or damaged, please send it to a professional repair shop for repair. Please do not dismantle by yourself.
- If this product is to be idle for a long time, please remove the peripherals at the ports connecting to it and the input plugs, and then put them in a cool place.

Documents / Resources



PS4®
PS4® Dual Charger
PS4® Dual Charger For Controller

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

PS4®

[ENRG PS4 Dual Charger For Controller](#) [pdf] User Guide

PS4 Dual Charger For Controller, PS4, Dual Charger For Controller, For Controller

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.