



ENSTO LCK4-16-06A Fuse Base and Connector Kit Instruction Manual


[Home](#) » [ENSTO](#) » ENSTO LCK4-16-06A Fuse Base and Connector Kit Instruction Manual 

ENSTO

INSTALLATION INSTRUCTION PEM1854

2021-12

REVISION J

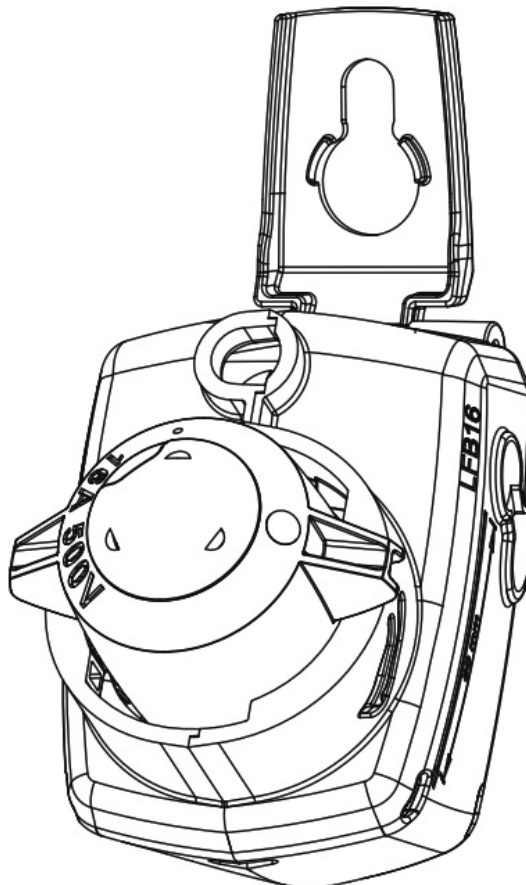

LFBxxR <1 kV
LCK4xxA LCK5xxA

Contents

1 LEGAL NOTICE

2 Documents / Resources



2.1 References

3 Related Posts

LEGAL NOTICE

- The product must be installed only by a competent person with sufficient training in installation practices and with sufficient knowledge of good safety and installation practices in respect of electrical equipment. If local legislation contains provisions in respect of such training or sufficient knowledge in respect of the installation of electrical equipment such provisions shall be fulfilled by the said person.
- Ensto accepts no liability concerning claims resulting from misuse, incorrect installation or ignored national safety regulations or other national provisions.
- **WARNING:** Failure to follow the installation instructions may result in damage to the product and serious or fatal injury.

PEM1854 2021-12

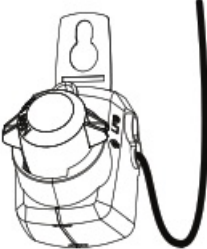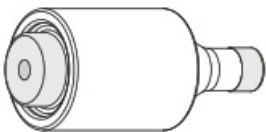
											
LFB			D II					KE10.3 A I 10-35 m m ² Cu 1.5 -25 mm ²	KE10.1 A I 10-35 m m ² Cu 1.5 -25 mm ²	KE10.504 AI 10-50 m m ² Cu 2.5- 35 mm ²	KE10.506 AI 10-50 m m ² Cu 2.5- 35 mm ²
	4 m m ²	10 m m ²	2 A	4 A	6 A	10 A	max A				
LFB16-R	x						16				
LFB16.1-R		x					16				
LFB16-06A-R	x				x		16				
LFB16-10A-R	x					x	16				
LFB06.1-06A-R		x			x		6				
LFB10.1-10A-R		x				x	10				
LFB16.1-06A-R		x			x		16				

LFB16.1-10A-R		x				x	16				
LCK4-06-02A	x		x				6	1	3		
LCK4-06-04A	x			x			6	1	3		
LCK4-16-06A	x				x		16	1	3		
LCK4-16-10A	x					x	16	1	3		
LCK4-06.1-06A		x			x		6	1	3		
LCK4-10.1-10A		x				x	10	1	3		
LCK4-16.1-06A		x			x		16	1	3		
LCK4-16.1-10A		x				x	16	1	3		
LCK4.50-10-10A	x					x	16			3	1
LCK5-16-06A	x				x		16	1	4		
LCK5-16-10A	x					x	16	1	4		
LCK5-06.1-06A		x			x		6	1	4		
LCK5-10.1-10A		x				x	10	1	4		
LCK5-16.1-06A		x			x		16	1	4		
LCK5-16.1-10A		x				x	16	1	4		


1.




2.

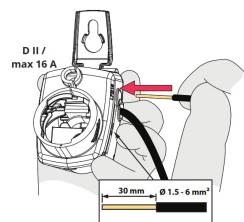


9.

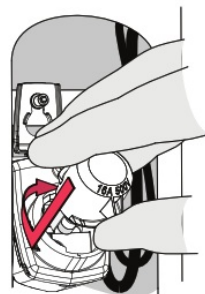


10.

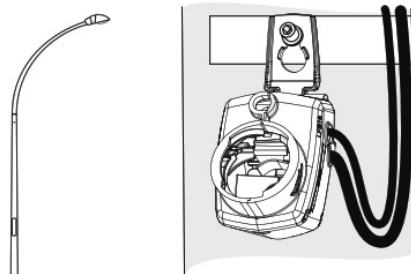


3.

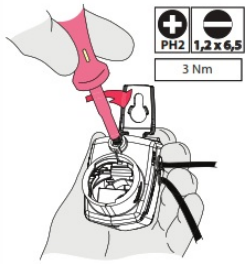



4.

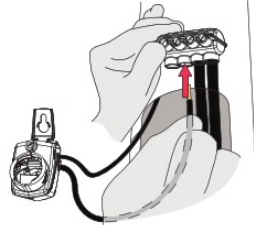


5.

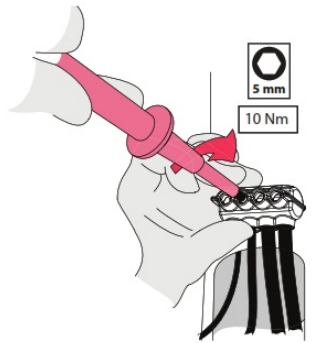

11.

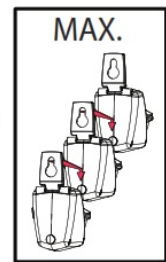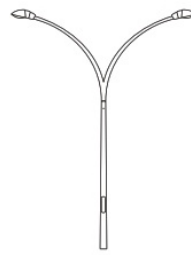

12.

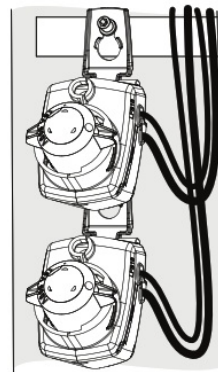

ENSTO FINLAND OY ENSIO MIETTISEN KATU 2, P.O.BOX 77 06101 PORVOO, FINLAND TEL. +358 204 76 21 FAX +358 204 762 770 ENSTO@ENSTO.COM WWW.ENSTO.COM	ENSTO POL SP. Z O.O UL. STAROGARDZKA 17 A 83-010 STRASZYN, POLAND TEL. +48 58 692 40 00 FAX +48 58 692 40 20
ENSTO SWEDEN AB VÄSTBERGA ALLÉ 5 126 30 HÄGERSTEN, SWEDEN TEL. +46 8 556 309 00 FAX +46 8 556 309 38	AS ENSTO LATVIJA BRIVIBAS GATVE 224/5 LV-1039 RIGA, LATVIA TEL. +371 7 228 166 FAX +371 7 204 342
ENSTO ELEKTER AS PALDISKI MNT 35/4A, 76606 KEILA, ESTONIA TEL. +372 6512 100 FAX +372 6512 101	ООО «ЭНСТО РУС» УЛ.МАРКСИСТСКАЯ, 3/3 109147 МОСКВА, РОССИЯ ТЕЛ +7495 661 1039 ФАКС +7495 661 1038 ENSTO.RUSSIA@ENSTO.COM

ENSTO LIETUVA, UAB
A. JUOZAPAVICIAUS 6/2
LT-09310 VILNIUS, LITHUANIA
TEL. +370 5 268 5696
FAX +370 5 268 5697
PEM1854 / Issue 2021-12-09

Documents / Resources

 ENSTO LCK4-16-06A Fuse Base and Connector Kit	ENSTO LCK4-16-06A Fuse Base and Connector Kit [pdf] Instruction Manual LFBxxR, LCK4xxA, LCK5xxA, LCK4-16-06A, Fuse Base and Connector Kit, LCK4-16-06A Fuse Base and Connector Kit
 ENSTO LCK4-16-06A Fuse Base and Connector Kit	ENSTO LCK4-16-06A Fuse Base and Connector Kit [pdf] Instruction Manual LFBxxR, LCK4xxA, LCK5xxA, LCK4-16-06A, Fuse Base and Connector Kit, LCK4-16-06A Fuse Base and Connector Kit

References

-  [Ensto – Leading Expert for Distribution System Operators](#)