

ENSTO SDI46.912 Current Limiting Device Instruction Manual

[Home](#) » [ENSTO](#) » ENSTO SDI46.912 Current Limiting Device Instruction Manual 


Contents

- [1 SDI46.912 Current Limiting Device](#)
 - [1.1 ENSTO](#)
 - [1.2 LEGAL NOTICE](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

SDI46.912 Current Limiting Device

ENSTO


**PEM1884
2022-01
Revision F
SDI46.912
SDI46.924**

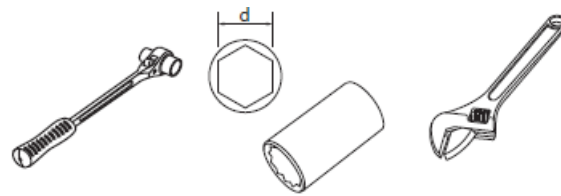




CT164 d = 17 mm

	GTIN	(Un) kV	L mm
SDI46.912	6438100323219	10	45±5
SDI46.924	6438100323226	20	75±5

SDI46.912 + (SDP5.2 + SO256S)

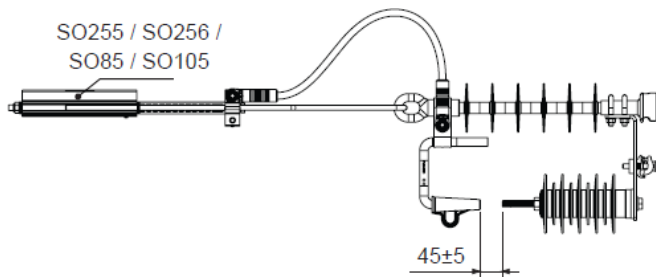


SDI46.924 + (SDP5.2 + SO181.6)

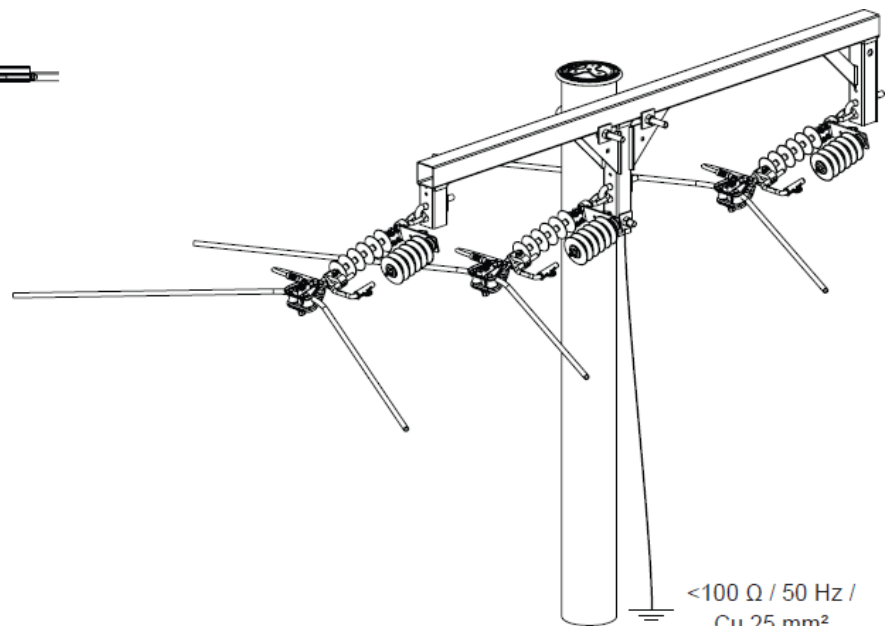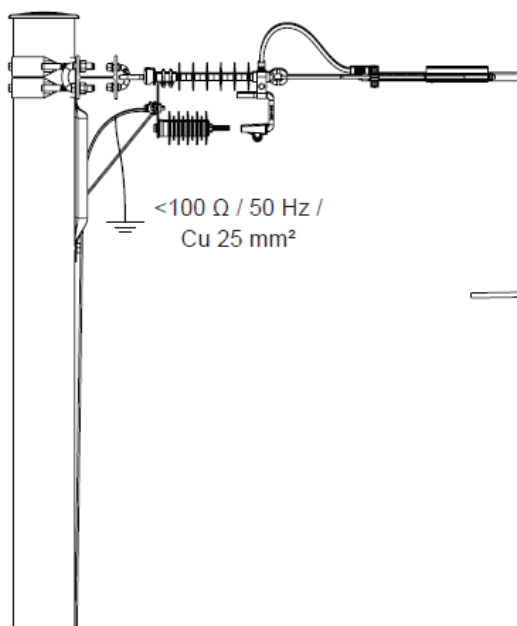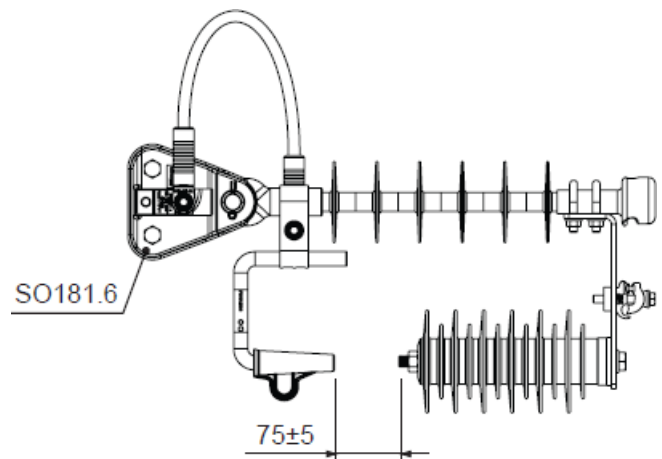

- The product must be installed only by a competent person with sufficient training in installation practices and with sufficient knowledge of good safety and installation practices in respect of electrical equipment. If local legislation contains provisions in respect of such training or sufficient knowledge in respect of installation of electrical equipment such provisions shall be fulfilled by the said person.
- Ensto accepts no liability concerning claims resulting from misuse, incorrect installation or ignored national safety regulations or other national provisions.
- WARNING: Failure to follow the installation instructions may result in damage to the product and serious or fatal injury.

ENSTO FINLAND OY ENSIO MIETTISEN KATU 2, P.O.BOX 77 06101 PORVOO, FINLAND TEL. +358 204 76 21
EMAIL: ENSTO@ENSTO.COM WWW.ENSTO.COM

Documents / Resources

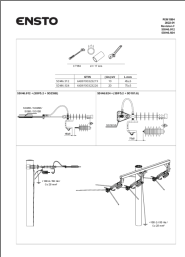	ENSTO SDI46.912 Current Limiting Device [pdf] Instruction Manual SDI46.912, Current Limiting Device, Limiting Device, Current Device, Device, SDI46.912
---	--

References

-  [Ensto – Leading Expert for Distribution System Operators](#)