



ENSTO STKOB4X95 Heat Shrink User Guide

[Home](#) » [ENSTO](#) » ENSTO STKOB4X95 Heat Shrink User Guide 

Contents



- [1 ENSTO STKOB4X95 Heat Shrink](#)
- [2 PARTS](#)
- [3 INSTALLATION](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

ENSTO

ENSTO STKOB4X95 Heat Shrink




PARTS

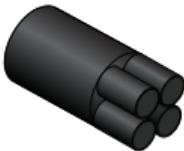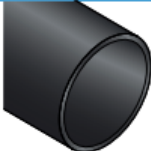
	SBO4.1	1		PEE64/150	1
	CPEET19-5 6000 mm	1		PA23	1
	SEC1.1	1		PEM-STKOBN4x95	1
	CPEET19-5-L1 CPEET19-5-L2 CPEET19-5-L3 CPEET19-5-PEN	1			
	PEE225W	1			

INSTALLATION


1

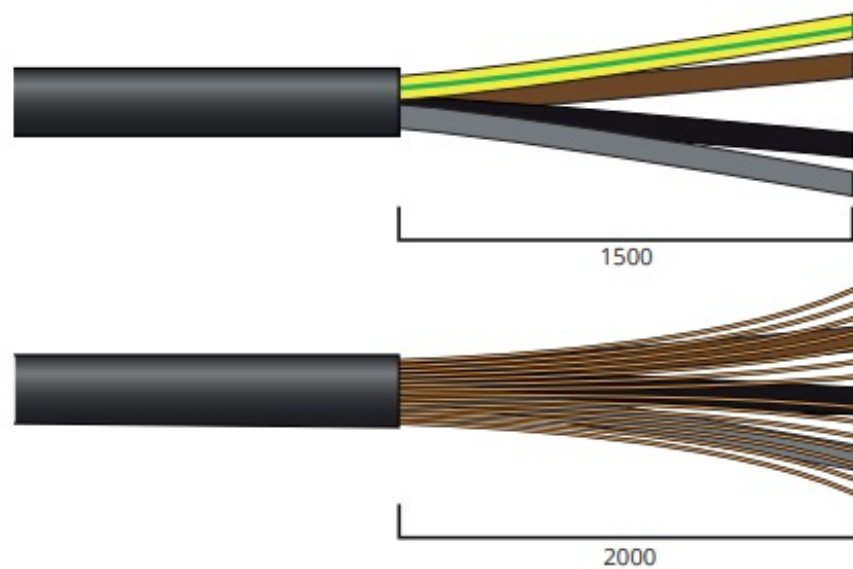


2

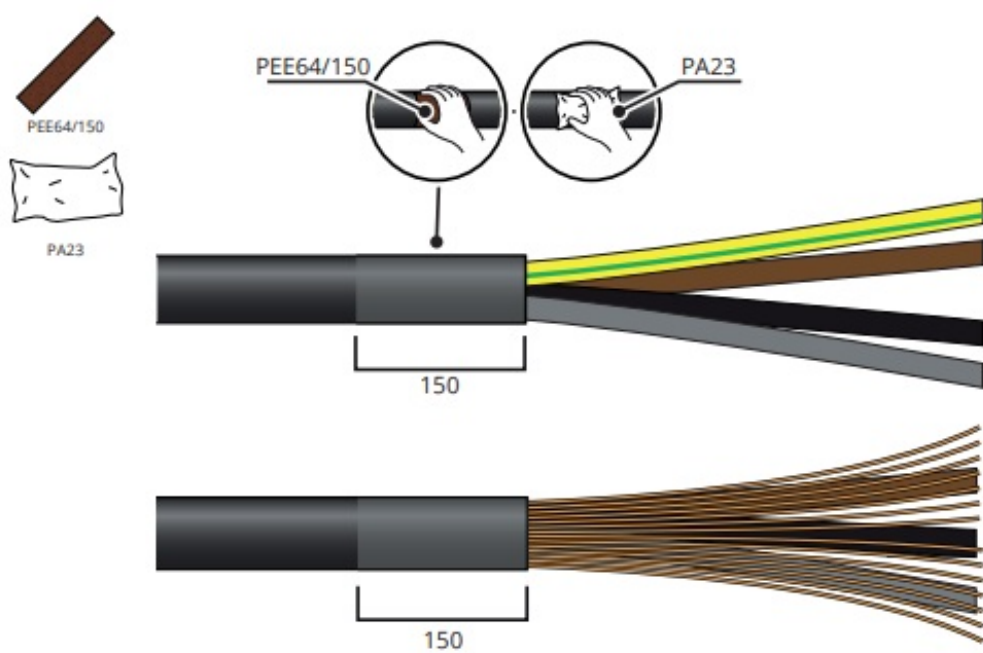


3

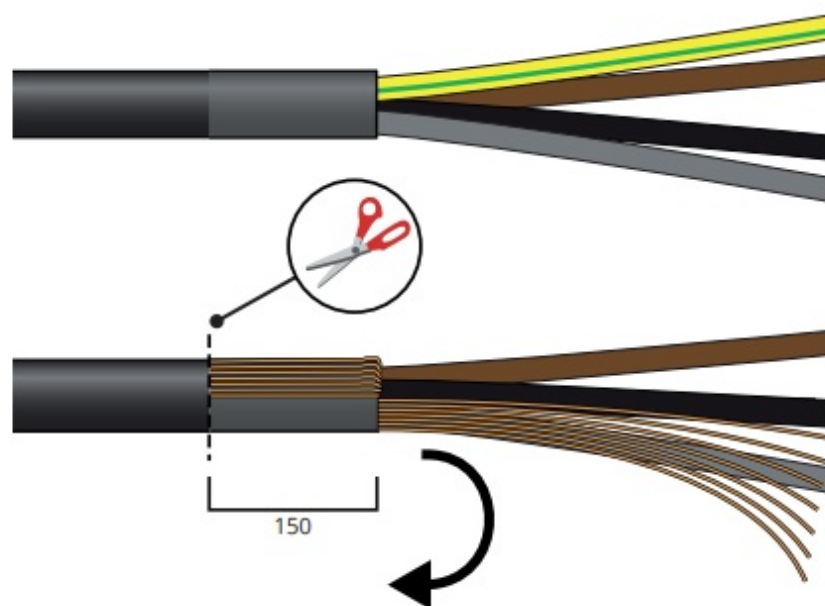


4


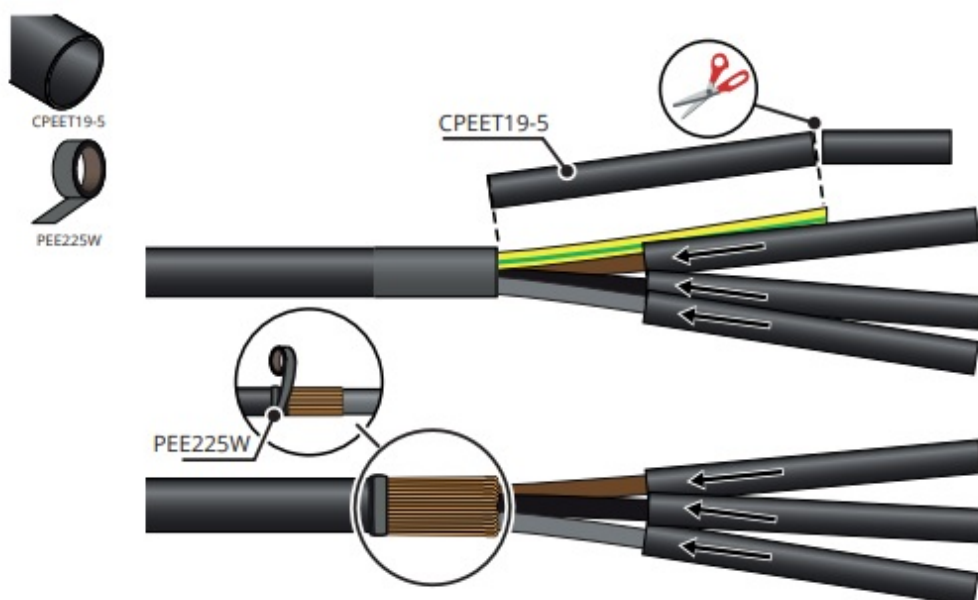


5

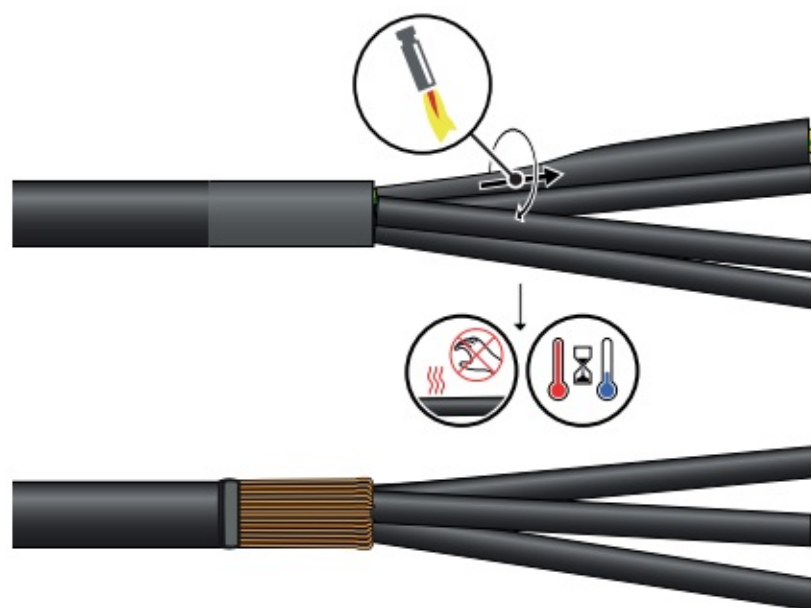


6

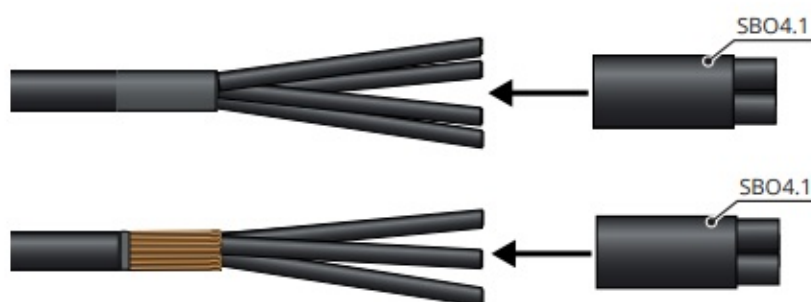

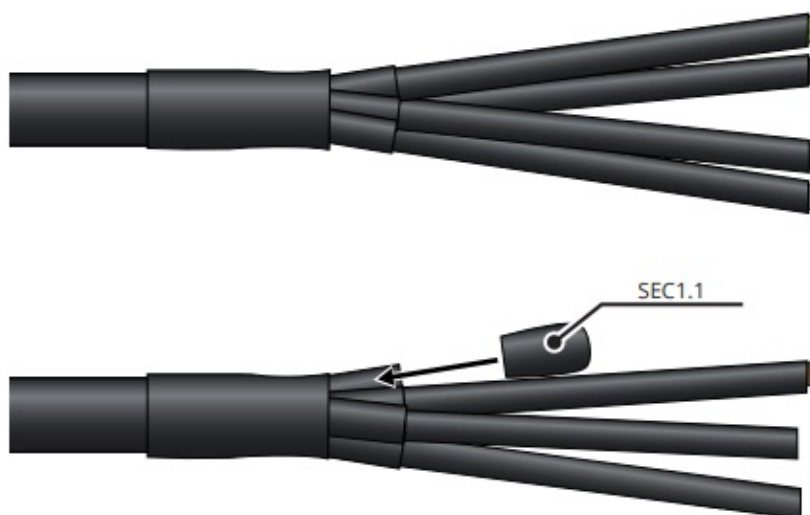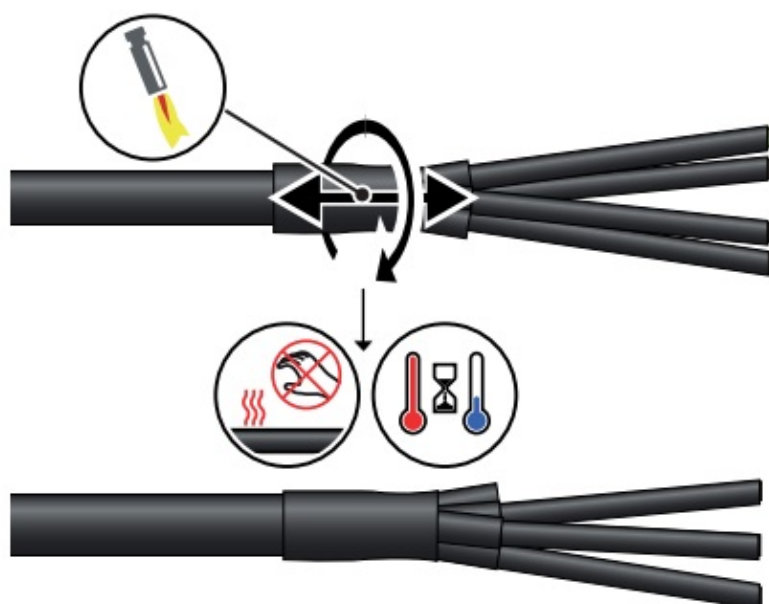



10

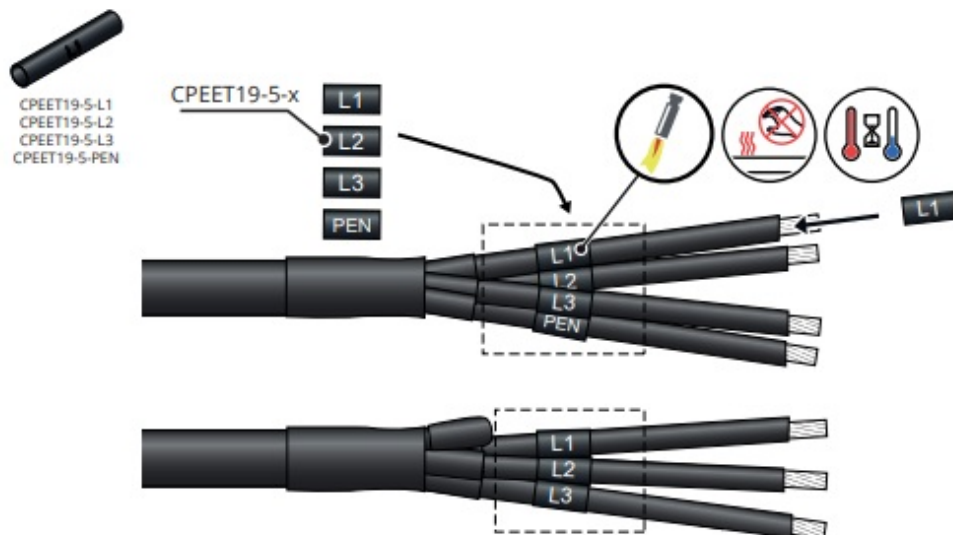

Documents / Resources



[ENSTO STKOB4X95 Heat Shrink \[pdf\] User Guide](#)
 STKOB4X95 Heat Shrink, STKOB4X95, Heat Shrink, Shrink