




# ENTRUST Sigma DS4 Instant Financial Issuance System User Guide

[Home](#) » [ENTRUST](#) » ENTRUST Sigma DS4 Instant Financial Issuance System User Guide 



# ENTRUST



User Reference Guide  
Sigma DS4 and DS4-ES1  
Instant Financial Issuance System

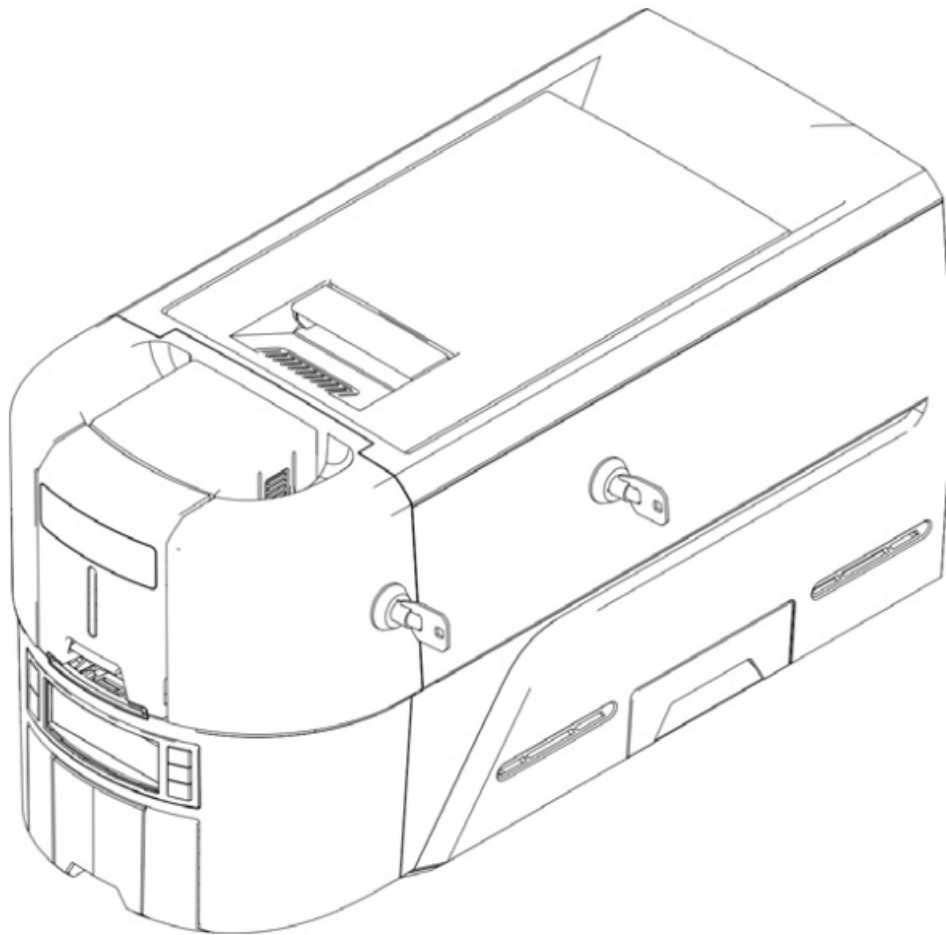

May 2022  
528165-001, Rev B

## Contents

- 1 The Sigma DS Direct to Card Printer
- 2 Sigma DS Printer with Optional Multi-Hopper
- 3 Load Cards in a Single-Hopper
- 4 Load Card in a Manual Feed Input Hopper
- 5 Load Cards in a Multi-Hopper
- 6 Use the Multi-Hopper Exception Slide
- 7 Load the Print Ribbon Cartridge
- 8 Install the Prefilled Ribbon Cassette
- 9 Empty the Reject Tray
- 10 Clear a Card Jam
- 11 Repair a Broken Print Ribbon
- 12 Check the Printer Power Connections
- 13 Check the Printer Data Connection
- 14 Common LCD Messages
- 15 Clean the Printer
- 16 Run the Cleaning Card
- 17 Clean the Printhead
- 18 Set a Static IP Address
- 19 Documents / Resources
  - 19.1 References
- 20 Related Posts

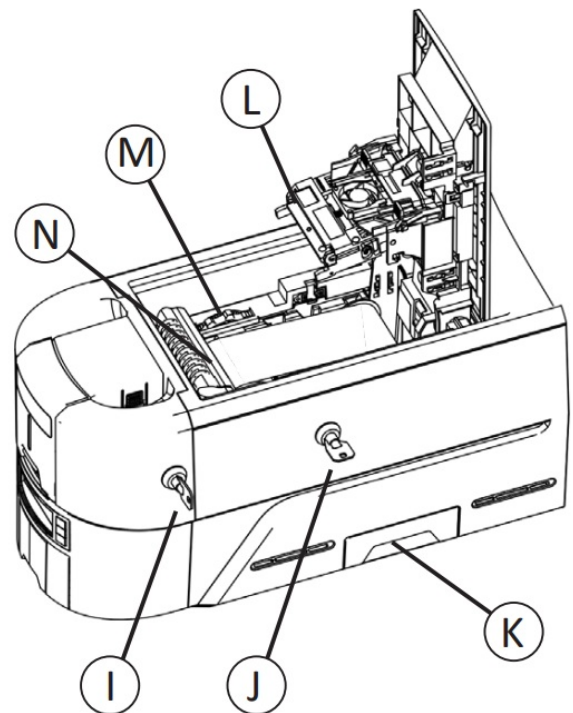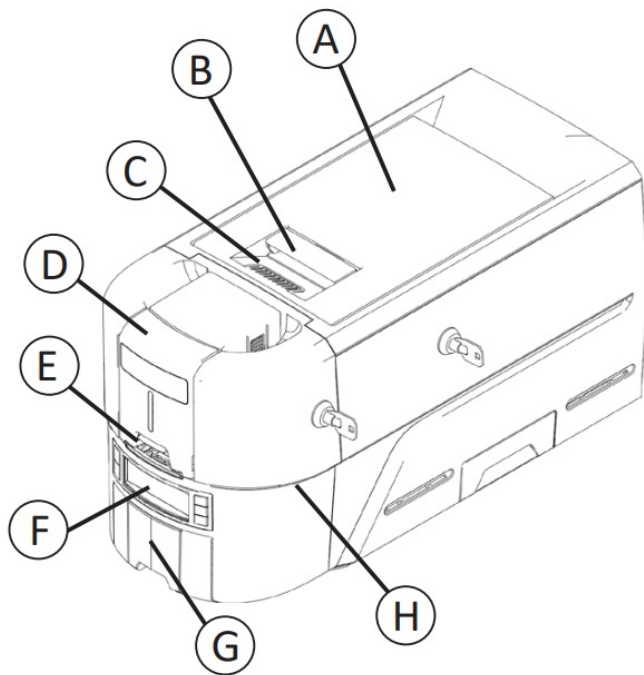


- A = Printer Cover
- B = Cover Latch Handle
- C = Cover Ridges
- D = Input Hopper
- E = Exception Slot
- F = Front Panel
- G = Output Hopper
- H = LED Light Bar
- I = Input Hopper Lock
- J = Printer Lock
- K = Reject Tray
- L = Printhead
- M = Manual Advance Knob
- N = Ribbon Cartridge or Cassette




Printer Locks are present only on some Sigma DS3 printers.  
Hopperless printers require multi-hopper installation.

### Front Panel

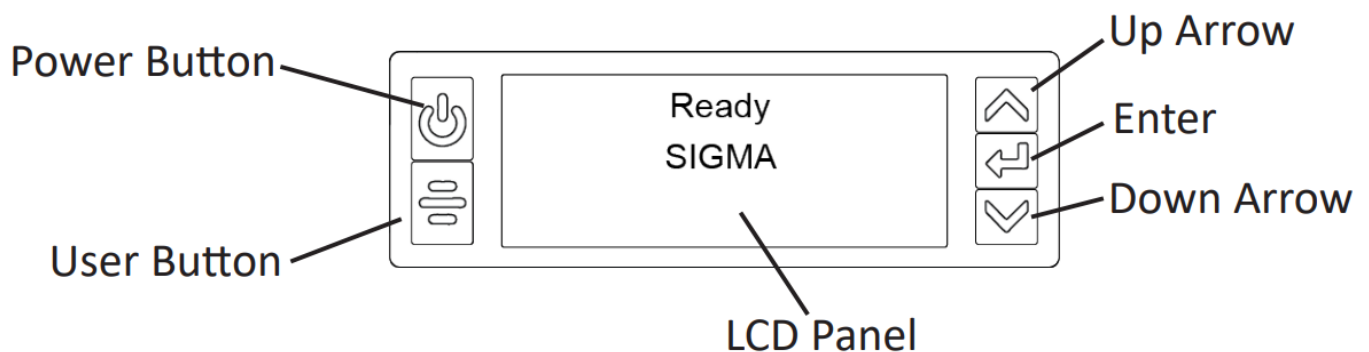


### Sigma DS Printer with Optional Multi-Hopper

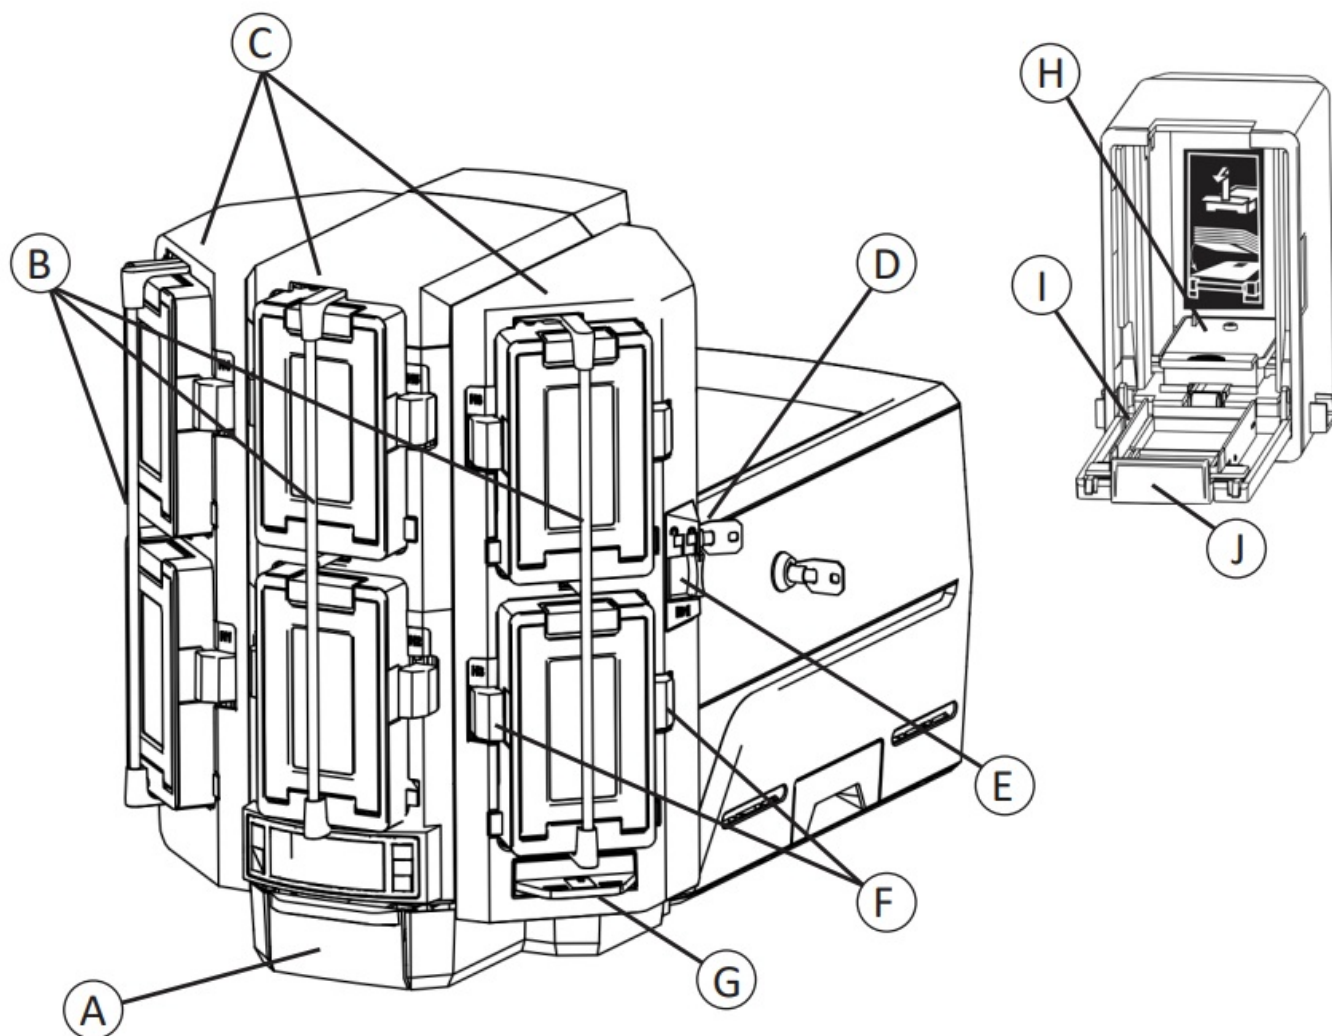


A = Output Hopper	F = Cartridge Release Buttons
B = Hopper Lock Bars	G = Exception Slide
C = Input Hoppers 1–6	H = Card Weight
D = Multi-Hopper Lock	I = Cartridge Door
E = Lock Bar Release Button (B1)	J = Cartridge Door Release Button

### Load Cards in a Single-Hopper

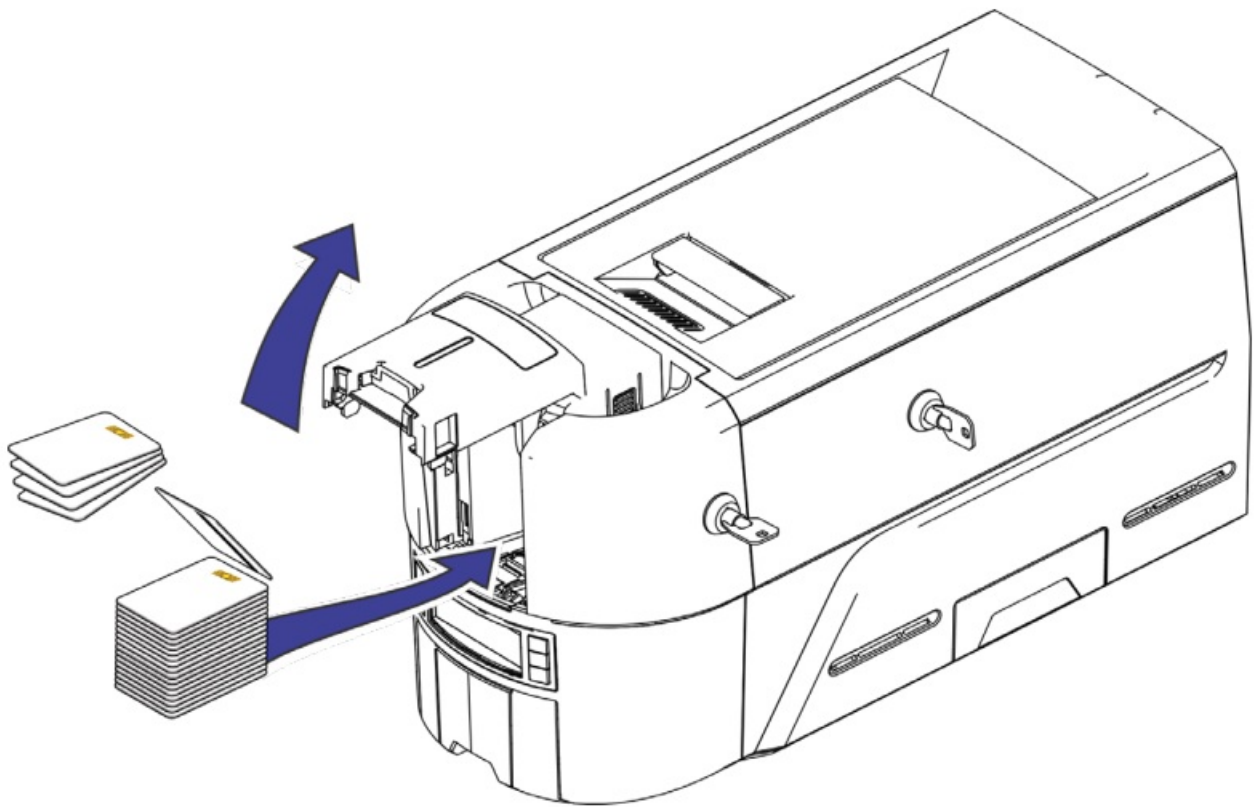


### Use the Exception Slot

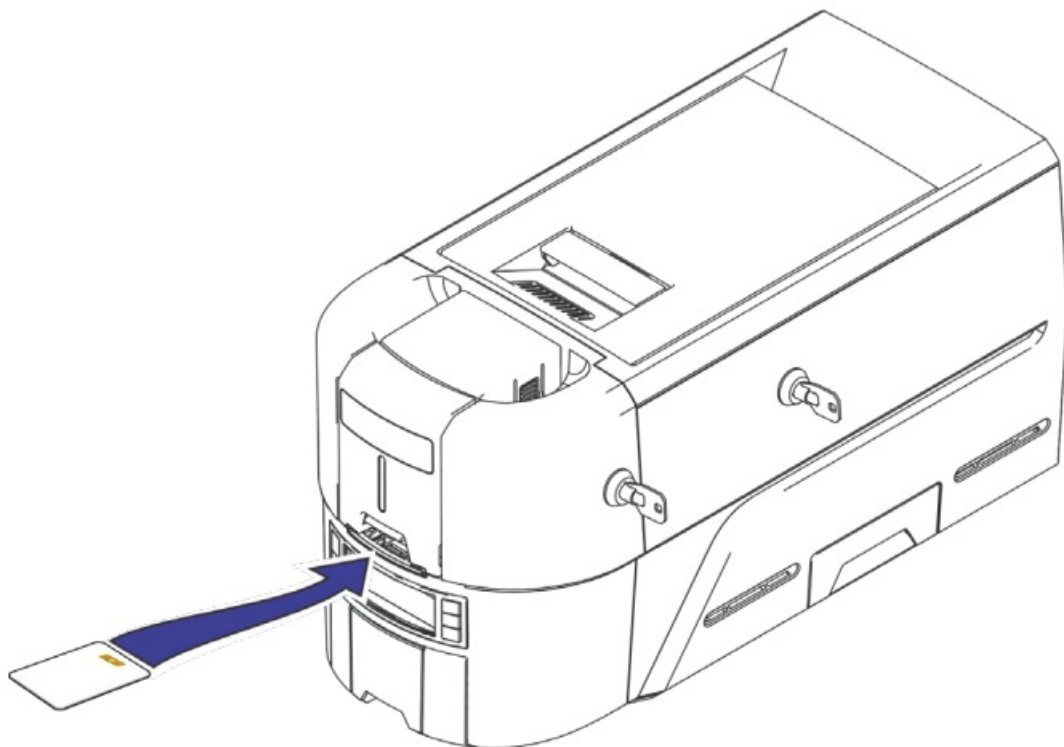


### Load Card in a Manual Feed Input Hopper

1. Hold the card by the edges and slide the card into the manual feed input hopper slot.
2. Push the card all the way into the hopper slot until it is picked.

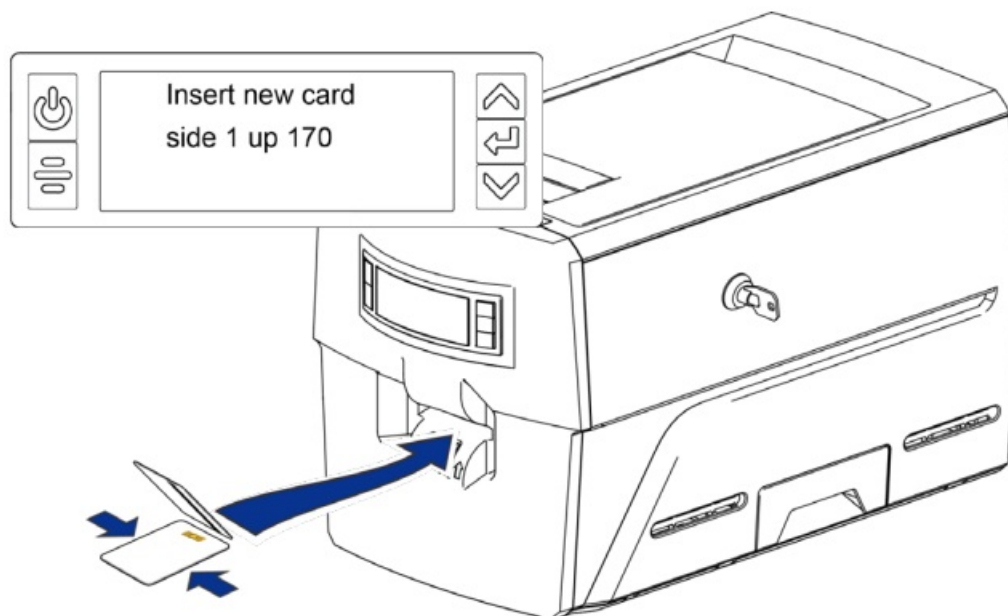


## Load Cards in a Multi-Hopper

1. Unlock the multi-hopper lock
2. Slide the lock bar release button (B1) to the left.
3. Rotate a lock bar to the left.

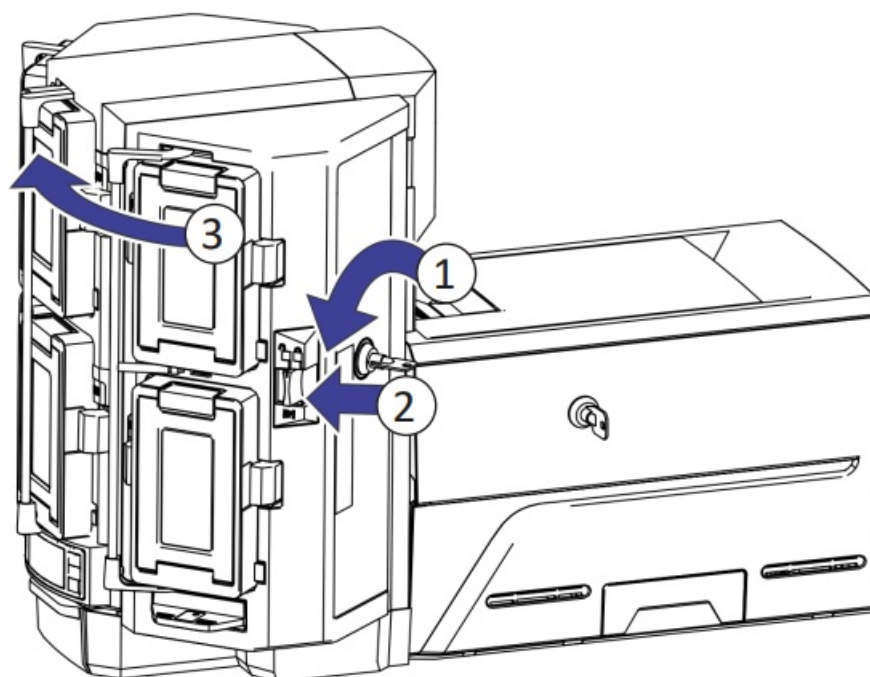

4. Open the cartridge door
5. Lift the card weight and pull it forward until it locks in position.
6. Load cards into the cartridge.




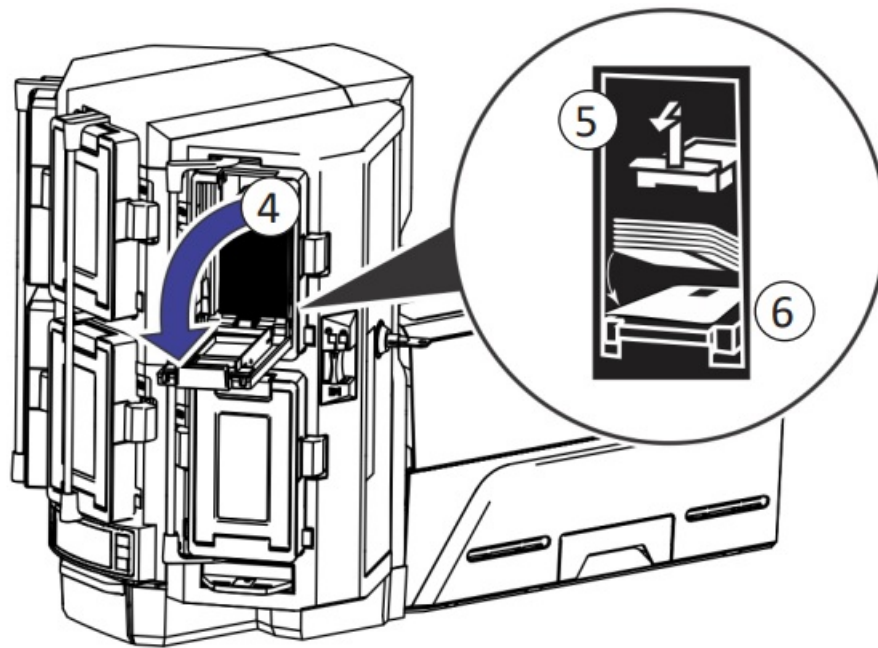

7. Close the cartridge door.
8. Repeat for each cartridge.
9. Return all locks to the locked position.

### Use the Multi-Hopper Exception Slide


1. Pull out the multi-hopper exception slide.
2. Insert the card.

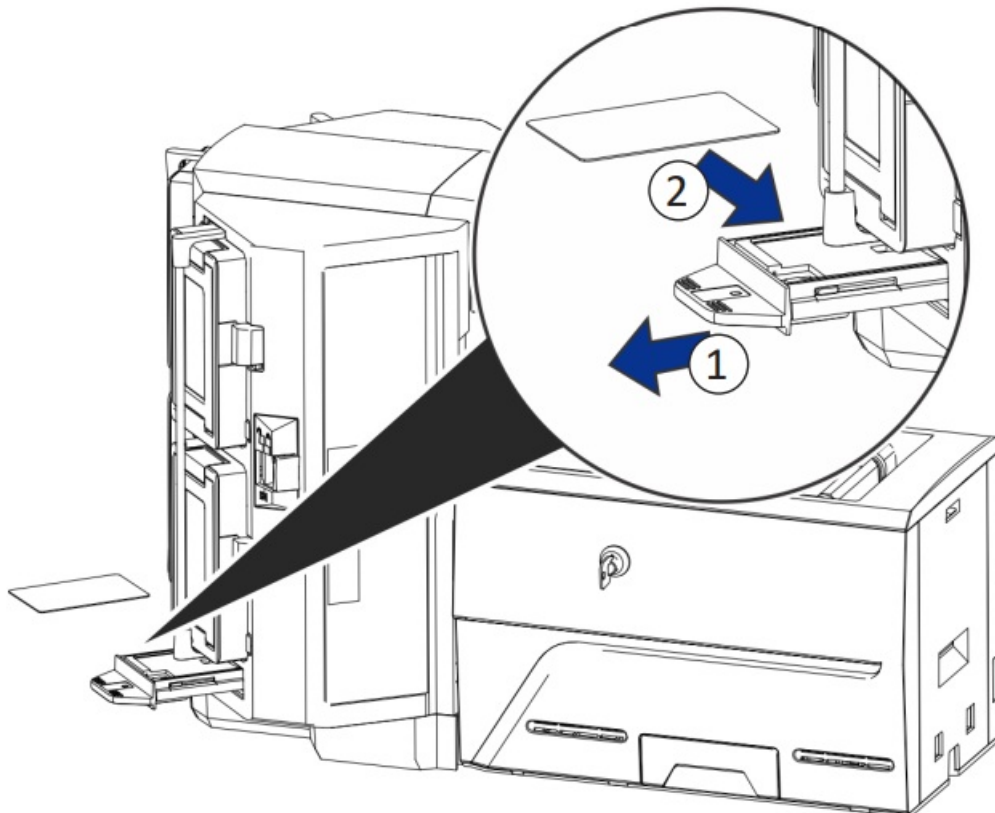


3. Push in the exception slide.

### Load the Print Ribbon Cartridge

1. Open the printer cover and remove the print ribbon cartridge.
2. Remove the used ribbon spools and cleaning roller and discard them.

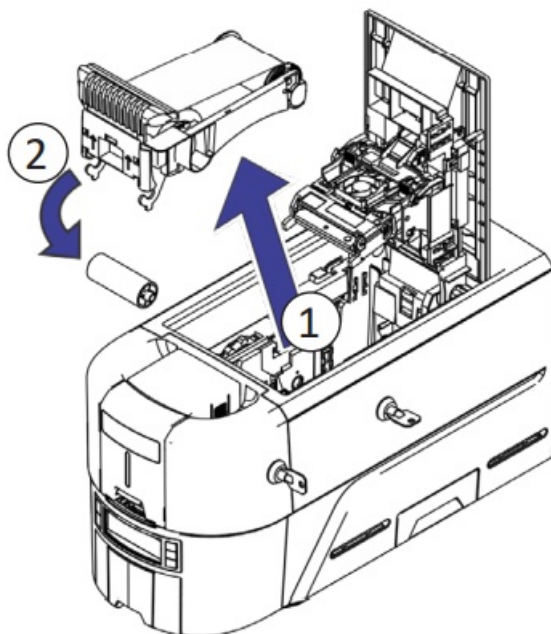

3. Load the print ribbon.
4. Turn the take-up spool counterclockwise.
5. Load the cleaning roller.
6. Remove the protective wrapper from the cleaning roller.

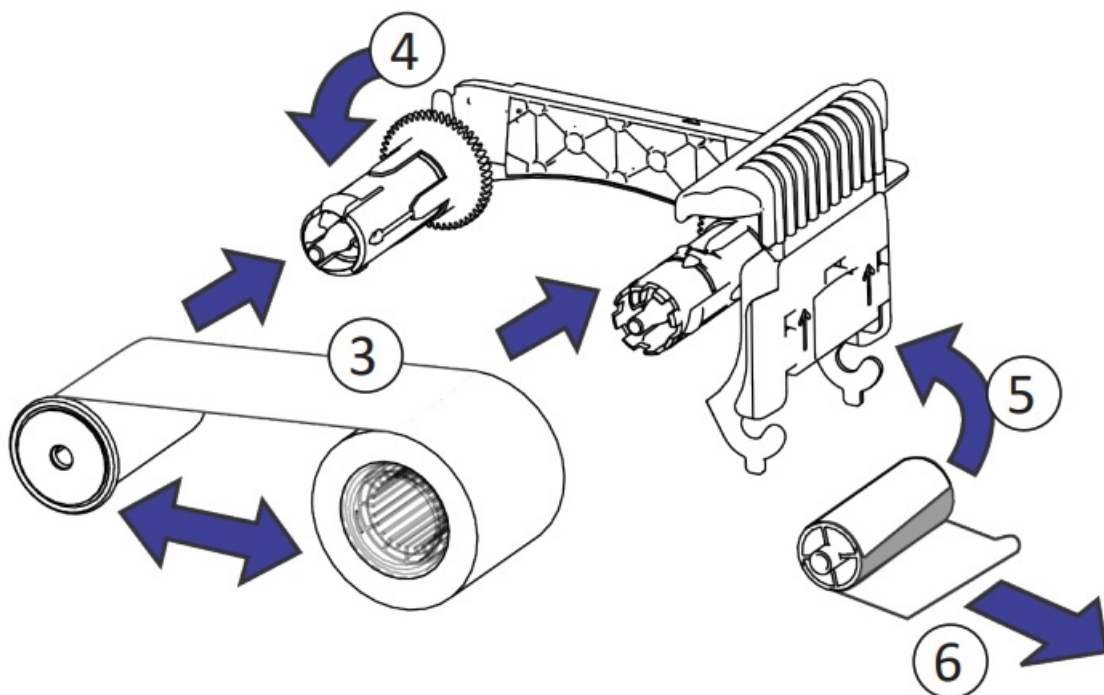


7. Replace the ribbon cartridge and close the printer.

### **Install the Prefilled Ribbon Cassette**


1. Open the printer cover and remove the used print ribbon cassette. Discard the cassette.



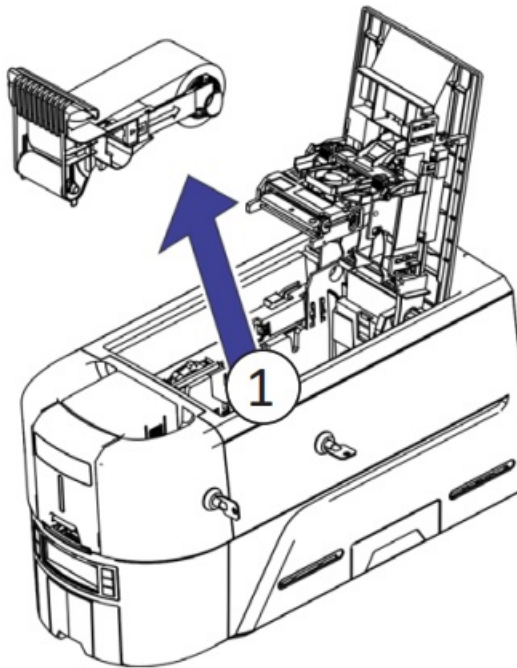

2. Remove the print ribbon cassette from its package.


The cassette is shipped in a closed position.

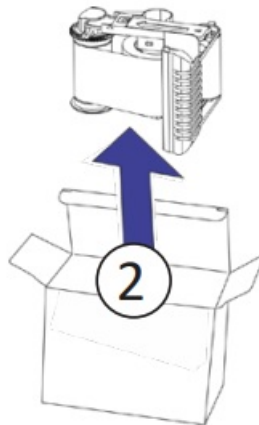

3. Extend the cassette to its fully open position.


Pull out the front of the cassette until it clicks.

4. Remove the protective wrapper from the cleaning roller.

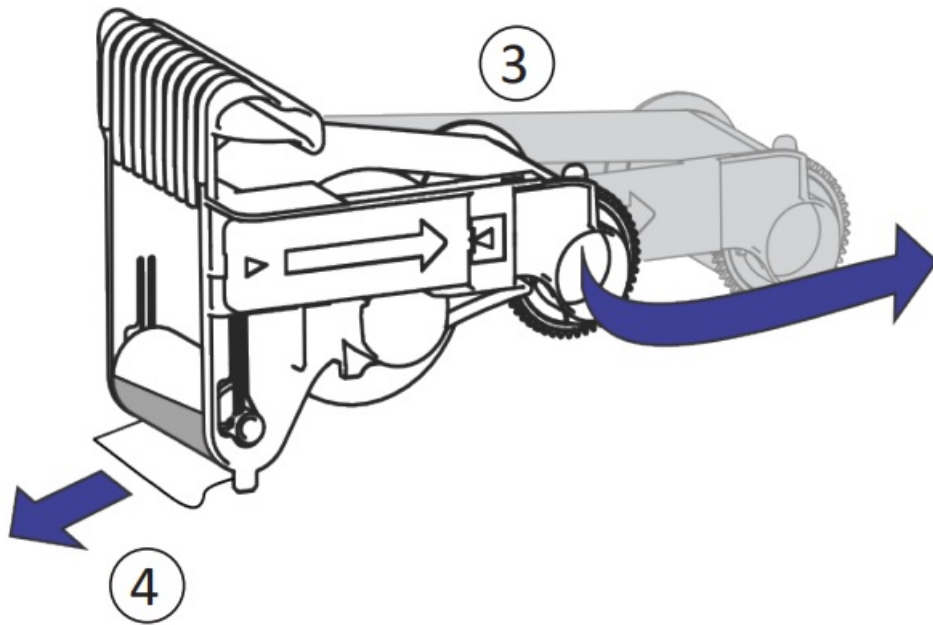


5. Install the cassette in the printer and close the printer cover.

### Empty the Reject Tray

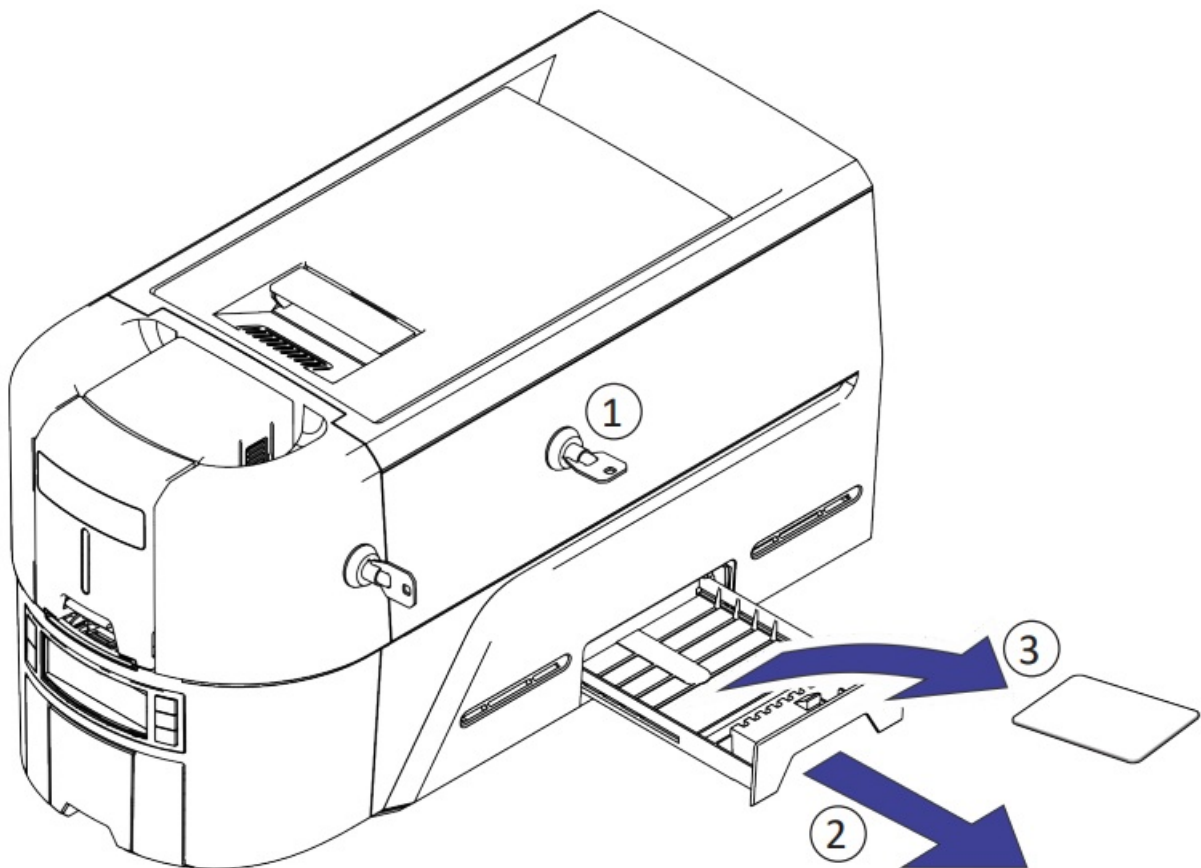


### Clear a Card Jam


### Single-Hopper Printer

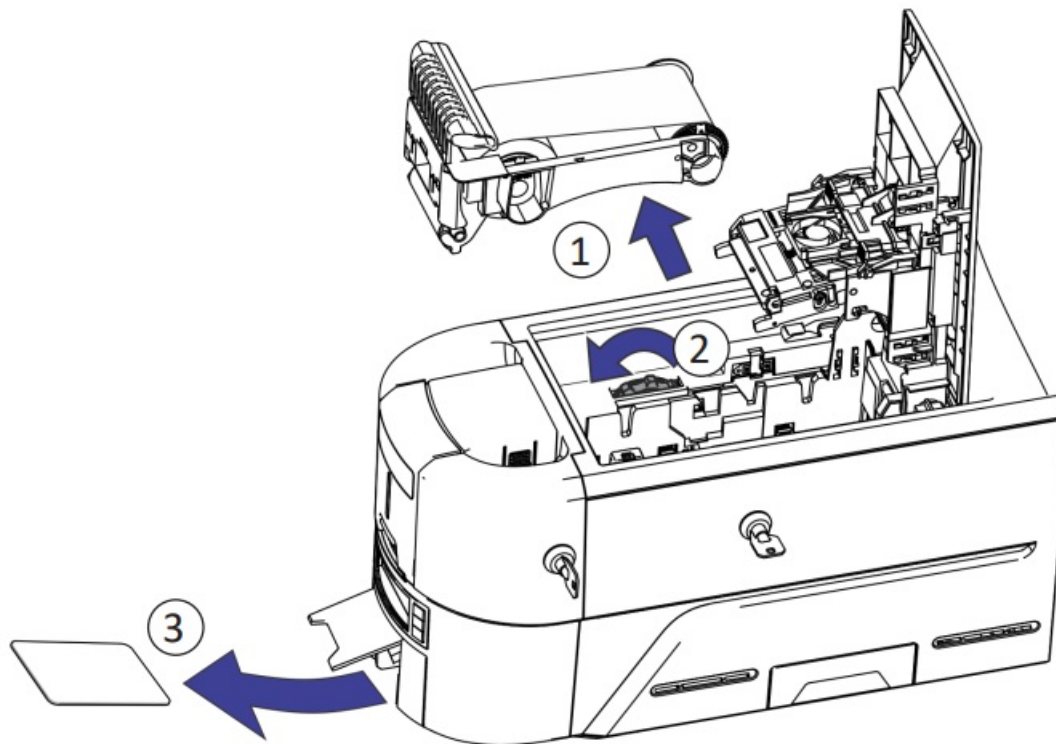


### Multi-Hopper Printer

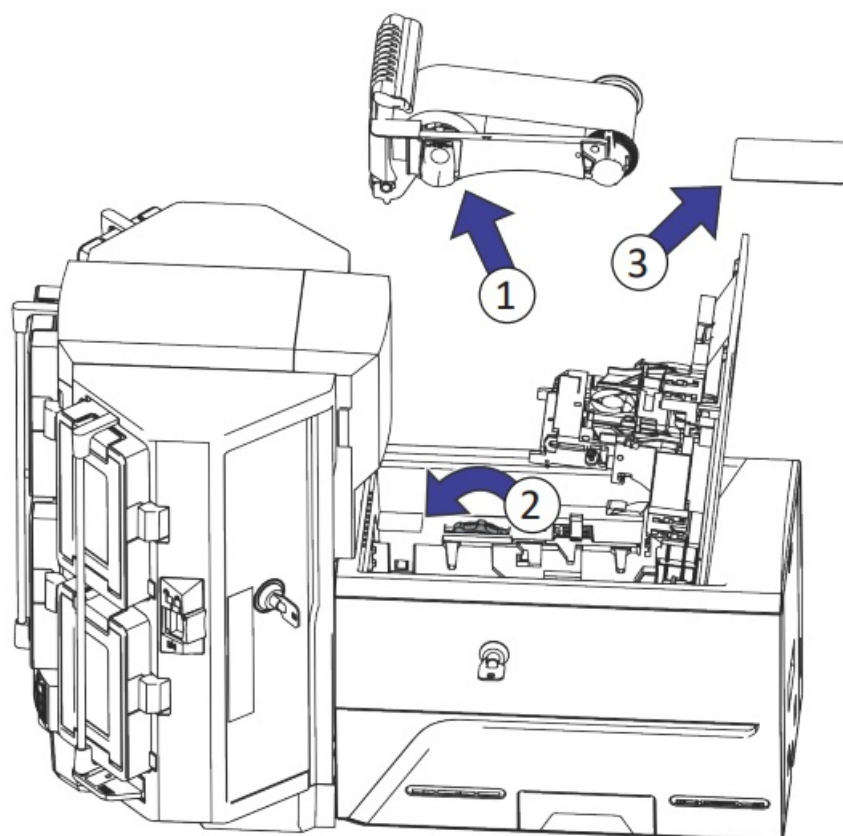

### Repair a Broken Print Ribbon

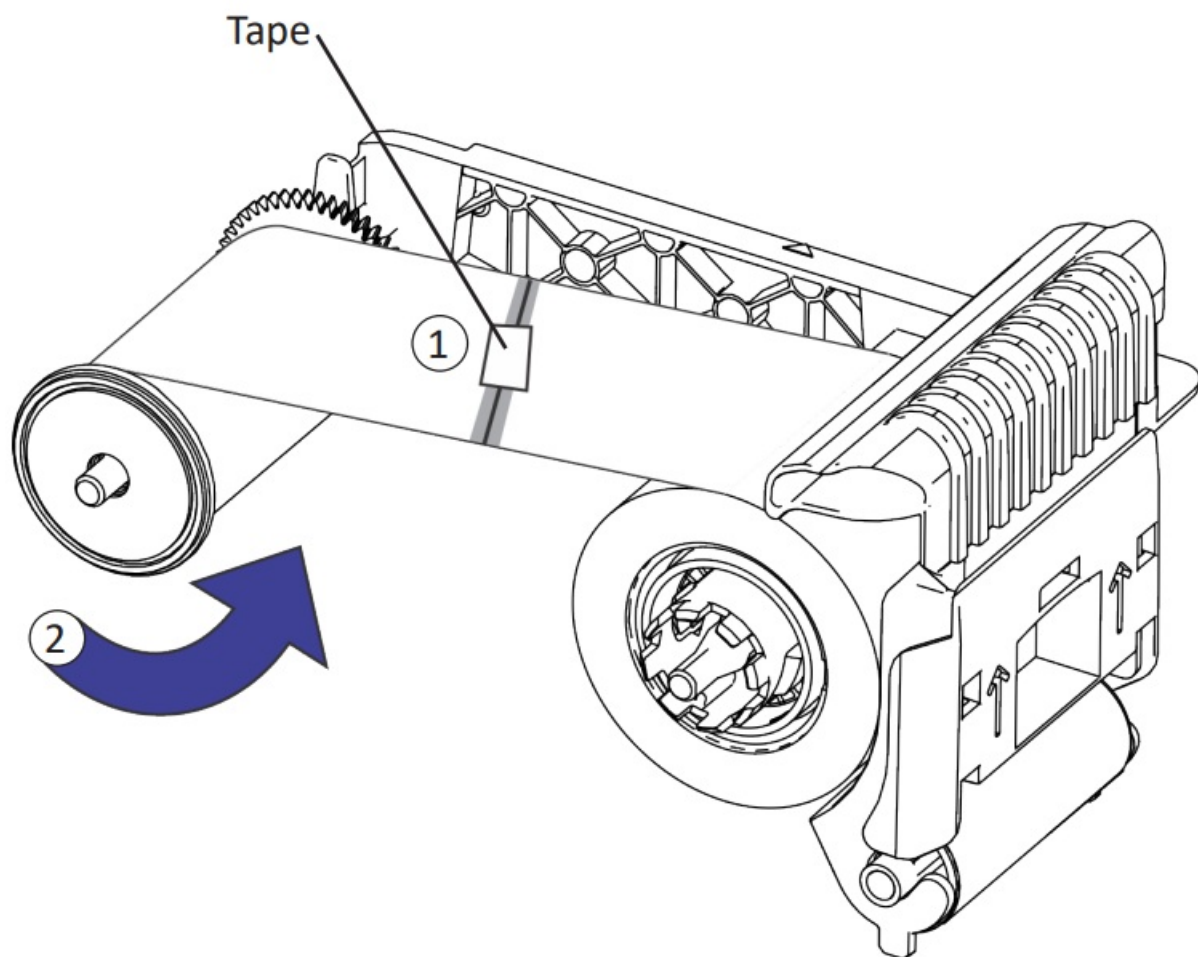


**Check the Printer Power Connections**

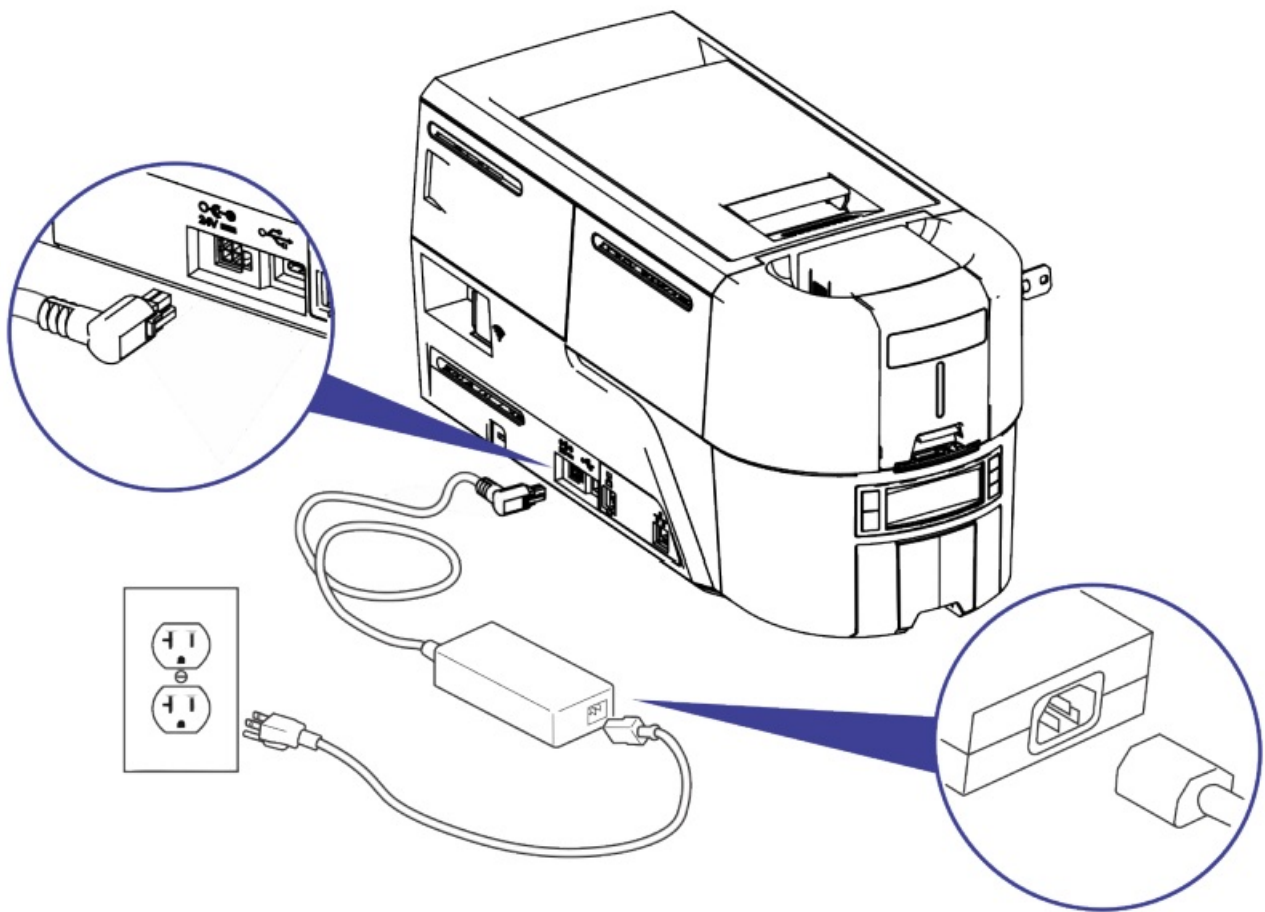


## Check the Printer Data Connection

### USB

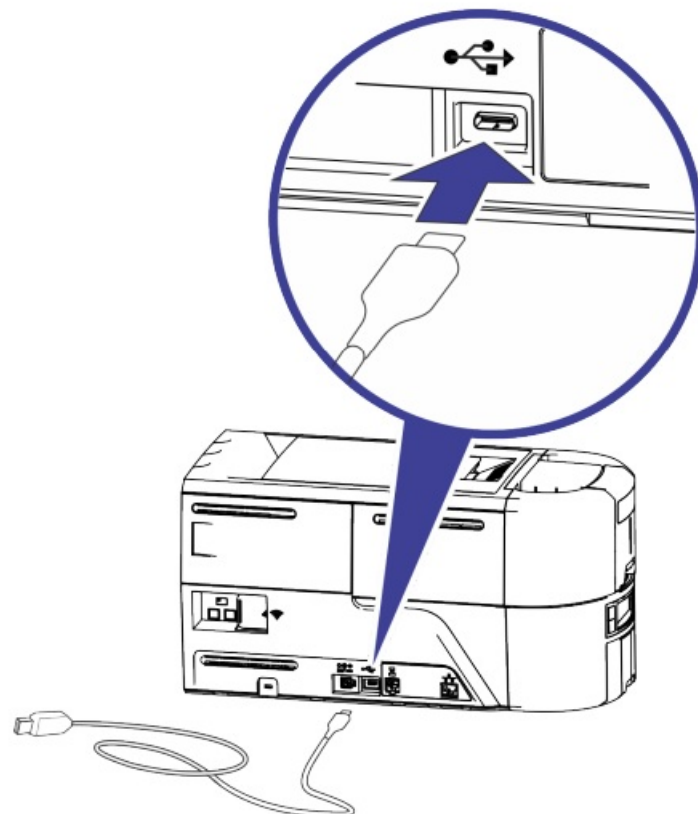

### Network

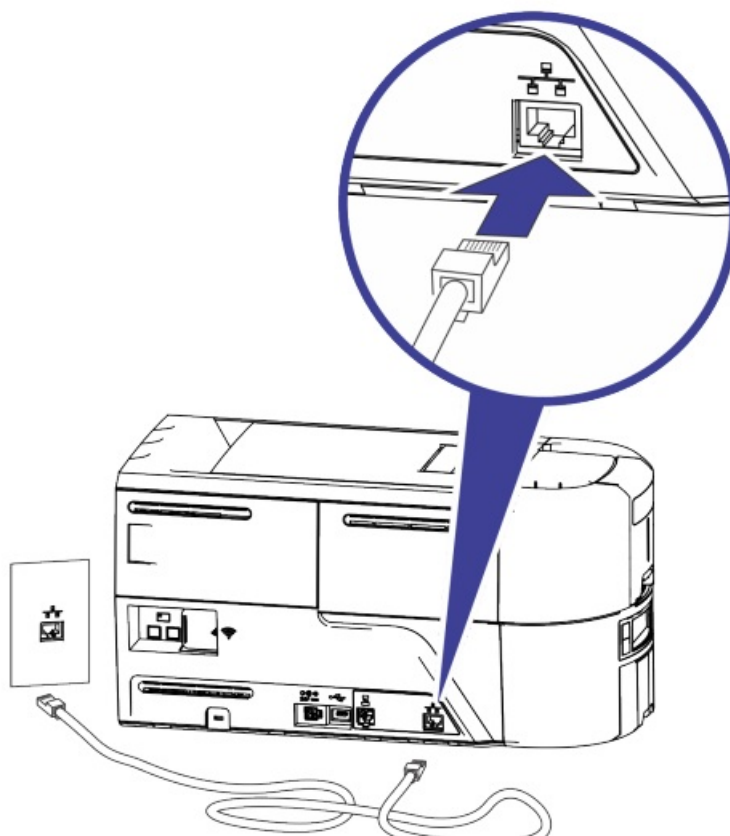

## Common LCD Messages

Error Message	Refer to:
110: Print ribbon out or missing	"Load the Print Ribbon Cartridge" on page 9 "Install the Prefilled Ribbon Cassette" on page 10
112: Card hopper empty	"Load Cards in a Single-Hopper Printer" on page 5 "Use the Exception Slot" on page 5 "Load Cards in a Multi-Hopper Printer" on page 7 "Use the Multi-Hopper Exception Slide" on page 8
118: Print ribbon type problem 119: Print ribbon not supported 121: Print ribbon not identified	"Load the Print Ribbon Cartridge" on page 9 "Install the Prefilled Ribbon Cassette" on page 10
172: Insert cleaning card	"Clean the Printer" on page 17
276: Multi-hopper card jam	"Clear a Card Jam" on page 12
277: Multi-hopper pick error	"Load Cards in a Multi-Hopper Printer" on page 7
294: Cleaning required	"Clean the Printer" on page 17


## Clean the Printer




## Single Hopper Printer

If the printer has locks, unlock the printer and input hopper.


1. Open the printer cover and remove the print ribbon cartridge or cassette. Close the cover.

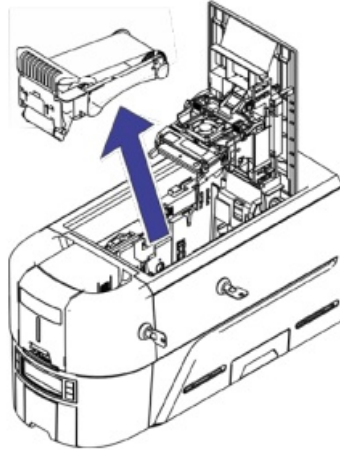

2. Open the input hopper cover and remove any unprinted cards.

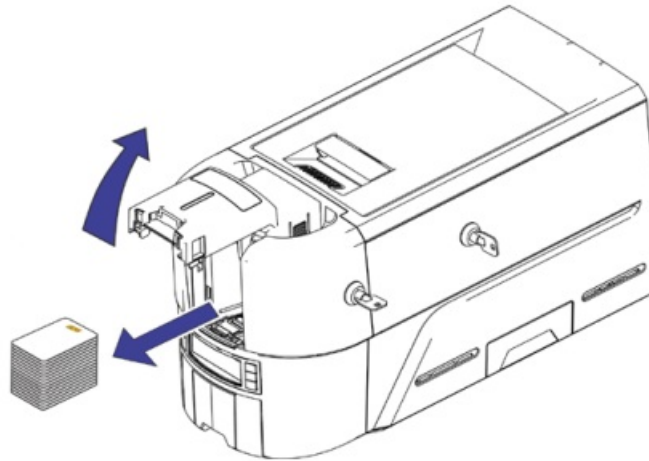

3. Insert the cleaning card in the input hopper.

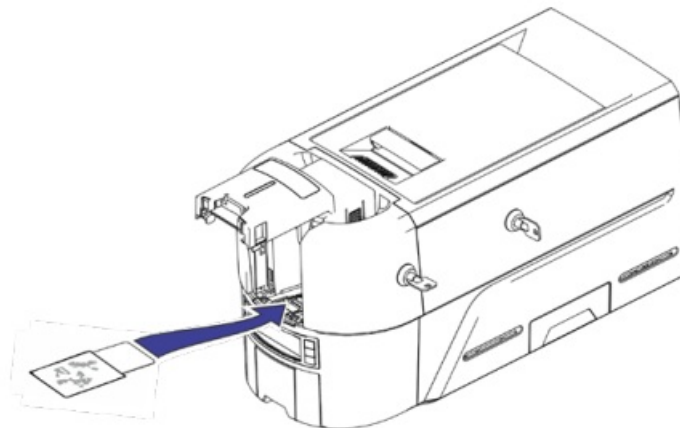


4. Close the input hopper.
5. Continue with “Run the Cleaning Card” on page 19.

## Multi-Hopper Printer

1. Unlock the printer and open the printer cover.
2. Remove the print ribbon, close the cover, and lock the printer.

3. Pull out the multi-hopper exception slide and insert the cleaning card.

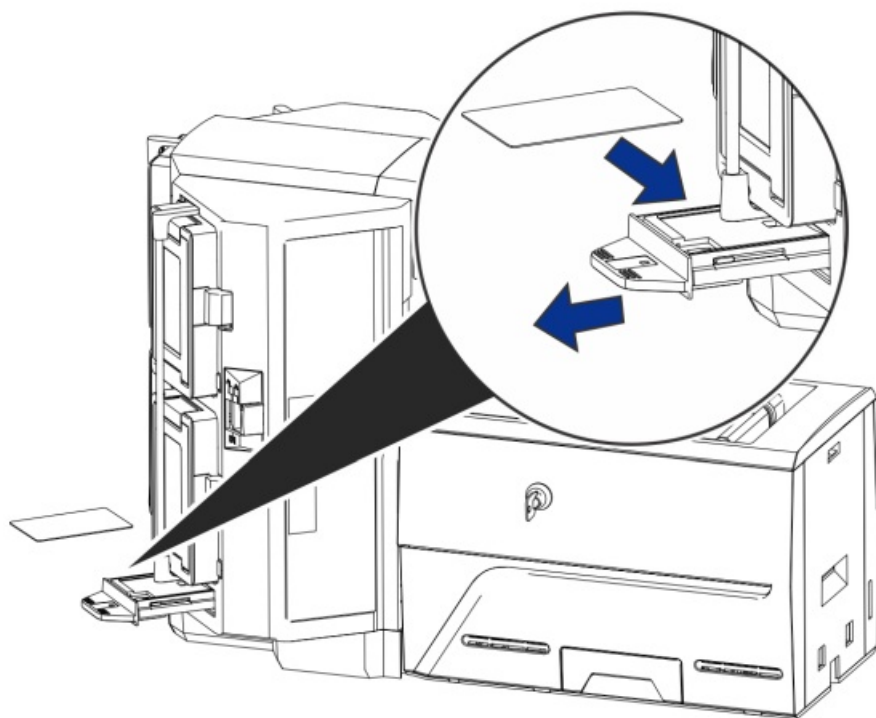

4. Push in the exception slide.

5. Continue with “Run the Cleaning Card” on page 19.

## Run the Cleaning Card

Use the LCD menu system to start the cleaning cycle.



**Printers without locks:** Remove the cleaning card from the output hopper and discard it.

**Printers with locks:** The cleaning card can remain in the printer reject tray until the tray is emptied. Replace the print ribbon cartridge or the cassette in the printer, and the cards in the input hopper.

## Clean the Printhead

The printhead does not require routine cleaning, however debris can get stuck on the printhead edge and cause horizontal lines in the printed image.

Use the following items to clean the printhead.





### Cleaning Swab


Clean the edge of the printhead in the following situations:

- There are unprinted lines on the finished card. This usually indicates dirt or contaminants on the printhead.
- The printhead is touched accidentally. Oils from hands can affect print quality and damage the printhead.
- A ribbon break caused part of the ribbon to stick to the printhead or printhead cover.
- The printhead has been replaced.

### Do the following to clean the edge of the printhead:

1. Power off the printer.
2. Unlock the printer and open the printer cover.
3. Open and remove a cleaning swab from its package.
4. Retract the printhead protective cover using side handles. Hold in the retracted position while cleaning.

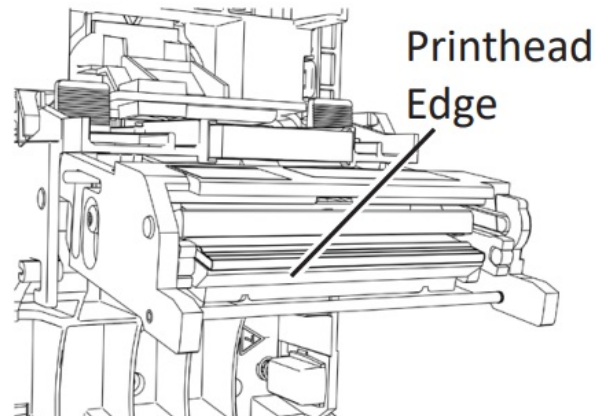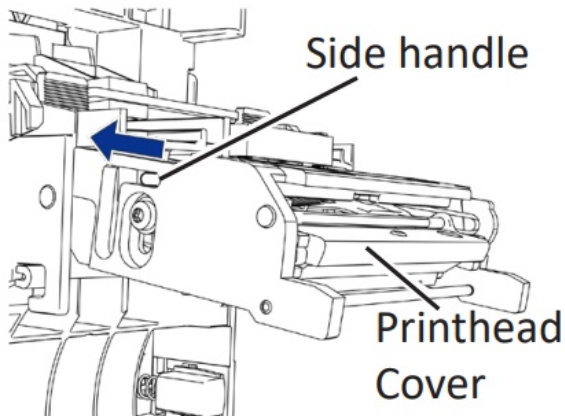


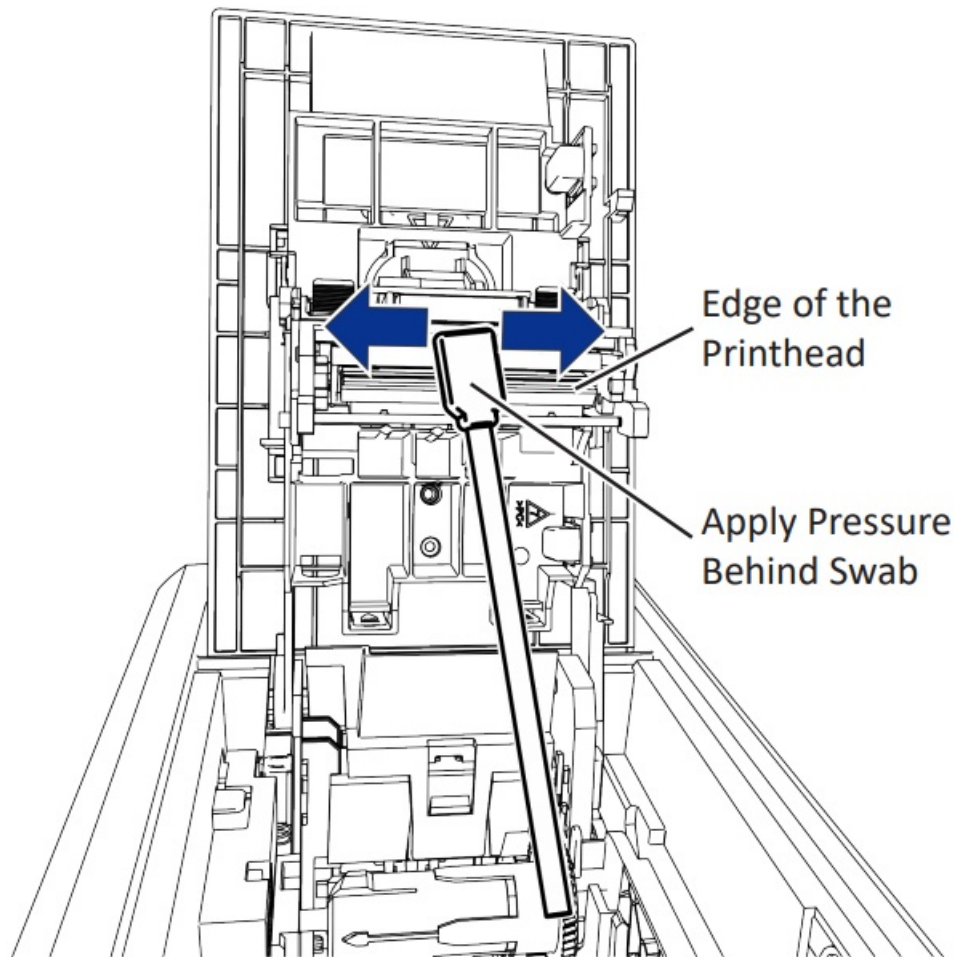

5. Hold the swab vertically and scrub the printhead edge back and forth from end to end while using your thumb to apply pressure.  
Scrub back and forth quickly for at least 10 seconds.
6. Close the printer cover. Press down on the ridges on the front of the cover to make sure that it latches completely on both sides.
7. Power on the printer.
8. Print a sample card to verify the quality of printing.

### **Set a Static IP Address**

The DS4 printer requires a static IP address.

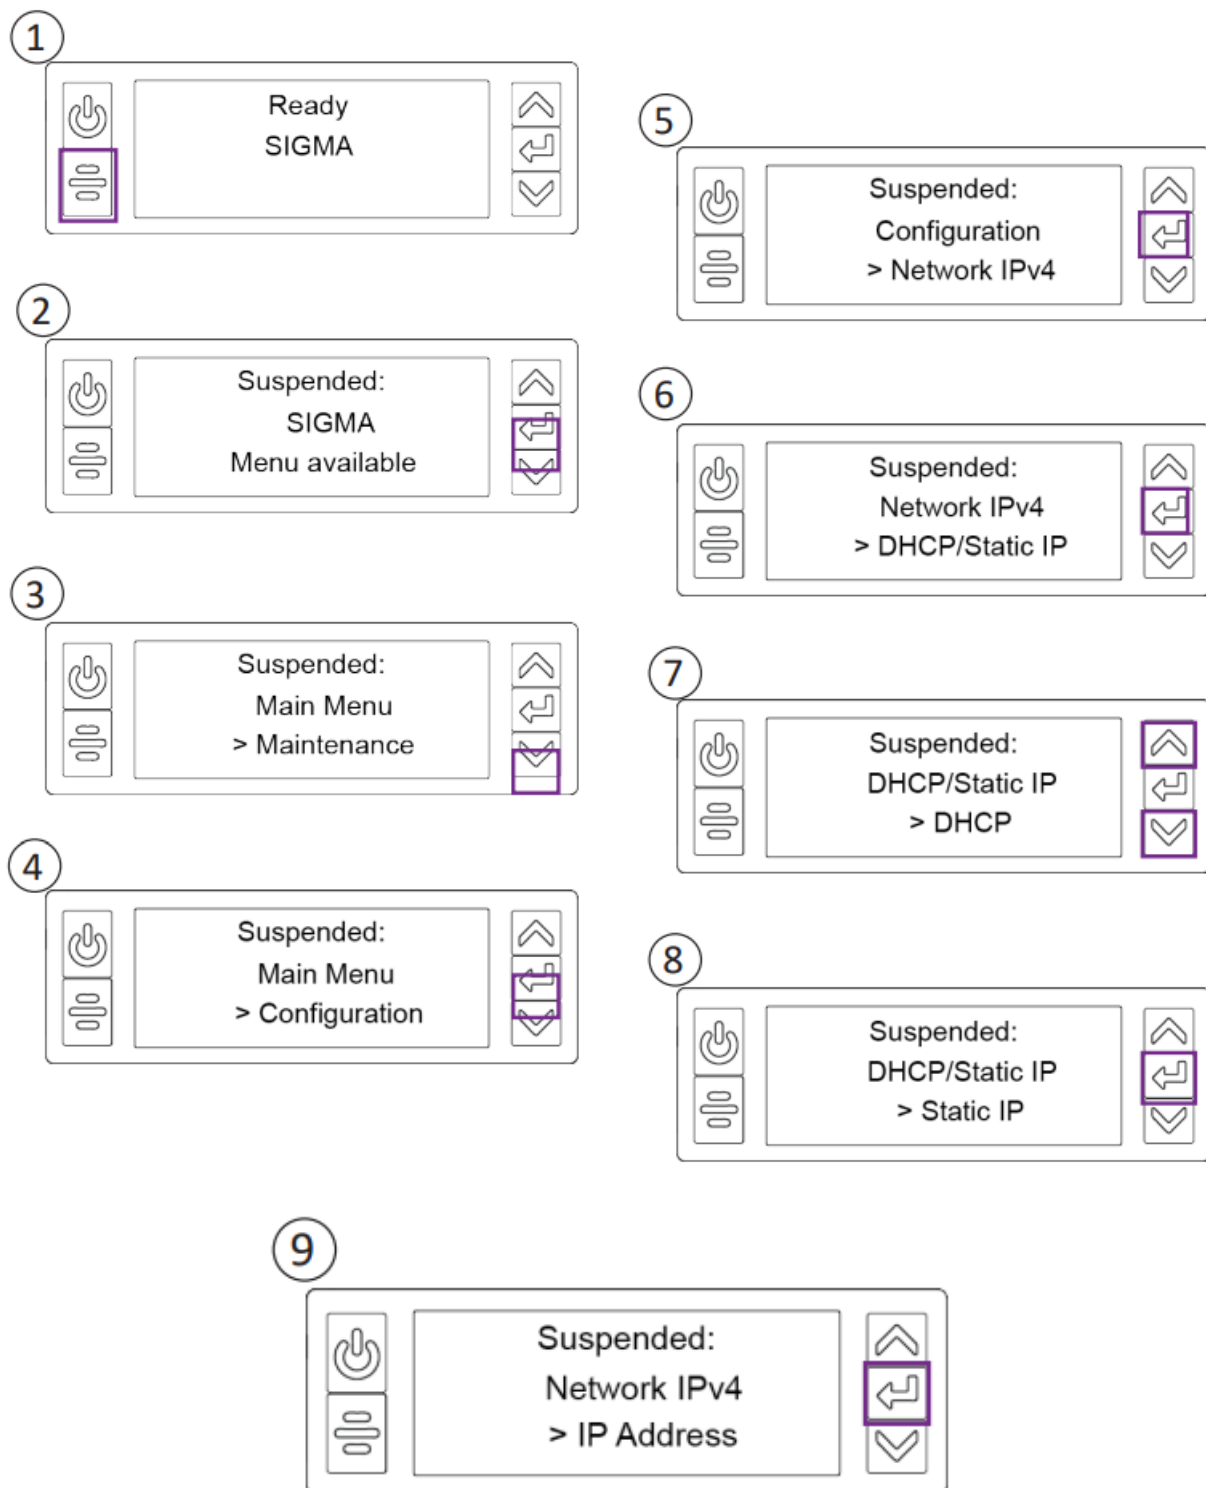


Use the arrow keys to change the right-most digit one number at a time. Press Enter to save each value and continue to the next section of the address. Press Enter when all four sections are correct.



Repeat step 10 to enter the subnet mask.


11

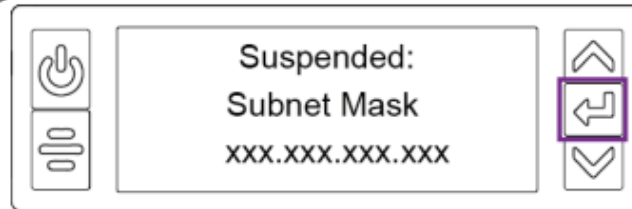

A screenshot of a printer's menu interface. On the left, there are two icons: a power button and a menu button. The main display area shows the text "Suspended: Subnet Mask" followed by "xxx.xxx.xxx.xxx". On the right, there are three arrow keys: up, left, and down. The left arrow key is highlighted with a purple box.

Repeat step 10 to enter the gateway address


12

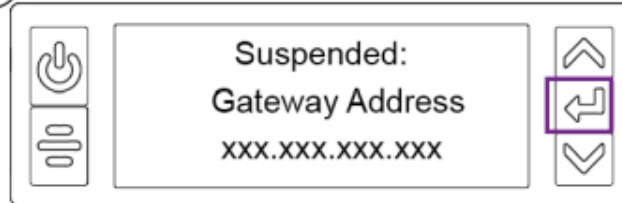

A screenshot of a printer's menu interface. On the left, there are two icons: a power button and a menu button. The main display area shows the text "Suspended: Gateway Address" followed by "xxx.xxx.xxx.xxx". On the right, there are three arrow keys: up, left, and down. The left arrow key is highlighted with a purple box.

Press Enter when you finish entering the address information. Press Enter to apply your changes.

13

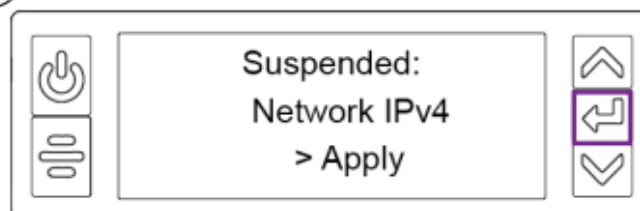

A screenshot of a printer's menu interface. On the left, there are two icons: a power button and a menu button. The main display area shows the text "Suspended: Network IPv4" followed by "> Apply". On the right, there are three arrow keys: up, left, and down. The left arrow key is highlighted with a purple box.

Power off and restart the printer to verify that the static IP address is correct.

Entrust, Sigma and the hexagon design are trademarks, registered trademarks and/or service marks, and Datacard is a registered trademark and service mark, of the Entrust Corporation in the United States and other countries. All other trademarks are the property of their respective owners.

© 2020, 2022. The design and information contained in these materials is protected by US and international copyright law.



# ENTRUST

1187 Park Place  
Minneapolis, Minnesota 55379  
952.933.1223 • 952.933.7971 Fax  
[www.entrust.com](http://www.entrust.com)





User Reference Guide  
Sigma DS4 and DS4-ES1  
Instant Financial Issuance System



May 2022  
S29693-001\_Rev 6

**[ENTRUST Sigma DS4 Instant Financial Issuance System](#)** [pdf] User Guide  
Sigma DS4, Sigma DS4-ES1, Instant Financial Issuance System, Financial Issuance System, I  
nstant Issuance System, Issuance System

## References

-  [Entrust](#)

Manuals+.