



## EOSS Speaker Bluetooth Audio Streaming User Manual

[Home](#) » [EOSS](#) » EOSS Speaker Bluetooth Audio Streaming User Manual

EOSS Speaker Bluetooth Audio Streaming



# LD-PARTY

portable disco speaker  
with bluetooth audio streaming

## USER MANUAL

## Contents [ [hide](#)

### 1 1. FEATURES:

### 2 2. CONTROL PANEL:

### 3 3. CHARGING:

### 4 4. INPUTS & OUTPUTS:

### 5 5. BLUETOOTH MODE:

### 6 6. TF (SD Card) / USB PLAYBACK MODE:

### 7 7. FM MODE:

### 8 8. AUX/LINE IN MODE:

### 9 9. LINE OUT MODE:

### 10 10. MICROPHONE INPUTS:

### 11 11. SAFETY INSTRUCTIONS:

### 12 12. FREQUENTLY ASKED QUESTIONS:

### 13 13. SPECIFICATIONS:

### 14 14. CAUTION:

### 15 15. TECHNICAL ASSISTANCE:


### 16 [Documents / Resources](#)

### 17 [Related Posts](#)

## 1. FEATURES:

- Disco LED light
  - Multicolor flashing speaker grille LED display
  - Bluetooth Range up to 10m
  - 7.4V 4000mAh Rechargeable, long-life battery with 6 hours of playing time\*
  - Micro USB charging input with cable, charger sold separately
  - USB Charge input DC 5V 2.1A
  - Charging time approximately 4.5 hours
  - Inputs for 1/4" (6.35mm) Microphone or Guitar
  - USB / Micro SD/TF card Input (for MP3 playback)
  - 3.5mm line output (Stereo)
  - FM radio with auto presets FM 87-108 MHz
  - 5" Woofer · 30W peak power · S/N Ratio 85dB
  - Separate echo and microphone volume controls
  - Leather carry handle
  - Weight 3.5kg
  - Supports charging via power banks^
- \* Hours of use will depend on the average output volume
- ^ Requires internal battery to have sufficient charge when using power banks for additional power

## 2. CONTROL PANEL:

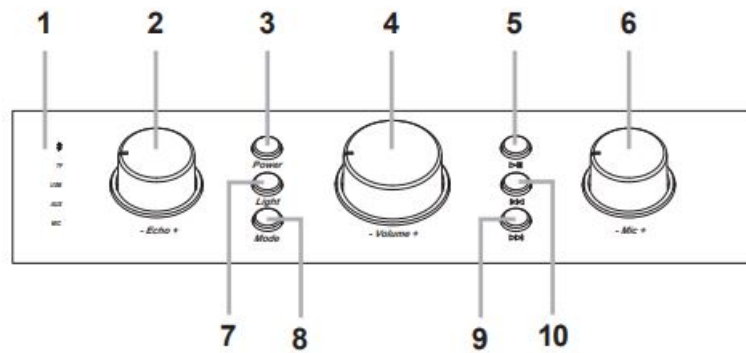


1. Input mode display indicators
2. Echo volume control
3. Power On/Off button: Long press for 3 seconds to engage.
4. Volume control
5. Play, pause & auto station tune
6. Microphone volume control
7. Light modes: Long press for 3 seconds to turn both disco and grille light on.  
Short press the light button again to turn the grille light off. Short press the light button again to turn the grille light on. Long press for 3 seconds to turn both disco and grille light off.
8. Mode button: Press to change modes BT / TF / USB (FM TUNER) / MIC
9. Forward, next track or station
10. Back, previous track or station

### 3. CHARGING:

Plug the charging cable into the Micro USB charging slot of the LD-PARTY. Plug the USB end of the supplied cable into a USB charger to charge. A charger is not supplied but a 2.1A charger is recommended. While the speaker is being charged, the indicator light turns red. Once it is fully charged, the indicator light turns off. We suggest users turning off the device while charging as It takes longer for the LD-PARTY to completely charge when in use.

### 4. INPUTS & OUTPUTS:

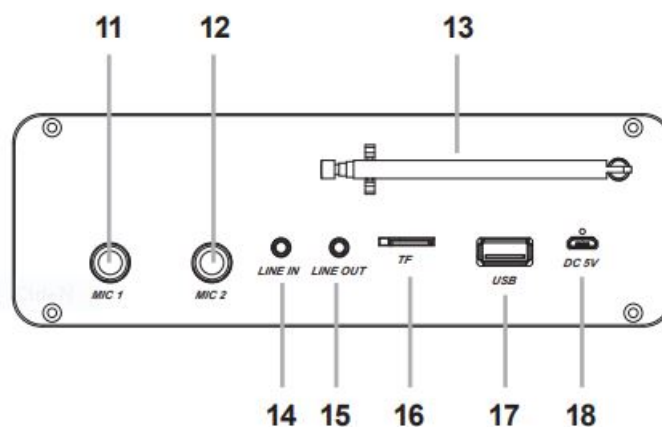

11. Microphone 1 input
12. Microphone 2 input
13. FM antenna

- 14. Line input
- 15. Line output
- 16. TF (Micro SD) card input
- 17. USB stick input
- 18. Micro USB charging slot. When the red indicator light remains illuminated the device is being charged. Once fully charged the indicator light will turn off.

## **5. BLUETOOTH MODE:**

When you first turn on the LD-PARTY, the Bluetooth display indicator will flash and automatically send out a signal ready for you to pair with. Turn on Bluetooth on your pairing device and search for "EOSS LD PARTY". Select to connect. If required PIN code is "0000". If pairing is not successful make sure other devices are not already paired with the LD-PARTY. Once successfully paired display indicator will stop flashing and music will stream. The user can press the ►|| to play/pause music. Press the ◀◀ to go back to the previous music track or press the ▶▶ to go to the next music track. Short press the "Mode" button to transfer to other modes.

## **6. TF (SD Card) / USB PLAYBACK MODE:**

Insert the TF (Micro SD) card or USB stick in the appropriate slot on the back of the LD-PARTY. The mode display indicator light will illuminate and will automatically start streaming music. The user can press the ►|| to play/pause music. Press the ◀◀ to go back to the previous music track or press the ▶▶ to go to the next music track. Short press the "Mode" button to transfer to other modes.

## **7. FM MODE:**

To access the FM radio, press the MODE button till the AUX indicator light illuminates and will automatically start streaming music. The user can press the ►|| button to auto-tune/scan the FM radio stations. After the stations have been scanned, press the ◀◀ ▶▶ buttons to skip or select scanned stations. Short press the "Mode" button to transfer to other modes.

## **8. AUX/LINE IN MODE:**

Plug one end of a 3.5mm cable into the LINE IN slot of the LD-PARTY and the other end into an audio slot of a Smartphone, Notebook, Tablet PC, MP3/MP4 Player, etc. Press the MODE button till the AUX indicator light illuminates ready for you to stream music from your input device. The user can press the ►|| button to play/pause music.

## **9. LINE OUT MODE:**

Use the LINE OUT slot of the LD-PARTY with a 3.5mm cable to an external speaker, amplifier, or for use with headphones.

## **10. MICROPHONE INPUTS:**

The LD-PARTY has 2 microphone inputs, MIC1 OR MIC2 for use with standard 1/4" microphone jacks. Using these inputs allows the user to control volume and echo separately from the main volume. The main volume control is only for music output only.

## **11. SAFETY INSTRUCTIONS:**

1. Before using, please read the user manual carefully. Retain for future reference.

2. All warnings on the speaker and in the user manual should be adhered to.
3. Do not use the speaker near water.
4. For Ventilation Purposes:
  - Do not block any of the ventilation openings.
  - Do not install near any heat sources or fire.
  - Do not install in an airtight location.
5. Keep the cord and plugs in good order.
6. The speaker may be wiped down with a damp cloth once the unit has been switched off and the plug removed.
7. Unplug the speaker during lightning storms or when not in use for long periods of time.
8. Keep foreign objects and liquid from entering the unit to avoid a short circuit, fire, and electrical accidents.
9. Keep the speaker in a dry location.

## **12. FREQUENTLY ASKED QUESTIONS:**

### **(Q) Why does my LD-PARTY fail to pair with my phone?**

(A) If your phone fails to pair, we suggest you restart your phone, try to pair with the unit again making sure your phone is in search mode. The LD-PARTY will show up on your phone as (LD-PARTY) and all you need to do is click on this line and you will be connected. If your phone fails to connect it is a problem with your process or your phone. If it fails then redo the above steps, as it is unlikely to be the LD-PARTY unit at fault.

### **(Q) Can I PLAY music through the USB port?**

(A) Yes with your LD-PARTY you can play music from the USB port. The LD-PARTY unit has an AUX, Bluetooth, SD card, and USB inputs to take care of all your input needs.

### **(Q) Why is the Aux input volume lower than the Microphone input volume?**

(A) Turn the volume up on your phone or device, then adjust the volume on the LD-PARTY

### **(Q) Why will my unit not charge?**

(A) Check the power cable is correctly inserted and is not faulty. The internal battery is completely flat and requires to be returned to the manufacturer for assessment and possible repair.

## **13. SPECIFICATIONS:**

Sound Output	Stereo
Functions	Bluetooth, MIC INPUT 1/2, LINE-IN/OUT, Micro SD Card, USB Stick, Disco LED light
Bluetooth Version	V4.2
Bluetooth transmission	≤10 metres
Micro SD card capacity	128M~64GB
USB stick capacity	128M~64GB
Power Supply	DC 5V/7.4V, lithium battery
Battery	7.4V 4000mAh lithium battery
Output	30W
Frequency	90Hz-18KHz
Diameter of Loudspeaker	φ 5 inch
Speaker Impedance	4Ω
Aux connector	3.5mm
Charging connector	Micro USB charging connector
SPL:	>115db 1KHz THD<1%
Material	PC + ABS plastic+ Wooden
Size	L218*W229*H341mm

#### 14. CAUTION:

No user-serviceable parts inside. Please return to the agent or a similarly qualified service center for repair.

#### 15. TECHNICAL ASSISTANCE:

If you need assistance setting up or using your EOSS product now or in the future, call EOSS to support Australia

TEL: 03 8587 8898 FAX: 03 8587 8866 Mon-Fri 9am 5pm AEST

Please retain this user guide for future reference.

Manual Version 1.0




This manual is considered correct at the time of printing but is subject to change. For the latest manuals and updates refer to the product's website.

Copyright © 2017 by TDJ Australia

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, copying, or other electronic or mechanical methods, without the prior written permission of the author.



 <p><b>LD-PARTY</b> portable disco speaker with bluetooth audio streaming USER MANUAL</p> <p><small>Manual Version 1.0</small></p>	<p><a href="#">EOSS Speaker Bluetooth Audio Streaming</a> [pdf] User Manual Speaker Bluetooth Audio Streaming</p>
---	---