

EPH CONTROLS R17-RF 1 Zone RF Timeswitch Instruction Manual

Home » EPH CONTROLS » EPH CONTROLS R17-RF 1 Zone RF Timeswitch Instruction Manual





For use in normal environments. **CONTROLS R17-RF 1 Zone RF Timeswitch**



Installation Instructions



Contents

- 1 R17-RF 1 Zone RF
- **Timeswitch**
- 2 Contents
- 3 Factory default settings
- 4 Specifications & wiring
- 5 Setting the date and time
- **6 Frost protection function**
- 7 Master reset
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

R17-RF 1 Zone RF Timeswitch

Important: Keep this document

This 1 zone RF timeswitch is designed to provide ON/OFF control for 1 zone, with the value added application of in built frost protection.


CAUTION!


Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.


- Before commencing any work on the electrical connections, you must first disconnect the timeswitch from the
 mains. None of the 230V connections must be live until the installation has been completed and the housing is
 closed. Only qualified electricians or authorised service staff are permitted to open the timeswitch. Disconnect
 from mains supply in the event of any damage to any buttons.
- There are parts that carry mains voltage behind the cover. The timeswitch must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)
- If the timeswitch is used in a way not specified by the manufacturer, its safety may be impaired.
- Ensure that this wireless enabled timeswitch is installed 1 metre from any metalic object, television, radio or wireless internet transmitter.
- Prior to setting the timeswitch, it is neccessary to complete all required settings described in this section.
- Never remove this product from the electrical baseplate. Do not use sharp tools to push any button.


This timeswitch can be mounted in the following ways:


- 1. Directly wall mounted
- 2. Mounted to a recessed conduit box

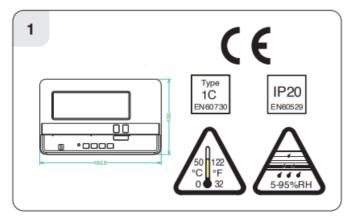


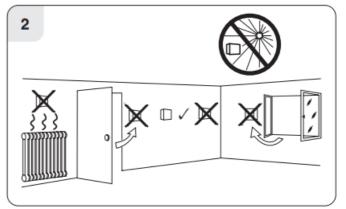

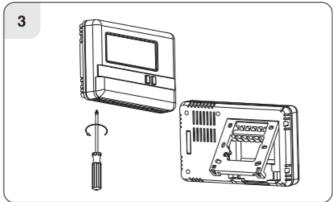

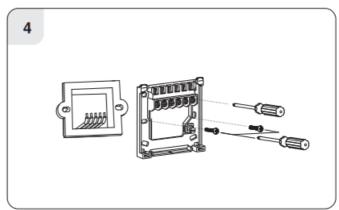

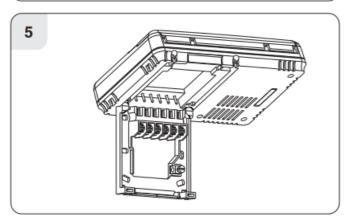

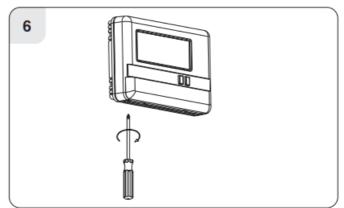

Contents

- 1. Factory default settings
- 2. Specifications & wiring
- 3. Setting the date & time
- 4. Frost protection
- 5. Master reset




Factory default settings

Contacts:	Volt free contact
Program:	5/2D
Backlight:	On
Keypad:	Unlocked
Frost Protection:	Off
Clock type:	24 Hr Clock

Day-Light Saving

Specifications & wiring

Power Supply:	230 Vac
Ambient Temp:	0~35°C
Contact Rating:	250 Vac 3A(1A)
Program Memory backup:	1 year
Battery:	3Vdc Lithium LIR 2032
Backlight:	Blue
IP rating:	IP20
Backplate:	British System Standard
Pollution degree 2:	Resistance to voltage surge 2000V as per EN 60730
Automatic Action:	Type 1.S
Software:	Class A

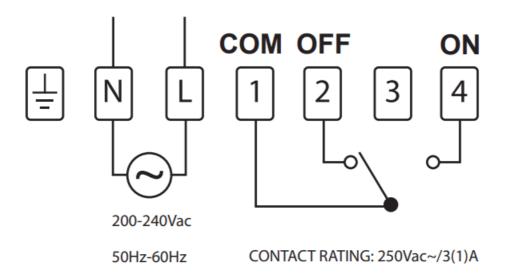

If mains voltage output is required, terminals L & 1 must be electrically linked. The cable link is provided with this timeswitch.



Lower the cover on the front of the timeswitch. Move the selector switch to the CLOCK SET position. Press the or buttons to select the day. Press buttons to select the month. Press Press the ittons to select the hour. Press Press the buttons to select 5/2D, 7D or 24H Press The date, time and function are now set. Move the selector switch to the RUN position to run the program, or to the PROG SET position to change the program setting. Frost protection function Selectable range 5~20°C This function is set to protect pipes against freezing or to prevent low room temperature when the timeswitch is programmed to be OFF or is manually OFF. Frost protection can be activated by following the procedure below. Move the selector switch to the RUN position. Frost protection can be activated by following the procedure below. Move the selector switch to the RUN position. buttons for 5 seconds, to enter selection mode. buttons to to turn On or turn Off frost protection. button to confirm buttons to increase or decrease the desired frost protection setpoint.

Master reset

Lower the cover on the front of the timeswitch. There are four hinges holding the cover in place.

Zone 1 will be switched ON in the event of room temperature falling below the frost protection setpoint.

Between the 3rd and 4th hinges there is a circular hole. Insert a ball point pen or similar object to master reset the timeswitch.

After pressing the master reset button, the date and time will now need to be reprogrammed.



EPH Controls Ireland

technical@ephcontrols.com www.ephcontrols.com

EPH Controls UK

technical@ephcontrols.co.uk www.ephcontrols.co.uk

Documents / Resources



<u>EPH CONTROLS R17-RF 1 Zone RF Timeswitch</u> [pdf] Instruction Manual R17-RF 1 Zone RF Timeswitch, R17-RF, 1 Zone RF Timeswitch, RF Timeswitch, Timeswitch



EPH CONTROLS R17-RF 1 Zone RF Timeswitch [pdf] Instruction Manual R17-RF 1 Zone RF Timeswitch, R17-RF, 1 Zone RF Timeswitch, RF Timeswitch, Timeswitch

References

- Et Home Page EPH Controls
- Et Home Page EPH Controls

Manuals+,