



EPH CONTROLS R27 2 Zone Programmer Instruction Manual

[Home](#) » [EPH CONTROLS](#) » EPH CONTROLS R27 2 Zone Programmer Instruction Manual 

EPH CONTROLS R27 2 Zone Programmer



Contents

[1 Installation](#)

[Instructions](#)

[2 Factory default settings](#)

[3 Specifications & wiring](#)

[4 Master reset](#)

[5 CUSTOMER SERVICE](#)

[6 Documents / Resources](#)

[6.1 References](#)

[7 Related Posts](#)

Installation Instructions

Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.

- Before commencing any work on the electrical connections, you must first disconnect the programmer from the mains. None of the 230V connections must be live until the installation has been completed and the housing is closed. Only qualified electricians or authorized service staff are permitted to open the programmer. Disconnect from mains supply in the event of any damage to any buttons.
- There are parts that carry mains voltage behind the cover. The programmer must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)
- If the programmer is used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the time switch, it is necessary to complete all required settings described in this section.
- Never remove this product from the electrical baseplate. Do not use sharp tools to push any button.

Important: Keep this document

This 2 zone programmer is designed to provide ON/OFF control for 2 zones, with the value added application of in built frost protection.

 
 
 
 


This programmer can be mounted in the following ways:





1. Directly wall mounted
2. Mounted to a recessed conduit box


1

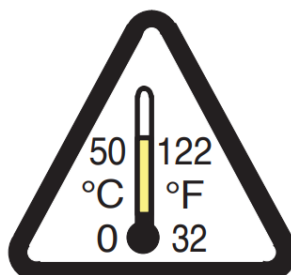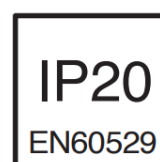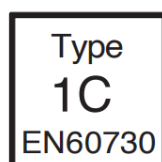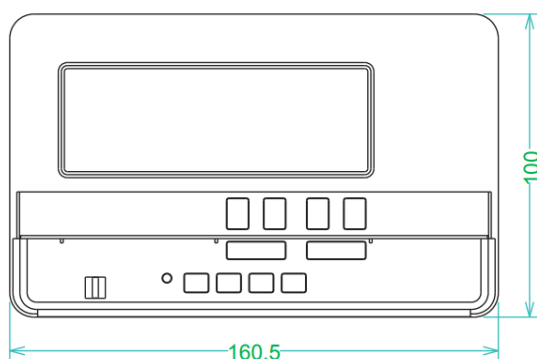


2

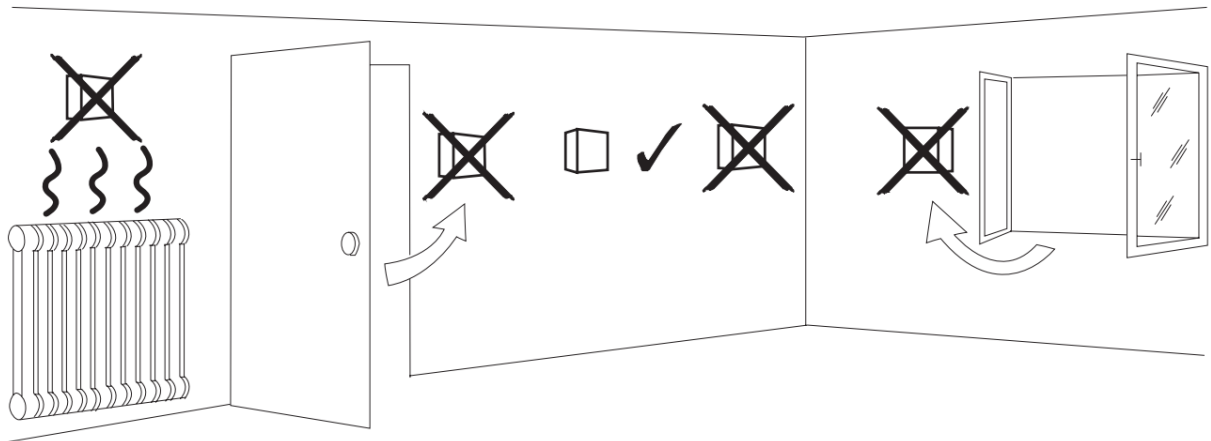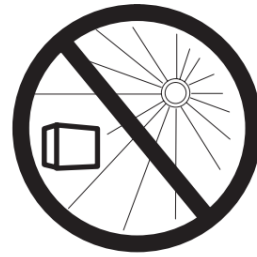  

3

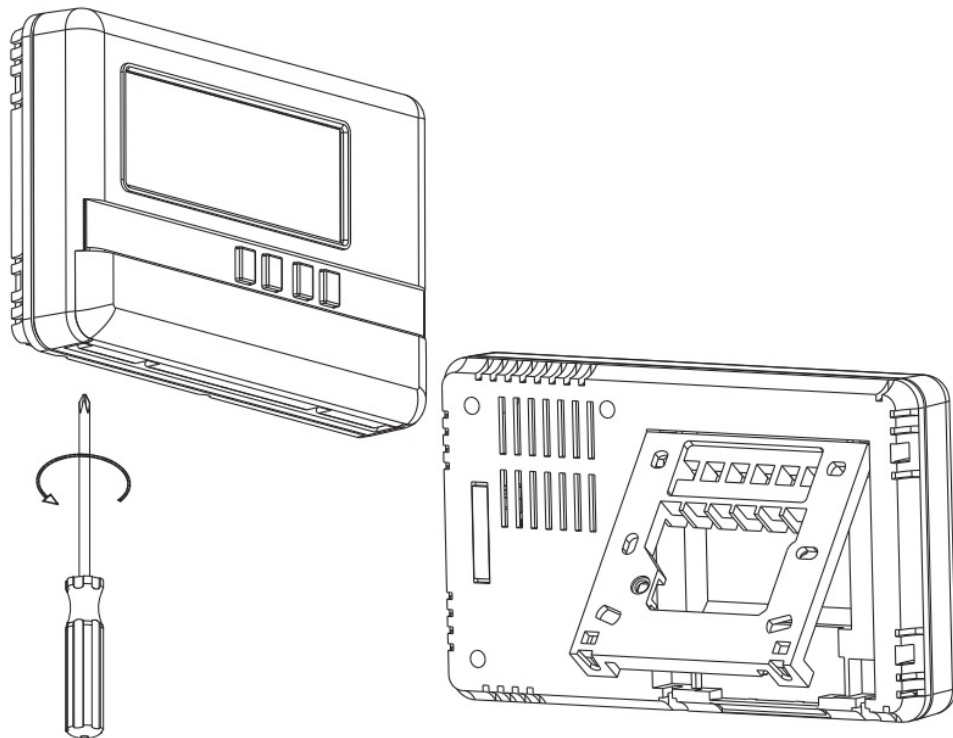 

4

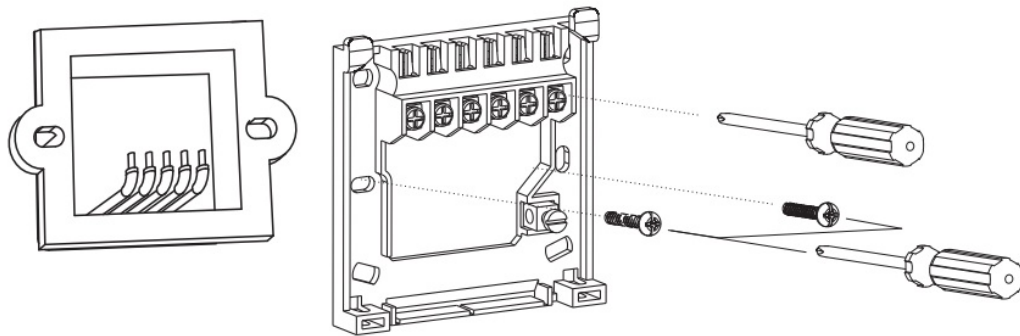 

Factory default settings



Contacts: 230 Volt
Program: 5/2D
Backlight: On
Keypad: Unlocked
Frost Protection: Off
Clock type: 24 Hr Clock Day-Light Saving

Specifications & wiring

Power Supply: 230 Vac
Ambient Temp: 0~35°C
Contact Rating: 250 Vac 3A(1A) Program Memory
backup: 1 year

Battery: 3Vdc Lithium LIR 2032

 
Backlight: Blue

IP rating: IP20

Backplate: British System Standard

Pollution degree 2: Resistance to voltage surge 2000V as per EN 60730 **Automatic Action:** Type 1.C

Software: Class A

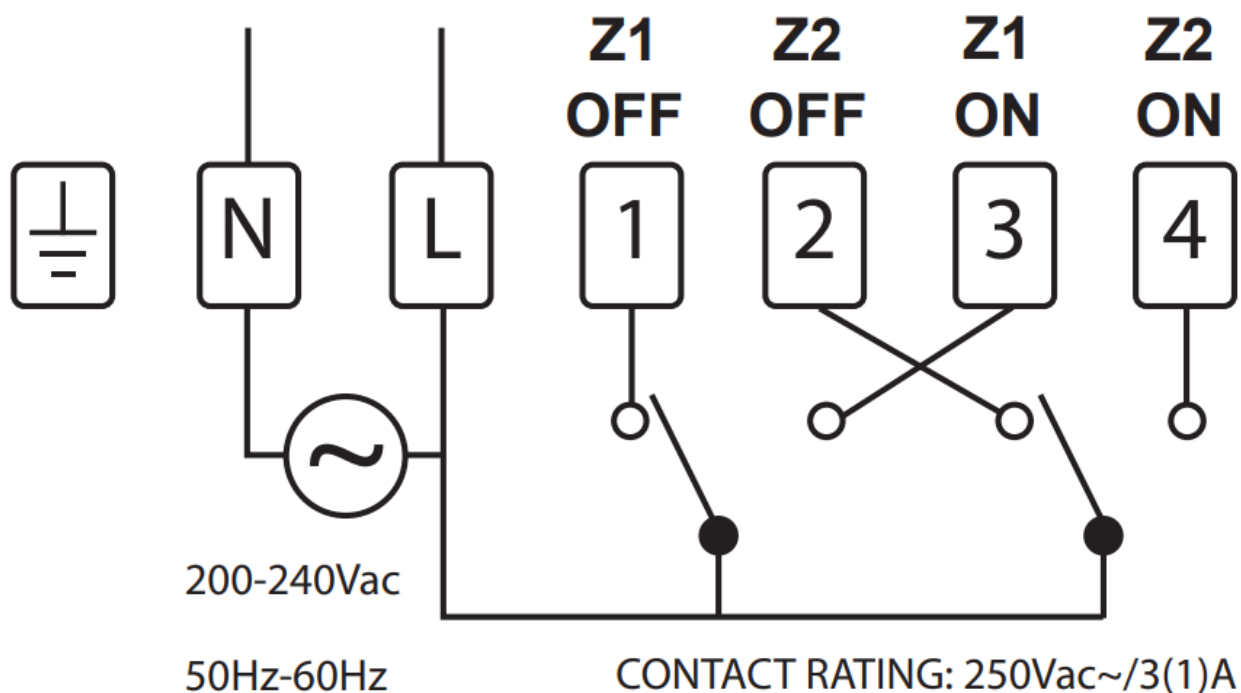

Master reset

Lower the cover on the front of the programmer. There are four hinges holding the cover in place. Between the 3rd and 4th hinges there is a circular hole. Insert a ball point pen or similar object to master reset the programmer.

After pressing the master reset button, the date and time will now need to be reprogrammed.

CUSTOMER SERVICE

EPH Controls Ireland

technical@ephcontrols.com www.ephcontrols.co


EPH Controls UK

technical@ephcontrols.co.uk www.ephcontrols.co.uk

20221107_R27_Insins_PK



Documents / Resources

	<p>EPH CONTROLS R27 2 Zone Programmer [pdf] Instruction Manual</p> <p>R27 2 Zone Programmer, R27, 2 Zone Programmer, Zone Programmer, Programmer</p>
--	---

References

- [EPH Home Page - EPH Controls](#)
- [EPH Home Page - EPH Controls](#)

Manuals+.