




EPH CONTROLS R27-HW 2 Zone Programmer Instruction Manual

[Home](#) » [EPH CONTROLS](#) » EPH CONTROLS R27-HW 2 Zone Programmer Instruction Manual 



CONTROLS R27-HW 2 Zone Programmer



Instruction Manual



Contents

[1 R27-HW 2 Zone Programmer](#)

[2 Contents](#)

[3 Factory default settings](#)

[4 Specifications & wiring](#)

[5 Master reset](#)

[6 Documents / Resources](#)

[6.1 References](#)

[7 Related Posts](#)

R27-HW 2 Zone Programmer

Important: Keep this document

 
 
 
 
 
 
This 2 zone programmer is designed to provide ON/OFF control for one hot water and one heating zone, with the value added application of in built frost protection.

CAUTION! Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.

- Before commencing any work on the electrical connections, you must first disconnect the programmer from the mains. None of the 230V connections must be live until the installation has been completed and the housing is closed. Only qualified electricians or authorised service staff are permitted to open the programmer. Disconnect from mains supply in the event of any damage to any buttons.
- There are parts that carry mains voltage behind the cover. The programmer must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)
- If the programmer is used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the timeswitch, it is necessary to complete all required settings described in this section.
- Never remove this product from the electrical baseplate. Do not use sharp tools to push any button.

This programmer can be mounted in the following ways:

1. Directly wall mounted
2. Mounted to a recessed conduit box

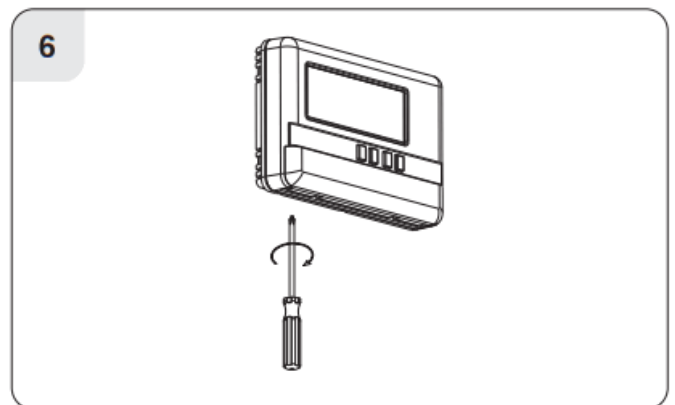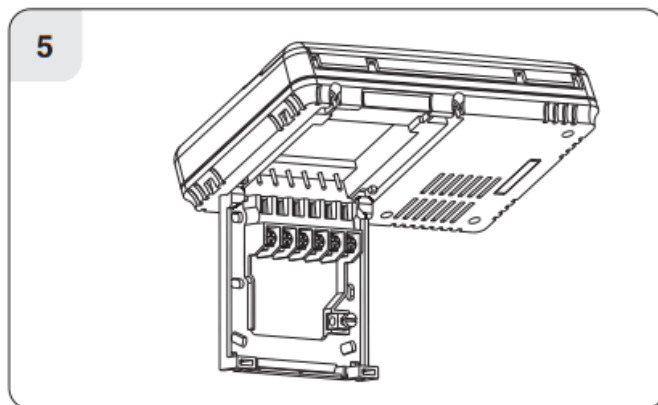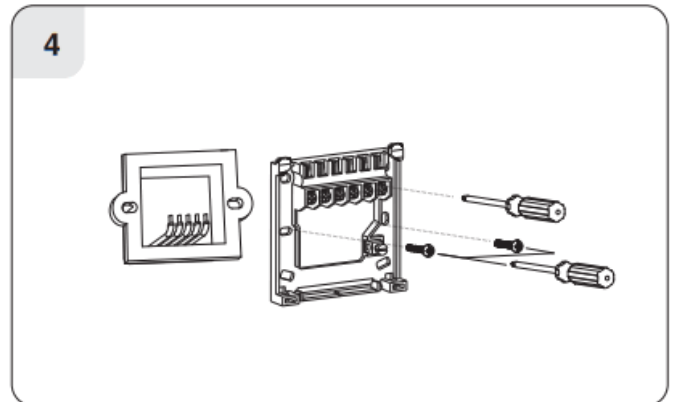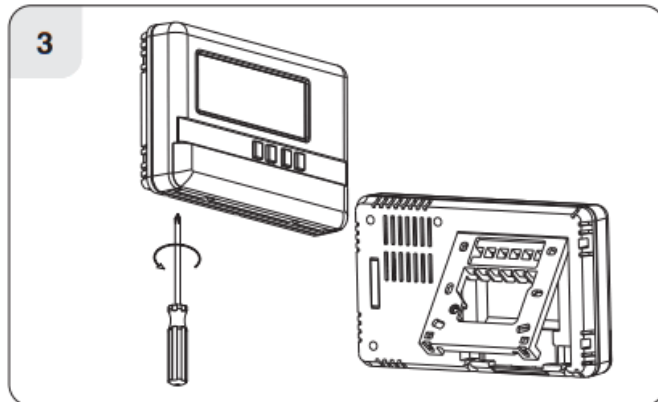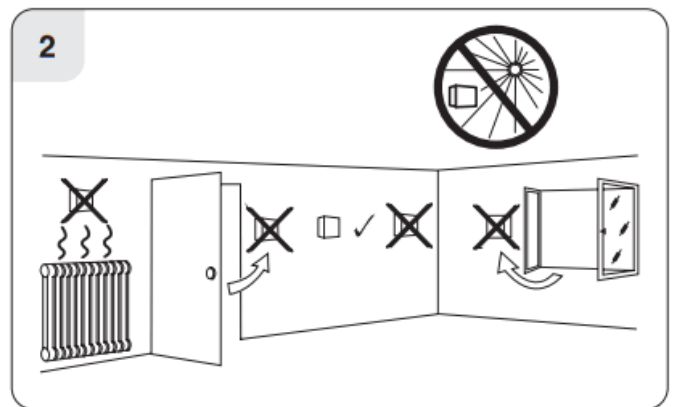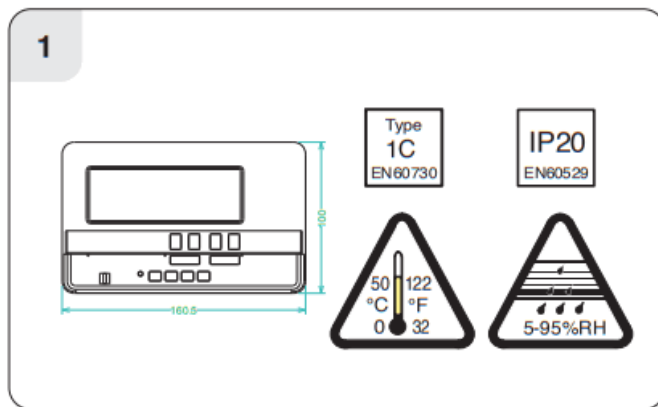

Contents

1. Factory default settings
2. Specifications & wiring
3. Master reset




Factory default settings

Contacts:	230 Volt contacts
Program:	5/2D
Backlight:	On
Keypad:	Unlocked
Frost Protection:	Off
Clock type:	24 Hr Clock

Day-Light Saving

Specifications & wiring

Power Supply:	230 Vac
Ambient Temp:	0~35°C
Contact Rating:	250 Vac 3A(1A)
Program Memory backup:	1 year
Battery:	3Vdc Lithium LIR 2032
Backlight:	Blue
IP rating:	IP20
Backplate:	British System Standard
Pollution degree 2:	Resistance to voltage surge 2000V as per EN 60730
Automatic Action:	Type 1.8
Software:	Class A

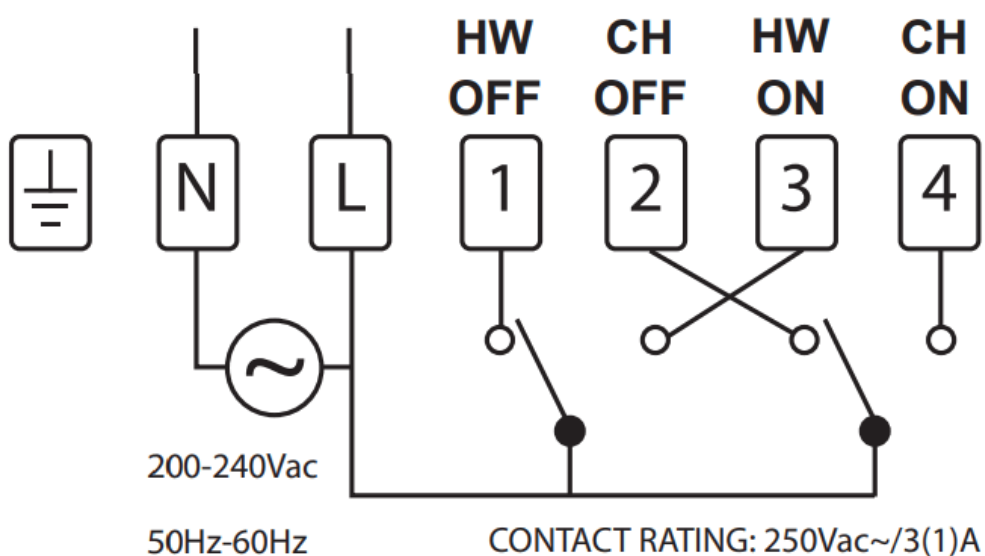 

Master reset

Lower the cover on the front of the programmer. There are four hinges holding the cover in place.

Between the 3rd and 4th hinges there is a circular hole. Insert a ball point pen or similar object to master reset the programmer.

After pressing the master reset button, the date and time will now need to be reprogrammed.



EPH Controls Ireland

technical@ephcontrols.com

www.ephcontrols.com

 
 
 


EPH Controls UK

technical@ephcontrols.co.uk

www.ephcontrols.co.uk

20221107_R27-HW_Insins_PK

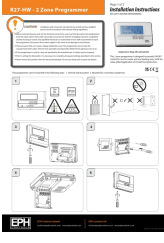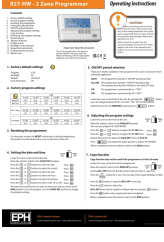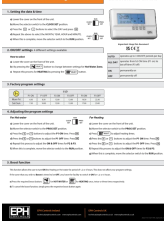Documents / Resources

	<p>EPH CONTROLS R27-HW 2 Zone Programmer [pdf] Instruction Manual R27-HW 2 Zone Programmer, R27-HW 2, Zone Programmer, Programmer</p>
	<p>EPH CONTROLS R27-HW 2 Zone Programmer [pdf] Instruction Manual R27-HW 2 Zone Programmer, R27-HW, 2 Zone Programmer, Programmer</p>
	<p>EPH CONTROLS R27-HW 2 Zone Programmer [pdf] Instruction Manual R27-HW 2 Zone Programmer, R27-HW, R27-HW Programmer, 2 Zone Programmer, Programmer</p>
	<p>EPH CONTROLS R27 HW 2 Zone Programmer [pdf] Instructions R27 HW 2 Zone Programmer, R27 HW 2, Zone Programmer, Programmer</p>
	<p>EPH CONTROLS R27-HW 2 Zone Programmer [pdf] Instruction Manual R27-HW 2 Zone Programmer, R27-HW, 2 Zone Programmer, Zone Programmer, Programmer</p>

References

- [EPH Home Page - EPH Controls](#)
- [EPH Home Page - EPH Controls](#)