




EPH CONTROLS R27-RF 2 Zone RF Programmer Instruction Manual

[Home](#) » [EPH CONTROLS](#) » EPH CONTROLS R27-RF 2 Zone RF Programmer Instruction Manual 



Installation Instructions
For use in normal environments.



R27-RF – 2 Zone RF Programmer



Contents

- [1 R27-RF 2 Zone RF Programmer](#)
- [2 Factory default settings](#)
- [3 Specifications & wiring](#)
- [4 Setting the date and time](#)
- [5 Frost protection function](#)
- [6 Master reset](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

R27-RF 2 Zone RF Programmer

Important: Keep this document

This 2 zone RF programmer is designed to provide ON/OFF control for 2 zones, with the value added application of in built frost protection.









CAUTION! Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.

- Before commencing any work on the electrical connections, you must first disconnect the programmer from the mains. None of the 230V connections must be live until the installation has been completed and the housing is closed. Only qualified electricians or authorised service staff are permitted to open the programmer. Disconnect from mains supply in the event of any damage to any buttons.
- There are parts that carry mains voltage behind the cover. The programmer must not be left unsupervised when open. (Prevent non specialists and especially children from gaining access to it.)
- If the programmer is used in a way not specified by the manufacturer, its safety may be impaired.
- Ensure that this wireless enabled programmer is installed 1 metre from any metallic object, television, radio or wireless internet transmitter.
- Prior to setting the programmer, it is necessary to complete all required settings described in this section.
- Never remove this product from the electrical baseplate. Do not use sharp tools to push any button.

This programmer can be mounted in the following ways:

1. Directly wall mounted
2. Mounted to a recessed conduit box

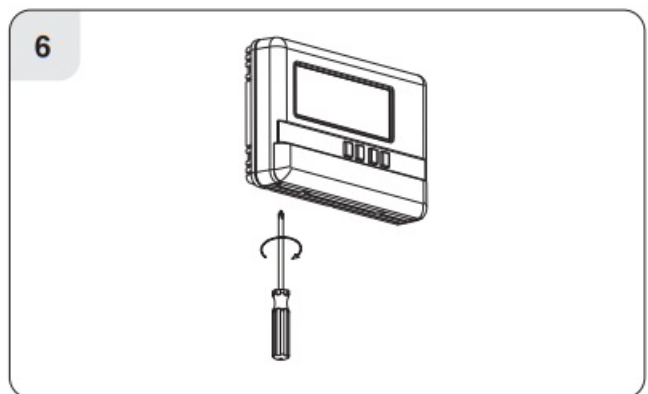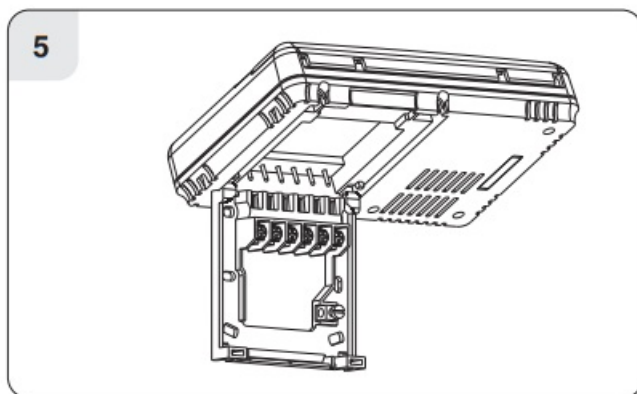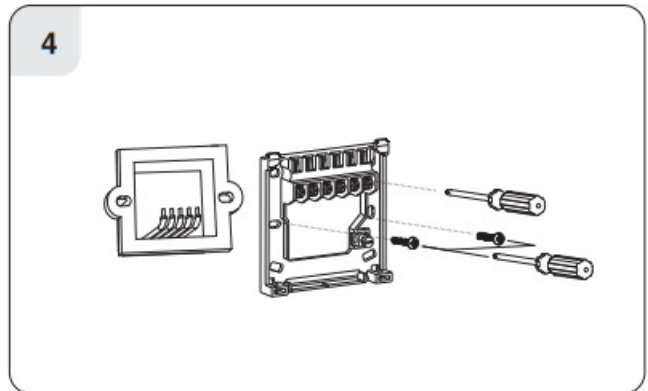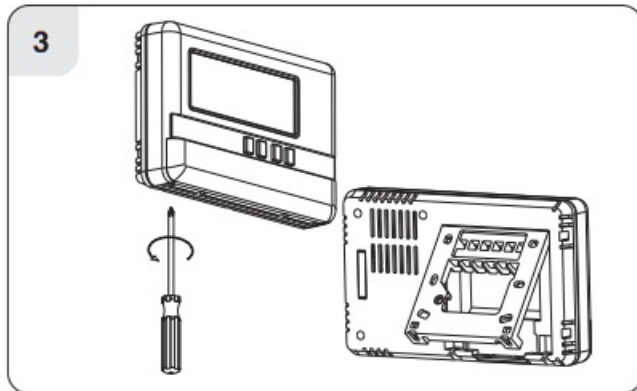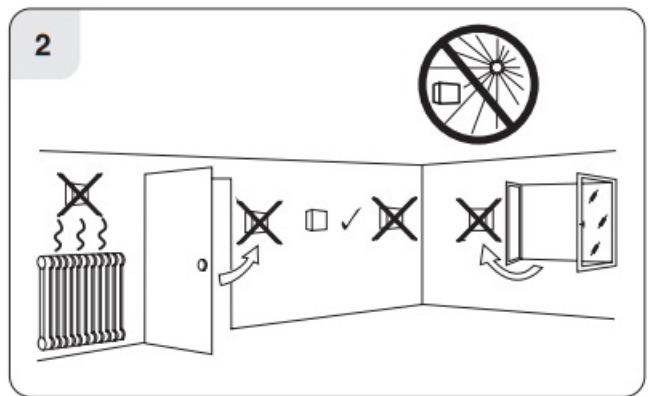
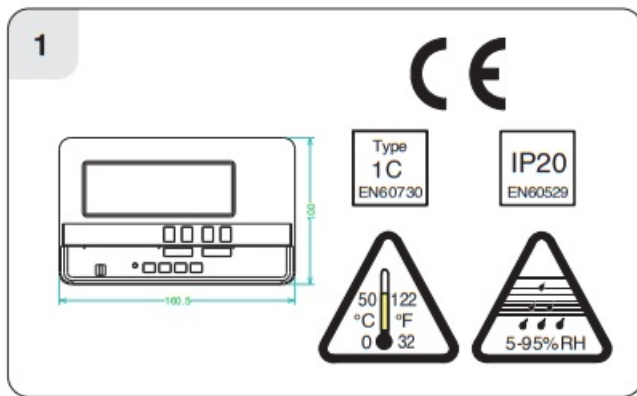


Factory default settings

Contacts: 230 Volt
 Program: 5/2D
 Backlight: On
 Keypad: Unlocked
 Frost Protection: Off
 Clock type: 24 Hr Clock
 Day-Light Saving

Specifications & wiring

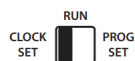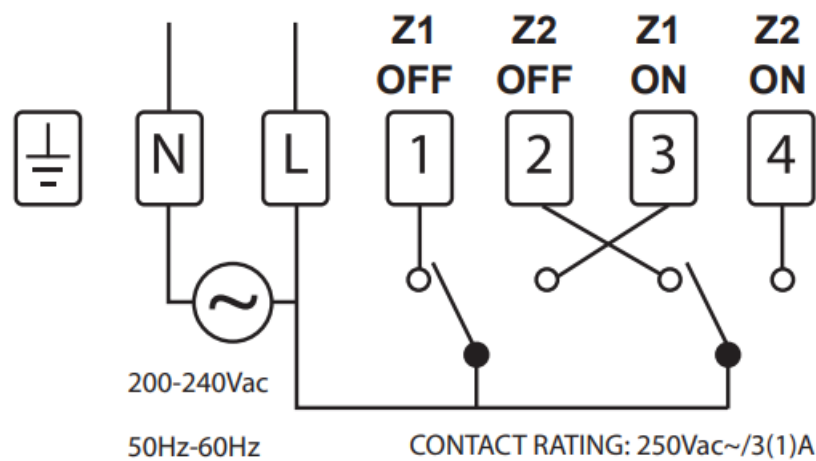


Power Supply:	230 Vac
Ambient Temp:	0~35°C
Contact Rating:	250 Vac 3A(1A)
Program Memory backup:	1 year
Battery:	3Vdc Lithium LIR 2032
Backlight:	Blue
IP rating:	IP20
Backplate:	British System Standard
Pollution degree 2:	Resistance to voltage surge 2000V as per EN 60730
Automatic Action:	Type 1.S
Software:	Class A






Setting the date and time

Lower the cover on the front of the programmer.
Move the selector switch to the CLOCK SET position.

- Press the or buttons to select the day. Press
- Press the or buttons to select the month. Press
- Press the or buttons to select the year. Press
- Press the or buttons to select the hour. Press

Press the  or  buttons to select the minute. Press 

Press the  or  buttons to select 5/2D, 7D or 24H Press 



Frost protection function





Off



Selectable range 5-20°C This function is set to protect pipes against freezing or to prevent low room temperature when the programmer is programmed to be OFF or is manually OFF.

Frost protection can be activated by following the procedure below. Move the selector switch to the RUN position.

Press both the  and  buttons for 5 seconds, to enter selection mode.

Press either the  or  buttons to turn On or turn Off frost protection.

Press  button to confirm

Press either the  or  buttons to increase or decrease the desired frost protection setpoint.

Press  to select.

All zones will be switched ON in the event of room temperature falling below the frost protection setpoint.

Master reset

Lower the cover on the front of the programmer. There are four hinges holding the cover in place. Between the 3rd and 4th hinges there is a circular hole. Insert a ball point pen or similar object to master reset the programmer. After pressing the master reset button, the date and time will now need to be reprogrammed.



EPH Controls Ireland


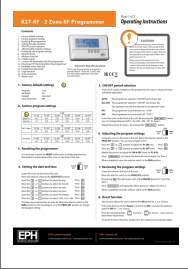
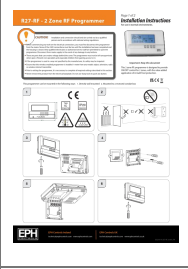
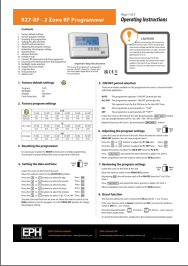
technical@ephcontrols.com www.ephcontrols.com

EPH Controls UK

technical@ephcontrols.co.uk www.ephcontrols.co.uk

20221107_R27-RF_InsIns_PK

Documents / Resources

	<p>EPH CONTROLS R27-RF 2 Zone RF Programmer [pdf] Instruction Manual R27-RF 2 Zone RF Programmer, R27-RF, 2 Zone RF Programmer, Zone RF Programmer, RF Programmer</p>
	<p>EPH CONTROLS R27-RF 2 Zone RF Programmer [pdf] Instruction Manual R27-RF 2 Zone RF Programmer, R27-RF, 2 Zone RF Programmer, RF Programmer, Programmer</p>
	<p>EPH CONTROLS R27-RF 2 Zone RF Programmer [pdf] Instruction Manual R27-RF 2 Zone RF Programmer, R27-RF, 2 Zone RF Programmer, RF Programmer, Programmer</p>
	<p>EPH CONTROLS R27-RF 2 Zone RF Programmer [pdf] Owner's Manual R27-RF, R27-RF 2 Zone RF Programmer, 2 Zone RF Programmer, RF Programmer</p>

References

- [EPH Home Page - EPH Controls](#)
- [EPH Home Page - EPH Controls](#)