



# EPH CONTROLS R37-HW 3 Zone Programmer Installation Guide

[Home](#) » [EPH CONTROLS](#) » EPH CONTROLS R37-HW 3 Zone Programmer Installation Guide

## Contents [ [hide](#) ]

- 1 EPH CONTROLS R37-HW 3 Zone Programmer
- 2 Contents
- 3 CAUTION
- 4 DIMENSION
- 5 INSTALLATION
- 6 Factory default settings
- 7 Specifications & wiring
- 8 Master reset
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

EPH CONTROLS

## EPH CONTROLS R37-HW 3 Zone Programmer



## Contents

1. Factory default settings
2. Specifications & wiring
3. Master reset

## CAUTION

Installation and connection should only be carried out by a qualified person and in accordance with national wiring regulations.

- Before commencing any work on the electrical connections, you must first disconnect the programmer from the mains. None of the 230V connections must be live until the installation has been completed and the housing is closed. Only qualified electricians or authorised service staff are permitted to open the program. Disconnect from mains supply in the event of any damage to any buttons.
- There are parts that carry mains voltage behind the cover. The programmer must not be left unsupervised when open. (Prevent nonspecialists and especially children from gaining access to it.)
- If the programmer is used in a way not specified by the manufacturer, its safety may be impaired.
- Prior to setting the time switch, it is necessary to complete all required settings described in this section.
- Never remove this product from the electrical baseplate. Do not use sharp tools to push any button.

**Important:** Keep this document


This 3 zone programmer is designed to provide ON/OFF control for one hot water and two heating zones, with the value added application of in built frost protection and keypad lock.

This programmer can be mounted in the following ways:





1. Directly wall mounted

2. Mounted to a recessed conduit box

## DIMENSION

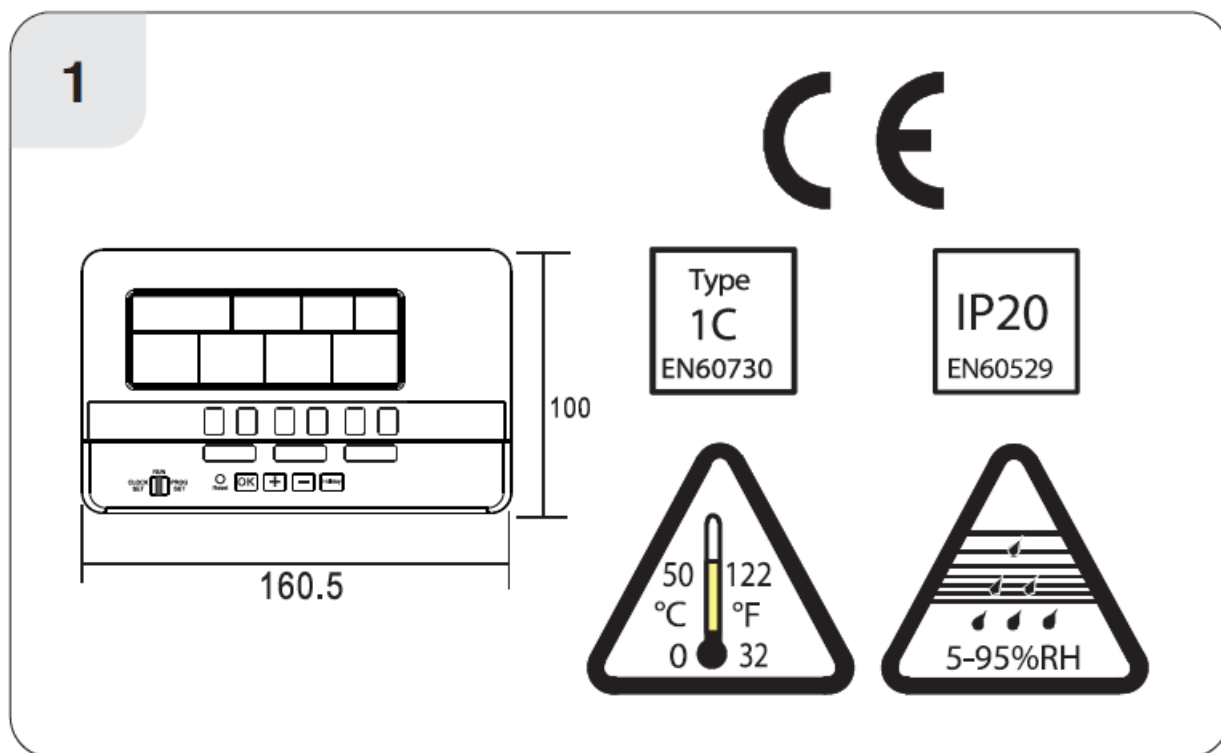


## INSTALLATION

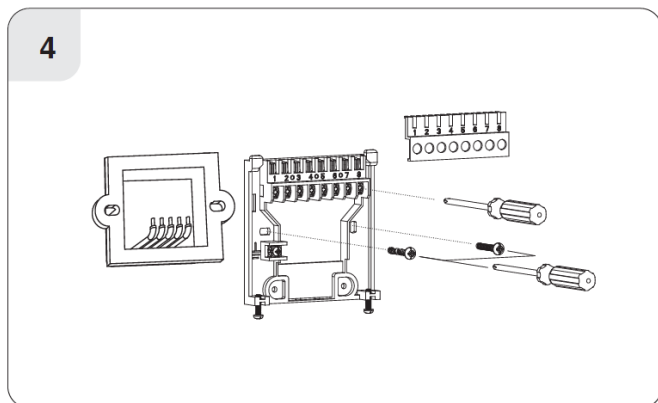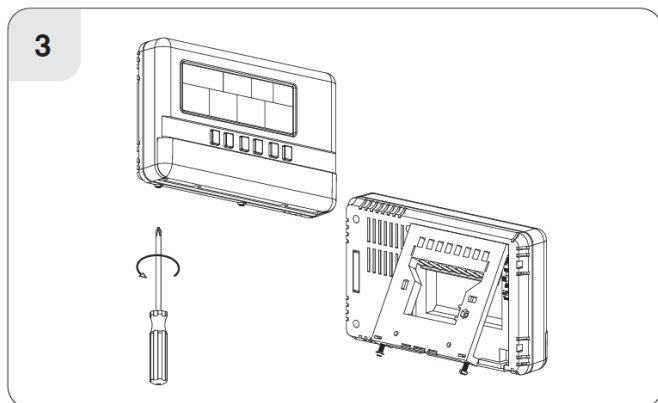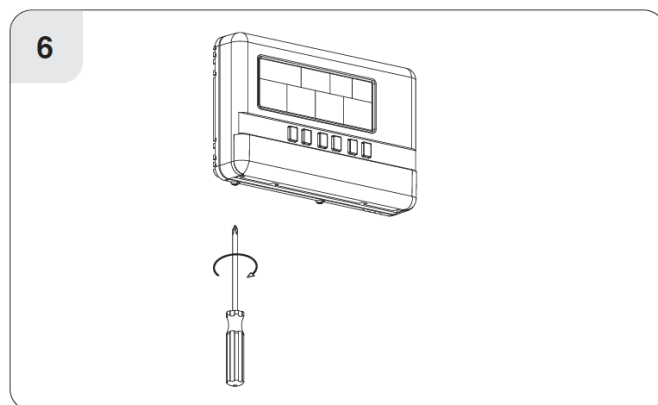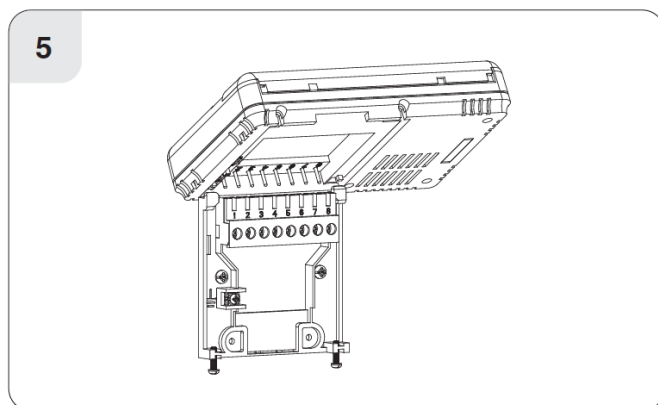


## WARNING

2

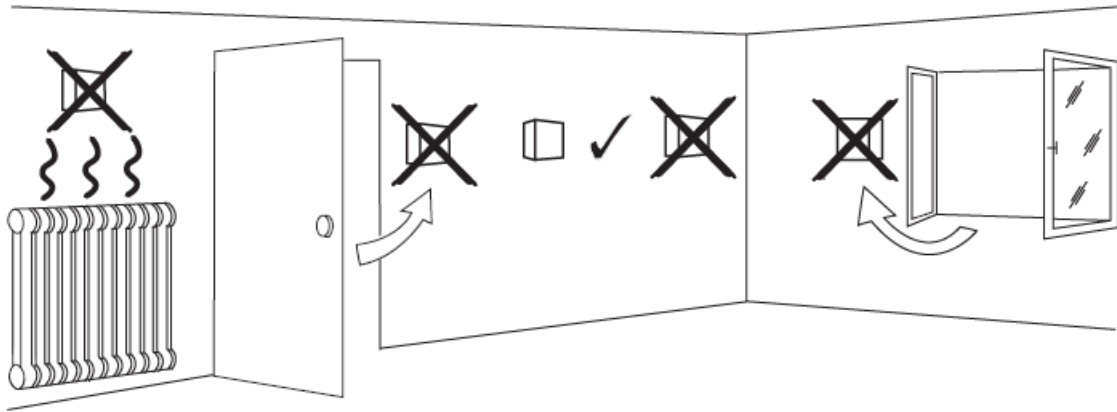

## Factory default settings

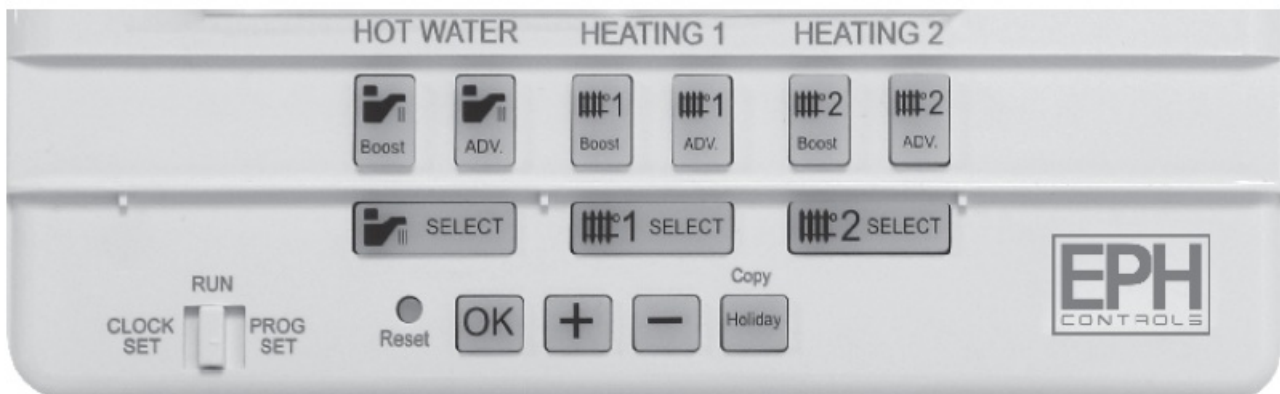

- **Contacts:** 230 Volt
- **Program:** 5/2D
- **Backlight:** On
- **Keypad:** Unlocked
- **Frost Protection:** Off
- **Clock type:** 24 Hr Clock


Day-Light Saving

## Specifications & wiring

- **Power Supply:** 230 Vac
- **Ambient Temp:** 0~35°C
- **Contact Rating:** 250 Vac 3A(1A)

## Program Memory

- **backup:** 1 year
- **Battery:** 3Vdc Lithium LIR 2032
- **Backlight:** Blue
- **IP rating:** IP20
- **Backplate:** British System Standard
- **Pollution degree 2:** Resistance to voltage surge 2000V as per EN 60730

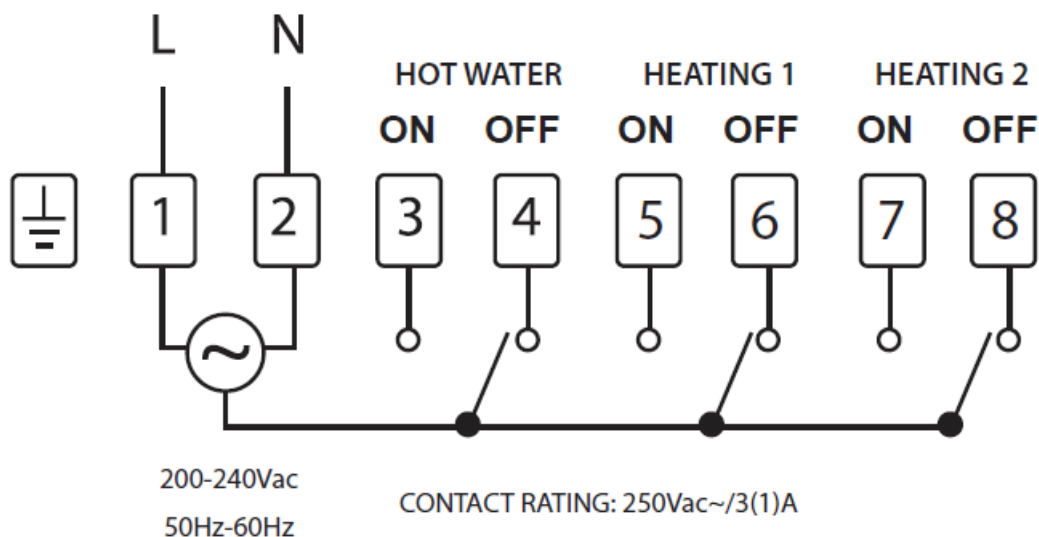

## Master reset

- Lower the cover on the front of the programmer. There are four hinges holding the cover in place.
- Between the 3rd and 4th hinges, there is a circular hole. Insert a ball point pen or similar object to master reset the programmer.
- After pressing the master reset button, the date and time will now need to be reprogrammed.


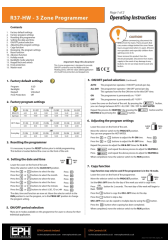

## EPH Controls Ireland

- [technical@ephcontrols.com](mailto:technical@ephcontrols.com)
- [www.ephcontrols.com](http://www.ephcontrols.com)

## EPH Controls UK

- [technical@ephcontrols.co.uk](mailto:technical@ephcontrols.co.uk)
- [www.ephcontrols.co.uk](http://www.ephcontrols.co.uk)

## Documents / Resources

	<p><a href="#">EPH CONTROLS R37-HW 3 Zone Programmer</a> [pdf] Installation Guide</p> <p>R37-HW 3 Zone Programmer, R37-HW, R37-HW Programmer, 3 Zone Programmer, Programmer</p>
	<p><a href="#">EPH CONTROLS R37-HW 3 Zone Programmer</a> [pdf] Instruction Manual</p> <p>R37-HW 3 Zone Programmer, R37-HW, 3 Zone Programmer, Programmer</p>
	<p><a href="#">EPH CONTROLS R37-HW 3 Zone Programmer</a> [pdf] Instruction Manual</p> <p>R37-HW 3 Zone Programmer, R37-HW, 3 Zone Programmer, Zone Programmer, Programmer</p>

References

- [EPH Home Page - EPH Controls](#)
- [EPH Home Page - EPH Controls](#)