



Epilog FUSION GALVO G100 Machine Tools Cutting and Forming Instruction Manual

[Home](#) » [Epilog](#) » Epilog FUSION GALVO G100 Machine Tools Cutting and Forming Instruction Manual 



SECTION 3: SOFTWARE INSTALLATION

Contents

- [1 Epilog Software Suite Instructions](#)
- [2 Uninstalling the Previous Job Manager](#)
- [3 How to Install the Epilog Software Suite](#)
- [4 Windows 8/10: Ethernet Installation](#)
- [5 Windows 8/10: USB Installation](#)
- [6 Troubleshooting the Job Manager](#)
- [7 Important Job Manager Notes](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

Epilog Software Suite Instructions


The Epilog Software Suite consists of the Job Manager & Dashboard. The Software Suite is a powerful new tool that will quickly become one of your favorite features on your laser system. From one piece of software, you can access any job you have sent to the laser, view the settings you used on any past job, re-run projects, access your material database, and much more.

- Windows 7/8/10/11 is required to use the Epilog Software Suite.


Uninstalling the Previous Job Manager

If you have installed a previous version of the Job Manager on your computer, you must uninstall it first before you continue.


1. Go to Control Panel > Programs and Features and click on Epilog Job Manager

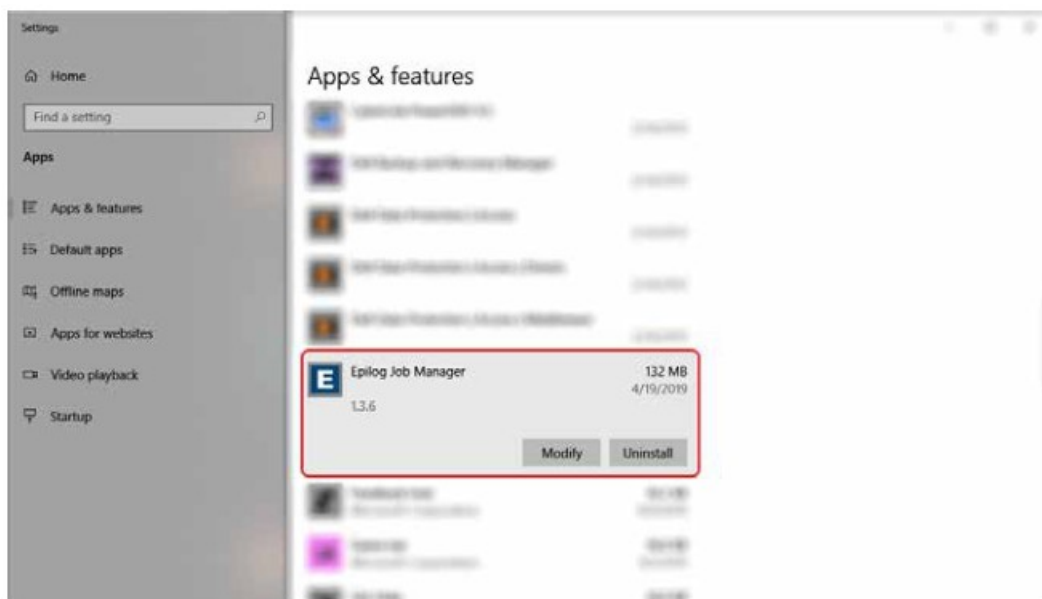


2. Click "Uninstall" and confirm if asked again.

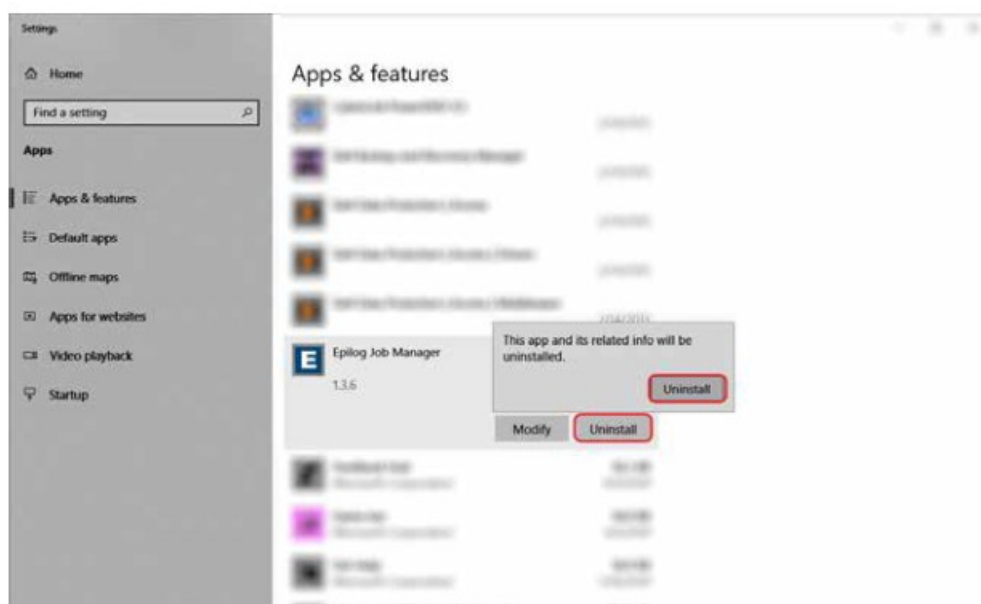


3. Select "Remove all components" and then click "Next".

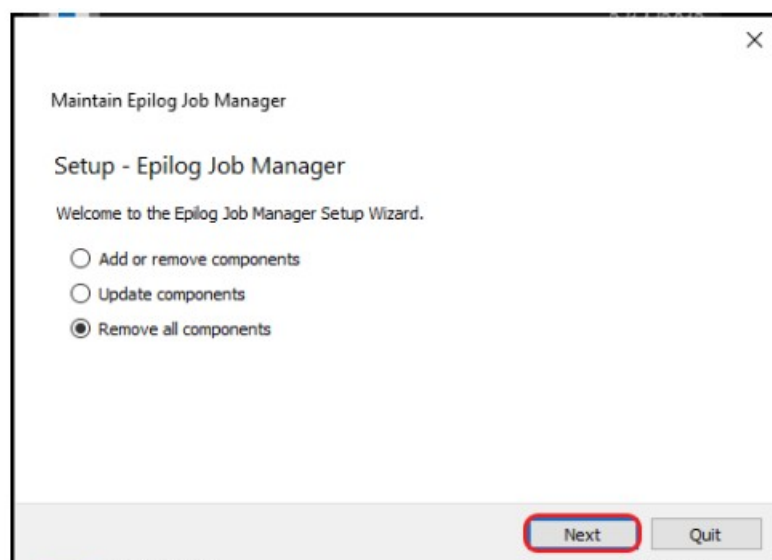

4. Click "Uninstall".

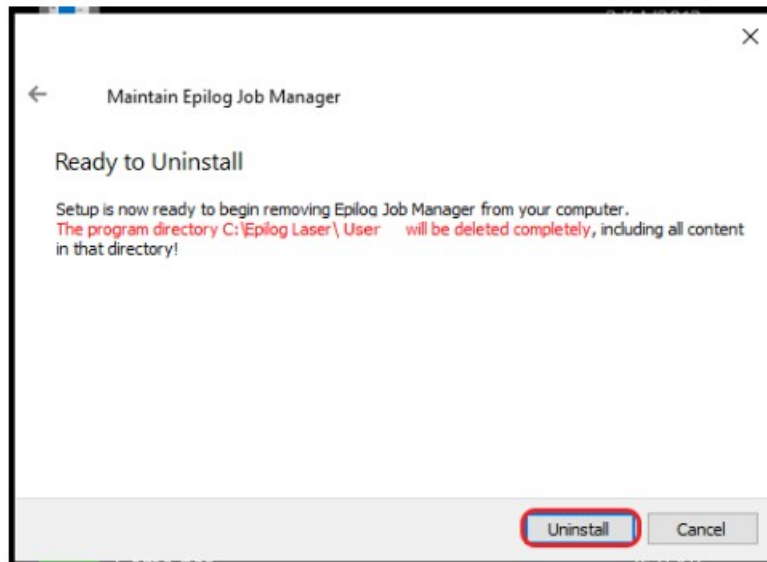

5. Click Finish to complete the uninstallation of the previous Job Manager.

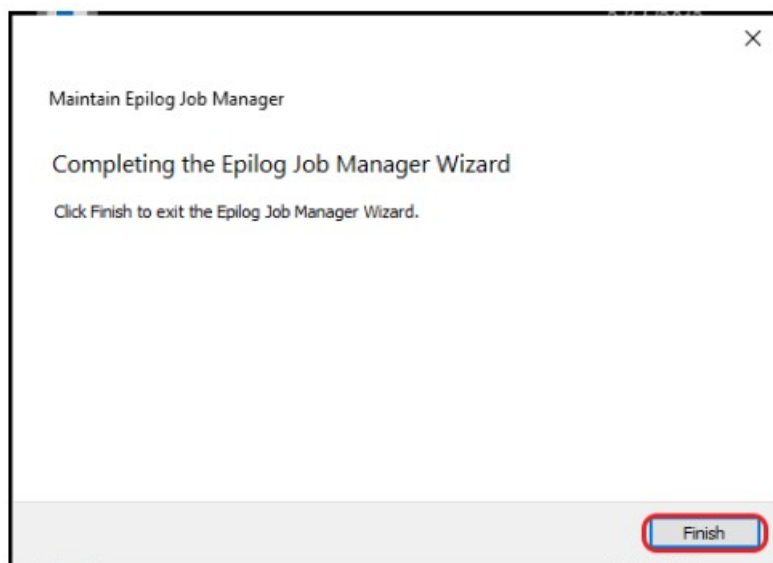


How to Install the Epilog Software Suite


1. Go to epiloglaser.com/drivers and select the Epilog Fusion Galvo. Then click on the Epilog Software Suite to download the installation file.
2. The installation file will download as a .zip folder that will need to be extracted. Right click the folder and click




"Extract All". Once finished, double click on the EpilogSuite file. Note: Make sure that the "Ghostscript" folder included in the download is always in the same location as your Epilog Suite installation file, or the installation will not be able to complete.

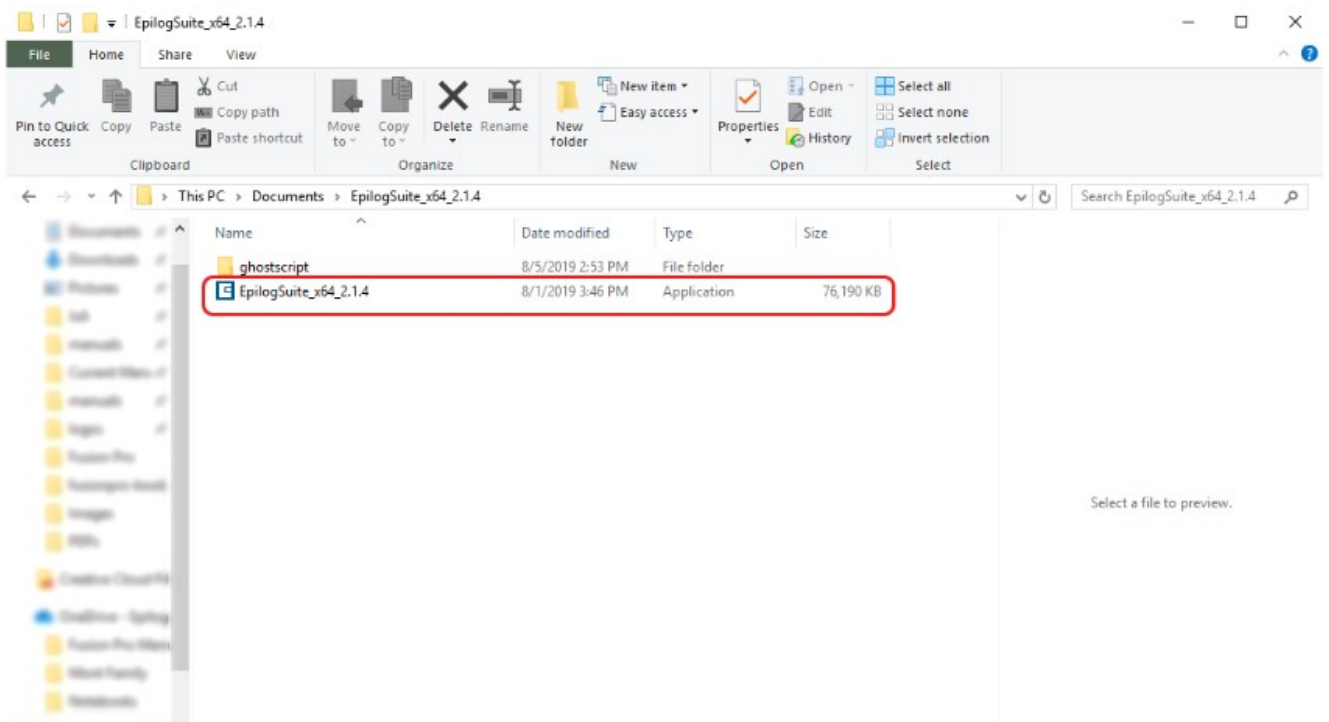


3. A welcome screen appears, click Next.

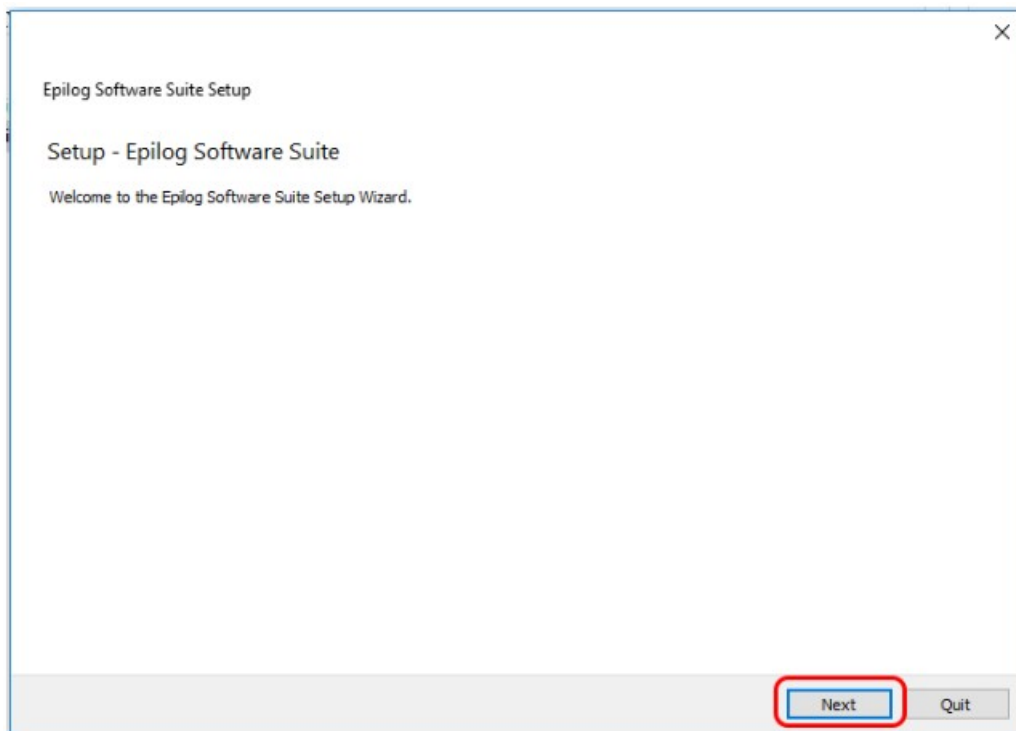


4. Select a directory location for the installation file and click Next.

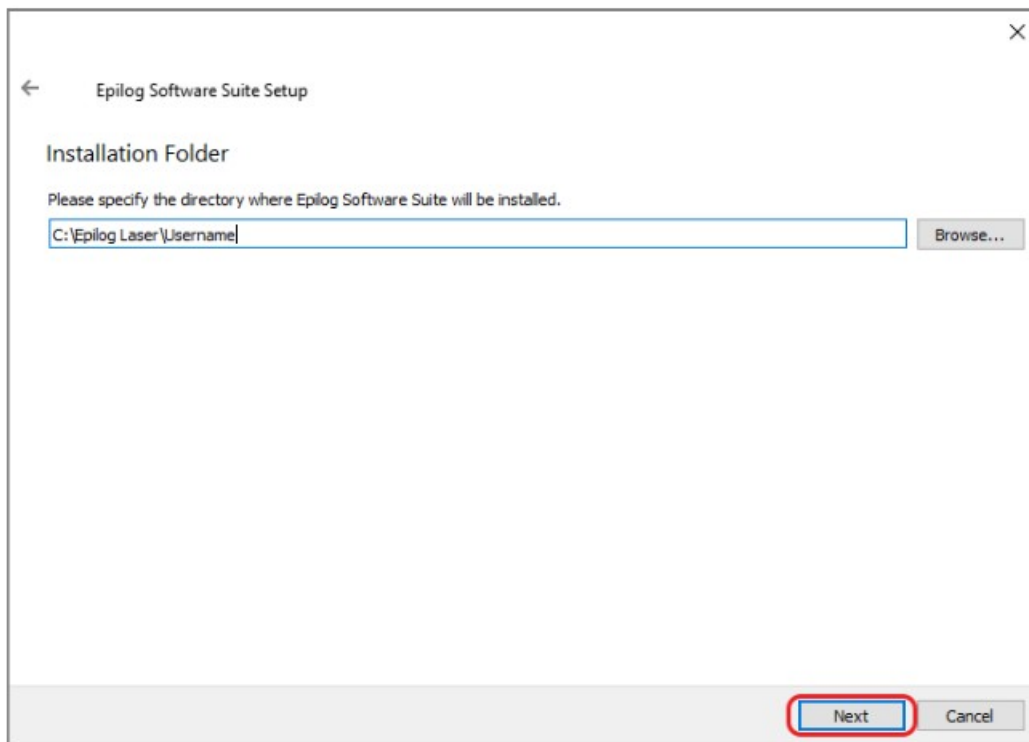


5. Read and accept the license agreements and click Next.

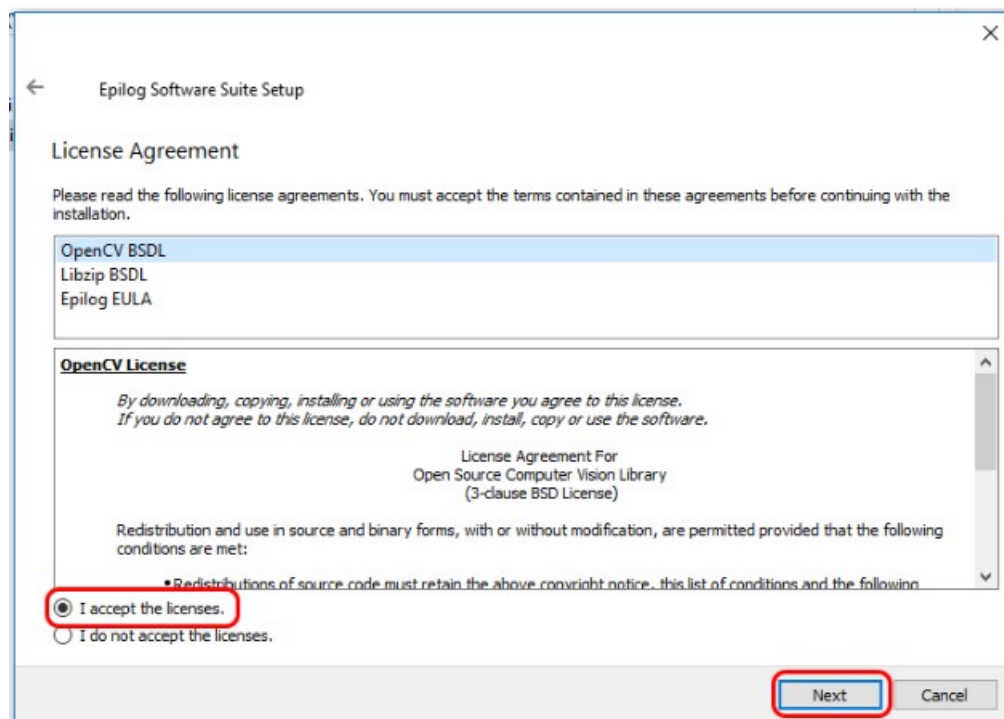


6. Click Next to use the default start menu, or choose a start menu name of your choice.

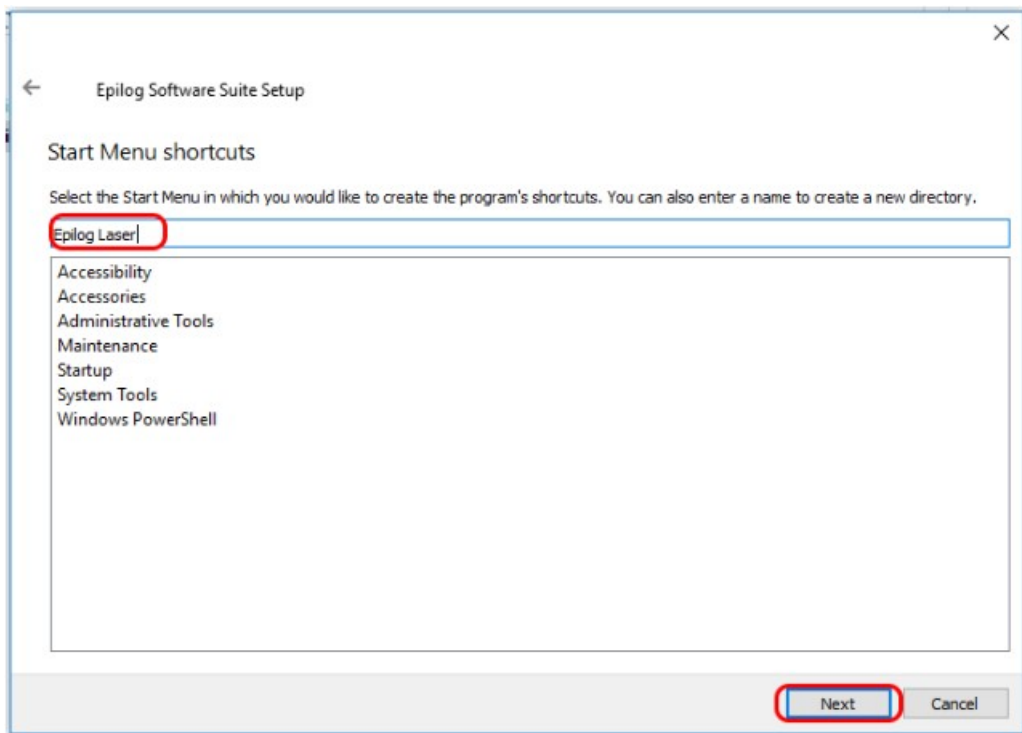


7. Click Install to begin the installation.

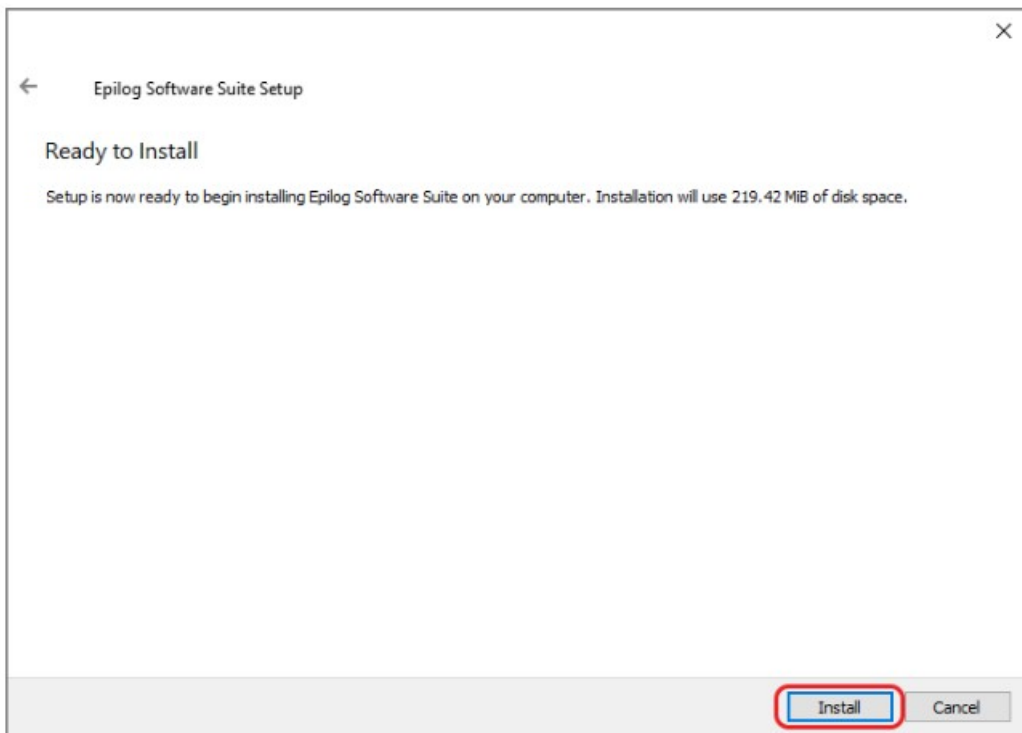


8. The Epilog Software Suite will begin installing, during the installation a dialog box will pop up to also install the AGPL Ghostscript Package, click Next.

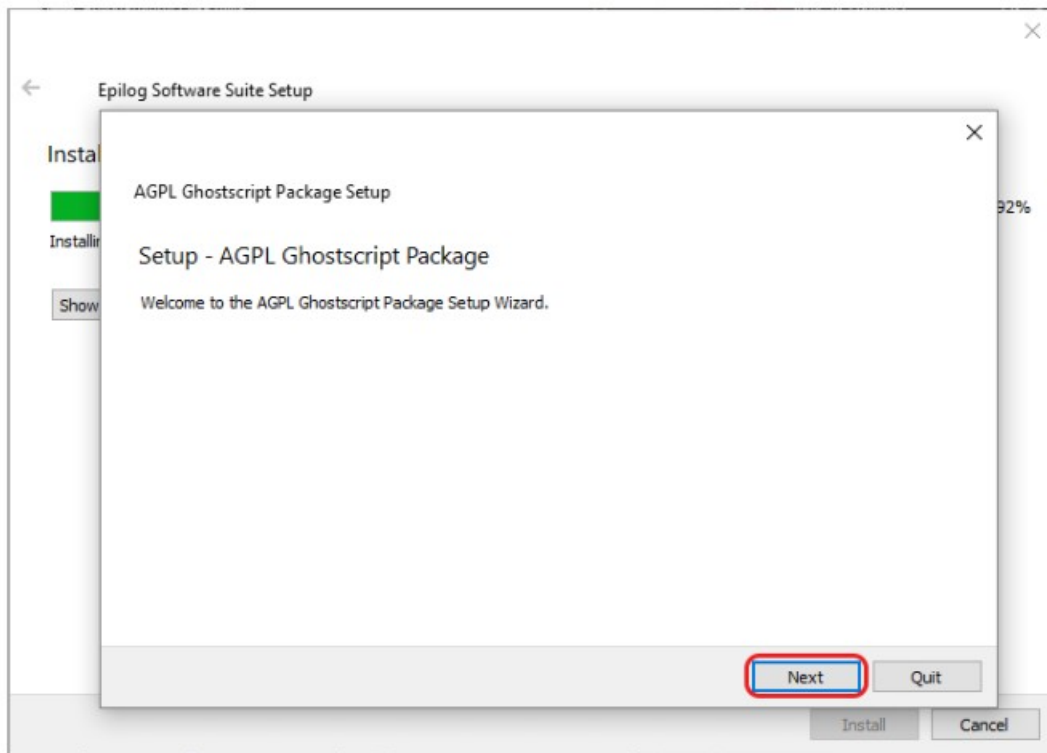


9. Read and accept the AGPL Ghostscript License Agreement, then click Next.

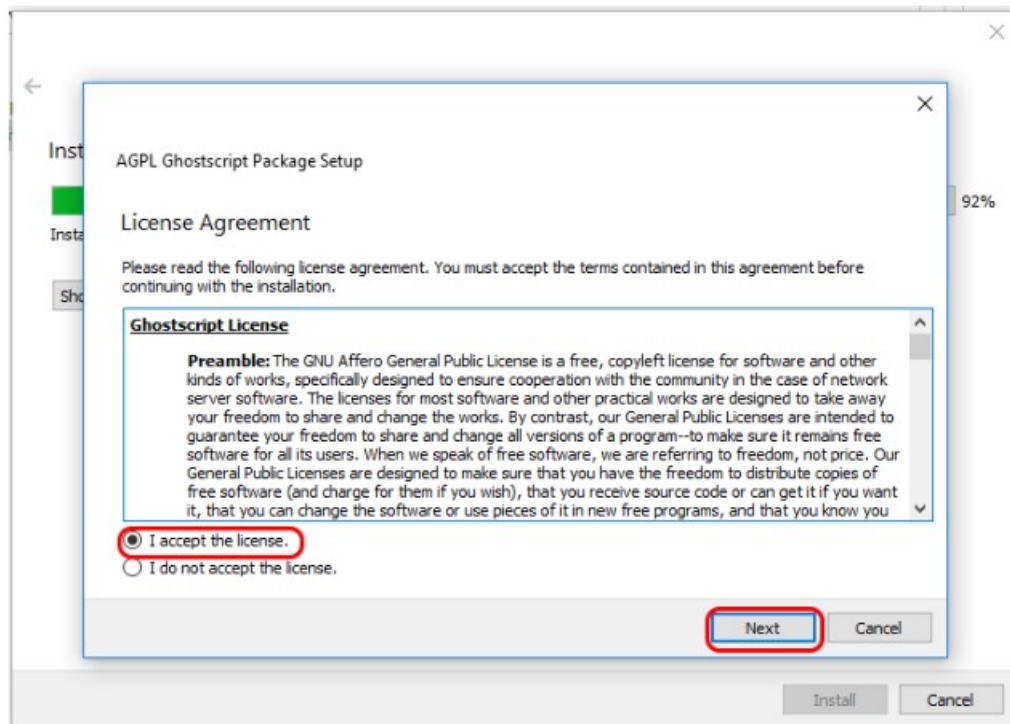


10. Click Finish to complete the AGPL Ghostscript installation and resume the Epilog Software Suite installation.

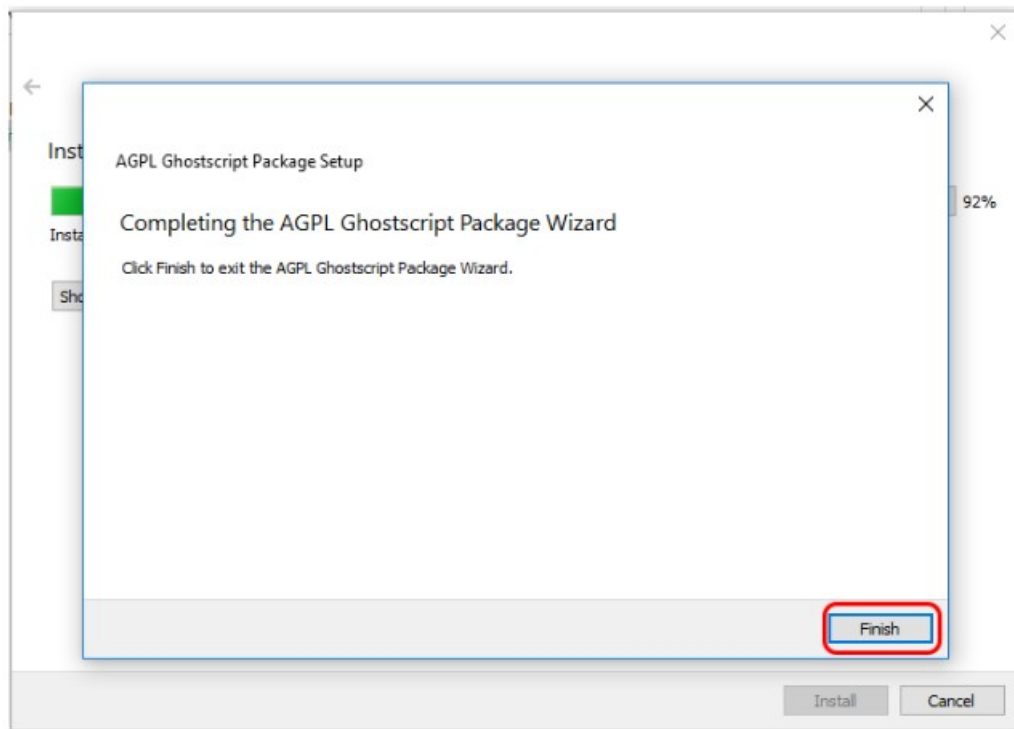

11. Select whether or not you want to run the program now. Click Finish to complete the installation.

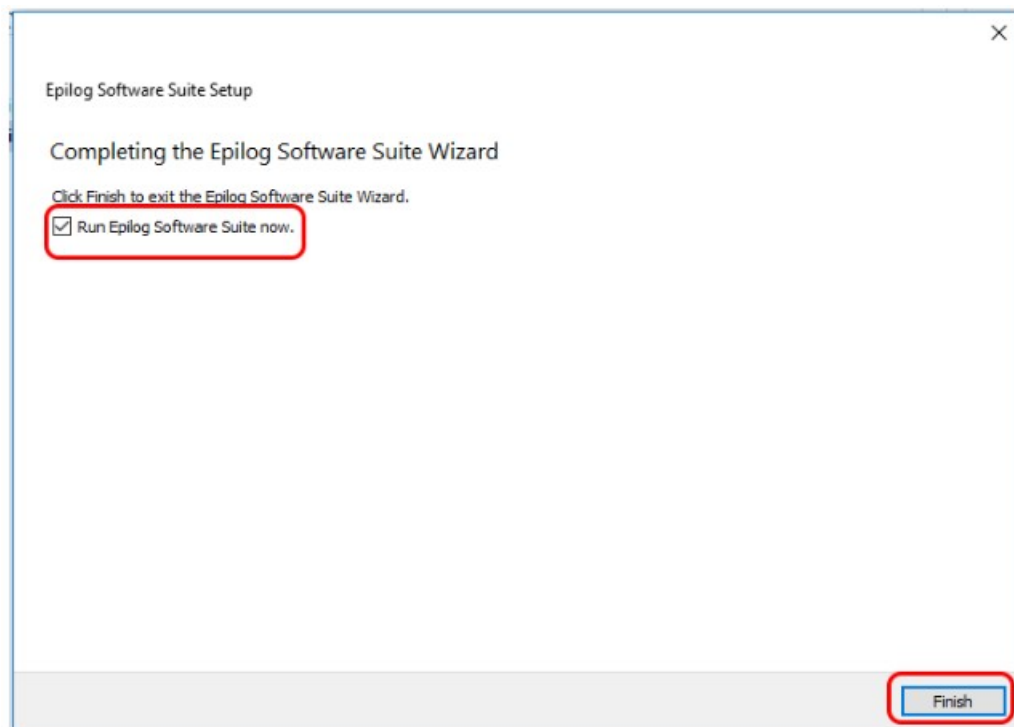

12. An icon for the Job Manager will be automatically added to your Desktop. You are now ready to use the Job Manager.

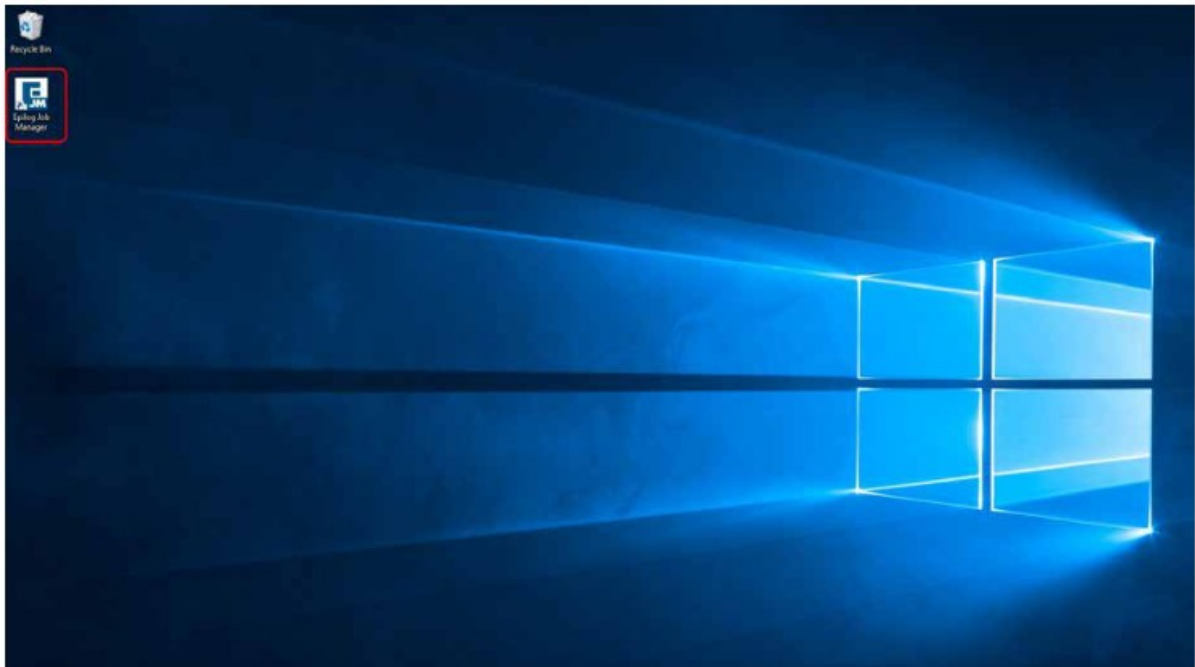


Windows 8/10: Ethernet Installation


Set Up TCP/IP Address in the Computer

Go to your Network and Sharing Center in your computer's Control Panel.


1. Click Change Adapter Settings.

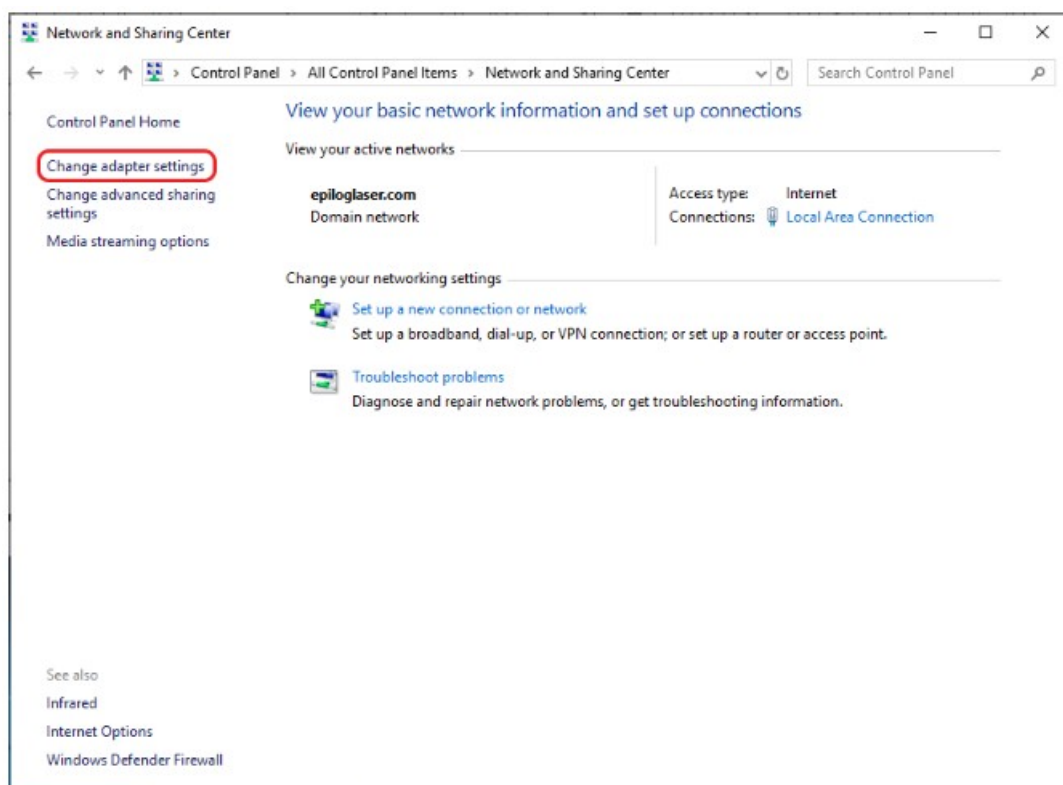

2. Right click Local Area Connection, then click Properties.

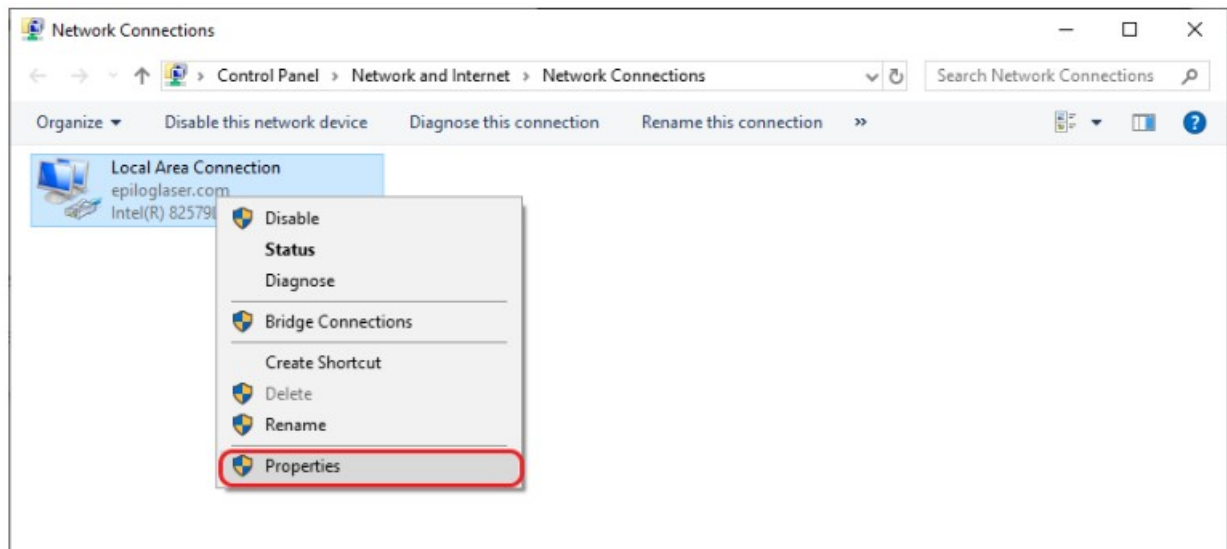

3. Select Internet Protocol Version 4 (TCP/IP). Make sure you do not select Version 6. Then click Properties.

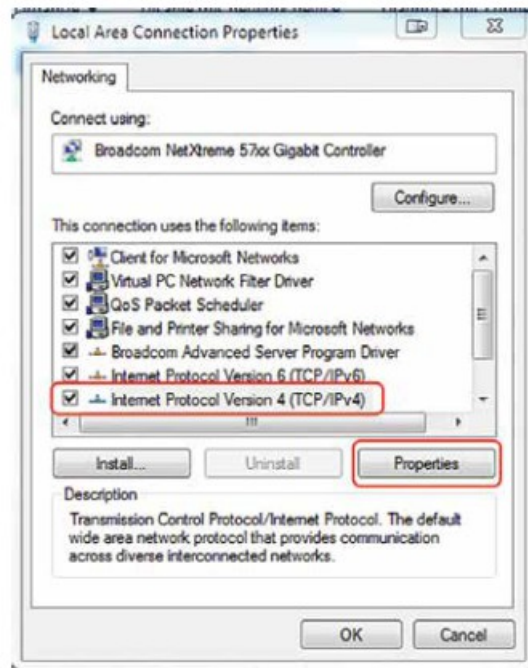


4. Select Use the following IP Address. Type in the following IP Address: 192.168.3.3.




This number is not an error; the last digit of the IP address in this window must be different than the IP address you set in the laser.

5. Type in a Subnet Mask of 255.255.255.0, then click OK.

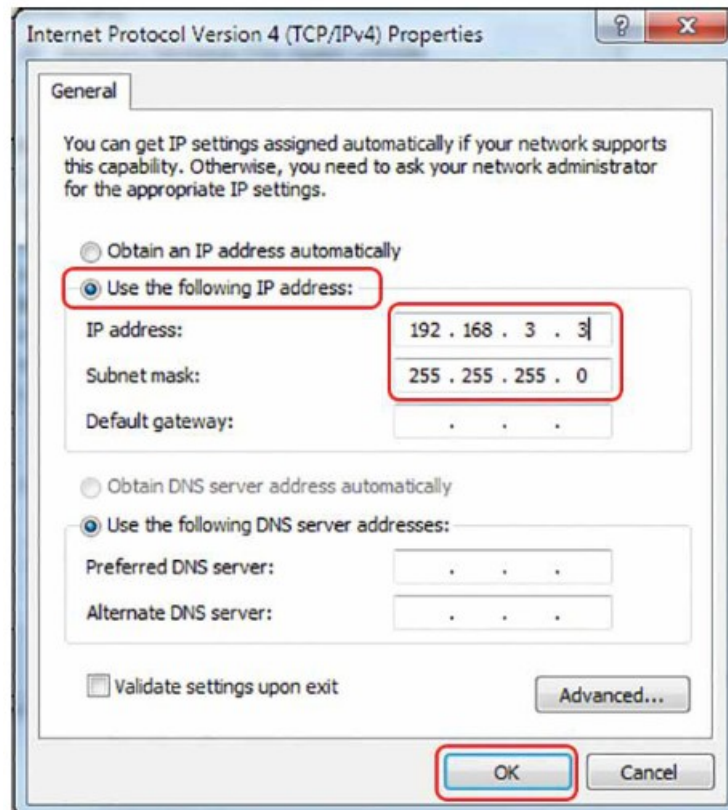

Windows 8/10: USB Installation

To prepare your computer for USB installation, the IP Address under your Internet Protocol properties should be set to "Obtain an IP address automatically."

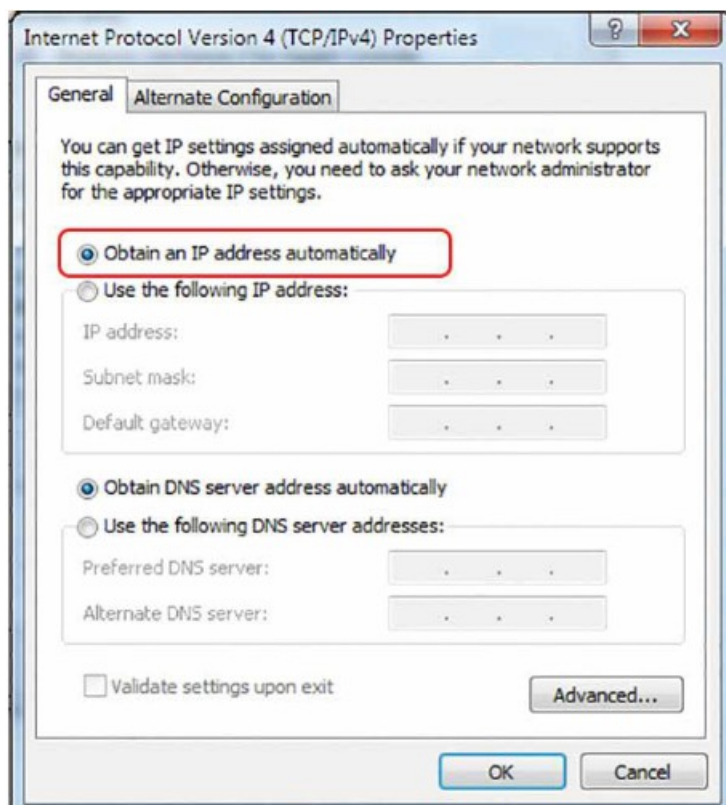


The IP Address on your machine should also match the IP Address on the Job Manager. For more information, see "USB Connection" on page 19.

Troubleshooting the Job Manager

If you were unable to install the Job Manager, it's possible that your Anti-Virus software is blocking installation. To disable Symantec Anti-Virus software, choose Options. Other anti-virus packages should have something similar to Symantec.



Disable all Virus and Spyware Protection Features. After the Job Manager has been installed go back into your Anti-Virus software and re-enable the setting that was disabled.

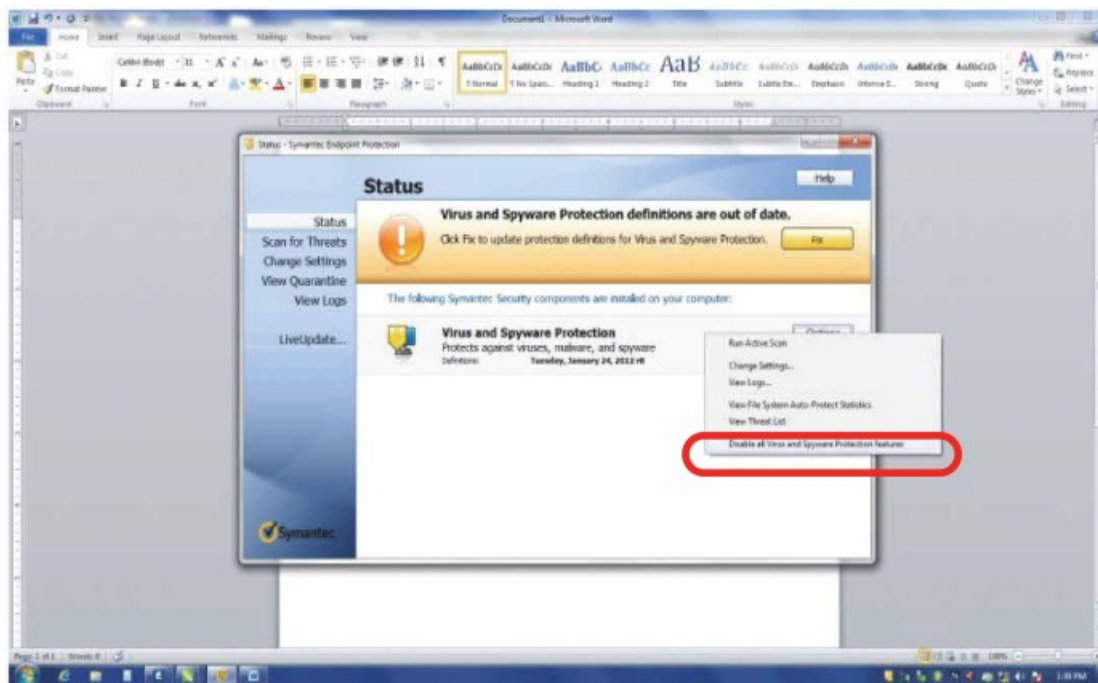

Important Job Manager Notes

- Warning: Before activating your laser, install the newest version of the Software Suite to properly associate the correct machine with the Job Manager.
- We suggest a minimum of 1 GB of free RAM space when managing very large engraving and vector jobs.

Documents / Resources

<div><div>SECTION 3 SOFTWARE INSTALLATION</div><div>Epilog Software Suite Instructions</div><div>1. Uninstalling the previous version of the software (if necessary) is recommended. To do this, go to the Control Panel > Programs and Features > Epilog Software Suite > Uninstall. Follow the prompts to remove the software. If you are unsure, contact your local distributor for assistance.</div><div>2. Installing the software</div><div>Uninstalling the Previous Job Manager</div><div>1. If you have previously installed the Job Manager, you must first uninstall it. To do this, go to the Control Panel > Programs and Features > Epilog Job Manager > Uninstall. Follow the prompts to remove the software. If you are unsure, contact your local distributor for assistance.</div><div>2. Installing the Job Manager</div><div>1. If you have not previously installed the Job Manager, you must first install it. To do this, go to the Control Panel > Programs and Features > Epilog Job Manager > Install. Follow the prompts to install the software. If you are unsure, contact your local distributor for assistance.</div></div>	<p>Epilog FUSION GALVO G100 Machine Tools Cutting and Forming [pdf] Instruction Manual</p> <p>FUSION GALVO G100 Machine Tools Cutting and Forming, GALVO G100 Machine Tools Cutting and Forming, Machine Tools Cutting and Forming, Cutting and Forming, Forming</p>
---	--

References

- [E Drivers and Firmware Updates](#)