



EPOCH 7397 Super Mario Hover Shell Strike Instruction Manual

[Home](#) » [EPOCH](#) » EPOCH 7397 Super Mario Hover Shell Strike Instruction Manual 

EPOCH

Instruction Manual

Contents

- [1 HOW TO PLAY](#)
- [2 HOW TO ASSEMBLE](#)
- [3 How to insert batteries](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

HOW TO PLAY




1. Puck hovers independently and glides across any smooth surface!
2. Use any available space for a one-on-one battle!

HOW TO ASSEMBLE

Note:

- Please use alkaline batteries. Battery life-about 1 hour of continuous use.
- Please ask your parent or guardian to install or replace batteries.
- Battery life is when a new alkaline battery(1.5V) is used. Battery life might be shorter depending on use, Battery life might be shorter depending on use, battery type, and battery capacity(1.5V or less)
- Be sure to remove the battery when not using the product for a long time.
- Please make sure to turn the switch OFF after you have finished playing.

How to insert batteries

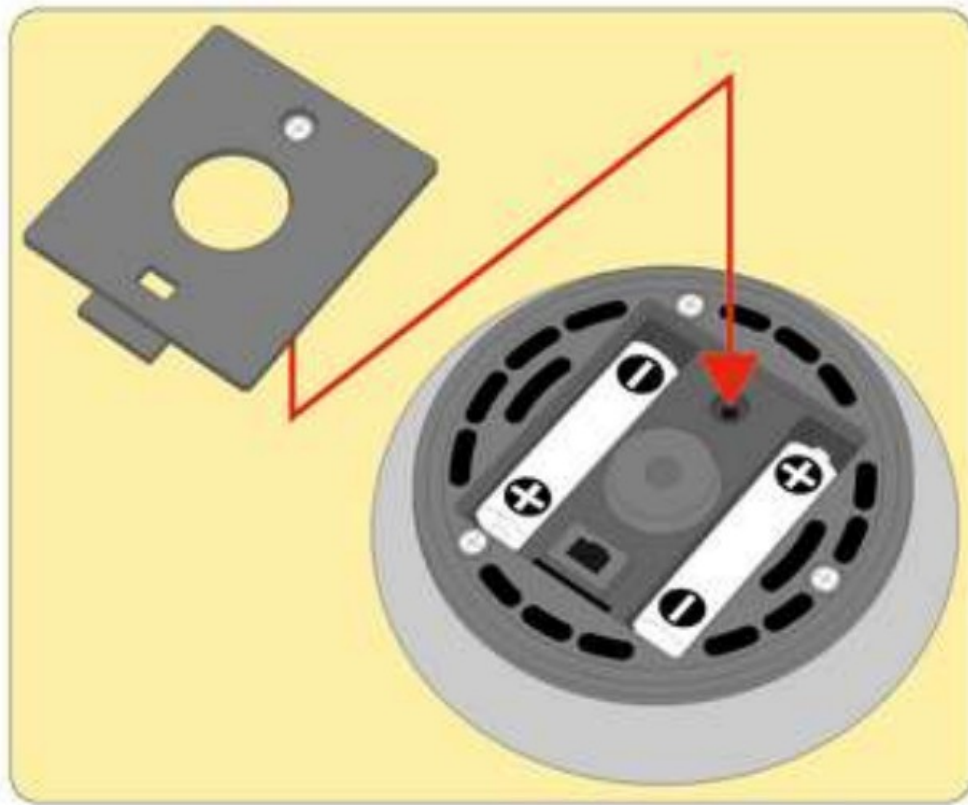

1. Loosen the screw of the battery compartment lid with a cross head screwdriver and open the battery compartment lid.
2. Insert 2 AAA(LR03) batteries (sold separately) as shown in the diagram.
Be sure to insert the batteries in the proper positive/negative(+/-) direction, and always insert the negative(-) side of the battery first.



Protect the environment by not disposing of this product with household waste (2012/19 /EU). Check with your local authority for recycling advice and facilities.

Use of rechargeable batteries is not recommended for this product.


BATTERY CAUTIONS

1. Batteries should be removed and replaced by an adult or under adult supervision.
2. Non-rechargeable batteries should not be recharged.
3. Rechargeable batteries are always to be charged under adult supervision.
4. Rechargeable batteries are to be removed from the toy before being charged.
5. Do not mix different types of battery or new and old batteries.
6. Use only batteries of the type recommended.
7. Insert batteries with the correct polarity.
8. Remove exhausted batteries promptly from the toy.
9. Do not short circuit the supply terminals.
10. Remove batteries before storing the toy for long periods.
11. Do not discard batteries in a fire. They may explode or leak their contents.
12. Never attempt to open batteries.

*Please retain the above information for future reference.

EPOCH

Documents / Resources

	<p>EPOCH 7397 Super Mario Hover Shell Strike [pdf] Instruction Manual 7397 Super Mario Hover Shell Strike, 7397, Super Mario Hover Shell Strike, Mario Hover Shell Strike, Hover Shell Strike, Shell Strike, Strike</p>
---	---

References

- [User Manual](#)