

EPOMAKER AK84S USB Bluetooth Dual Model User Manual

Home » EPOMAKER » EPOMAKER AK84S USB Bluetooth Dual Model User Manual

Contents

- 1 EPOMAKER AK84S USB Bluetooth Dual Mode
- 2 Specifications
- **3 Product Usage Instructions**
- 4 Better for MAC
- 5 FN +6 Also for WIN
- 6 in function description
- 7 Define mode
- 8 Fn function (Reference Settings, can be modified by driver)
- 9 FAQs
- 10 Documents / Resources
 - 10.1 References



EPOMAKER AK84S USB Bluetooth Dual Mode



Specifications

• Model: AK84S

· Connectivity: USB Wired, Bluetooth

· Compatibility: MAC, Windows

• Key Features: Dual Mode, PBT Keycaps, Customizable Function Keys

Product Usage Instructions

Keyboard Connectivity

To connect the keyboard via USB, simply plug in the USB cable to your computer. For Bluetooth connectivity, ensure one of the blue LEDs is flashing before pairing with your Bluetooth-enabled device.

Function Keys and Modes

Use the FN key in combination with other keys to access various functions like insert, enter, return, and more. The keyboard offers different modes such as Standard Mode, Driver Mode, WIN Mode, MAC OS Mode, and Backlight Settings. Refer to the manual for detailed instructions on switching between modes and customizing key functions.

Bluetooth Settings

To activate Bluetooth mode, press FN + Space. Use the FN + 1! key to pair with Bluetooth devices. Follow the instructions for pairing and troubleshooting Bluetooth connectivity issues.

Better for MAC

AK84 :

USB Wired Model

• AK84S:

USB+Bluetooth Dual Model

EPOMAKER-AK84S-USB-Bluetooth-Dual-Model-fig- 4

Bluetooth condition: 31,82,83 One of the blue LEDs is flashing, and the keyboard is connecting to the BT equipment.

Fn tips:


in+space ON/OFF the BT mode, link to USB mode.

The symbol in the PBT Keycap is for reference, please refer to the real keyboard and press fn with function keys.

FN +6 Also for WIN

AK84: USB Wired Model

• AK84S: USB+Bluetooth Dual Model

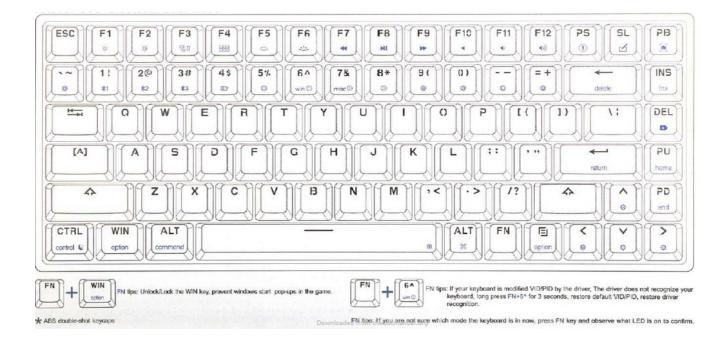


FN tips:

If you are not sure which mode the keyboard is in now, press the FN key and observe which LED is on to confirm.

in function description

(Double-click FN to light FNs white LED, FN function is held click FIN again to escape from holding status).

Define mode

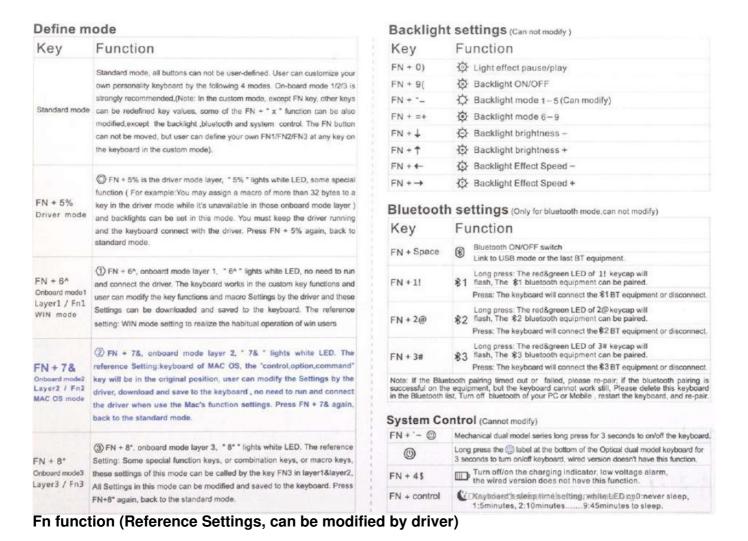

Key	Mac mode function	Win mode function
F1	Screen brightness - for Mac	F1
F2	Screen brightness + for Mac	F2
F3	□ for Mac	F3
F4	for Mac	F4
F5	Backlight brightness - for Mac	F5
F6	- Backlight brightness + for Mac	F6
F7	← Previous	F7
F8	NI Play/Pause	F8
F9	▶ Next	F9
F10	◀ Mute	F10
F11	◆) Volume –	F11
F12	◀® Volume +	F12
F13 (PS)	One click call Siri for Mac	PS
F14 (SL)	One click call handwriting for Mac	SL
F15 (PB)	Screenshot for Mac	РВ
FN + pgup	home	home
FN + pgdn	end	end
FN + Win		A Lock/Unlock Win key

From the community. For the community!

Downloaded from the lost manual.org

FAQs

- Q: How do I reset the keyboard settings?
 - A: To reset the keyboard settings, long press FN + 6A for 3 seconds to restore default settings and driver recognition.
- Q: How do I customize the function keys?

A: Use the provided modes like Driver Mode and WIN Mode to customize function keys. Refer to the manual for detailed instructions on customizing key functions in different modes.

Documents / Resources



EPOMAKER AK84S USB Bluetooth Dual Model [pdf] User Manual

AK84, AK84S, AK84S USB Bluetooth Dual Model, AK84S, USB Bluetooth Dual Model, Bluetooth Dual Model, Dual Model

References

- Your Ultimate Resource for Millions of User Manuals
- User Manual

Manuals+, Privacy Policy

SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsem	nent.