



EPOMAKER Alice Wired Mechanical Keyboard User Guide

[Home](#) » [EPOMAKER](#) » EPOMAKER Alice Wired Mechanical Keyboard User Guide 

Contents

1 QUICK START GUIDE

2 Epomaker Alice

2.1 SHORTCUTS

2.2 LIGHT EFFECTS

2.3 FACTORY RESET

2.4 SPECS

2.4.1 Push Straight Down

2.4.2 Included Tools

2.5 TECHNICAL ASSISTANCE

2.6 COMMUNITY FORUMS

 
3 Documents / Resources

3.1 References

4 Related Posts

QUICK START GUIDE



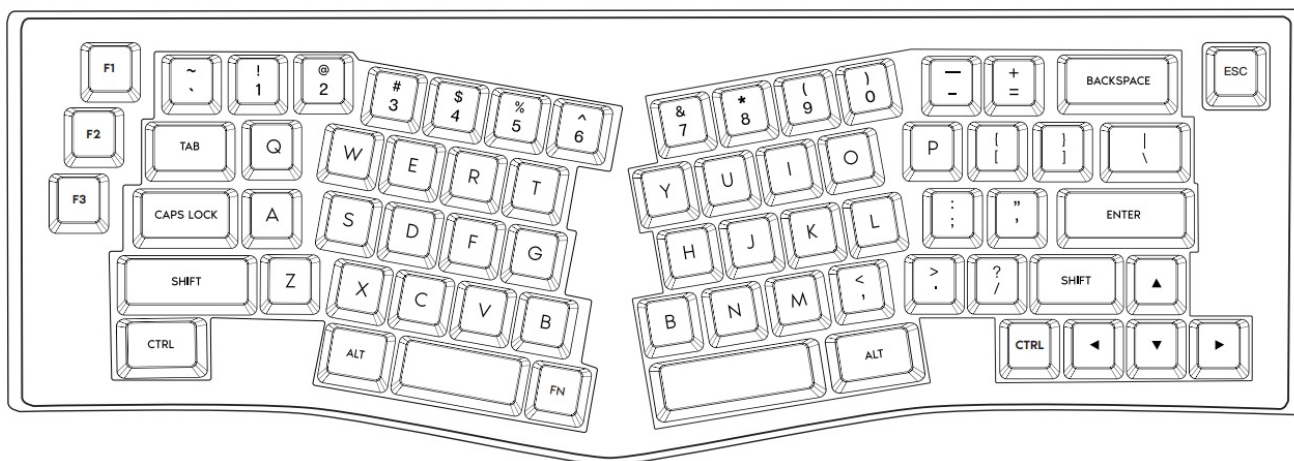

**Alice QMK/VIA Gasket-mounted Hot-swappable
Acrylic Wired Mechanical Keyboard**

Should you require more assistance please email us at support@epomaker.com



Made in China

Manufacturer: Shenzhen Changyun Technology Co., Ltd.

Address: Seventh Floor, Kai Daer Building, No.168 Tongsha Road,
Xili Street, Nanshan District, Shenzhen, Guangdong, CN

Email: support@epomaker.com

Web: www.epomaker.com

EC REP

APEX CE SPECIALISTS LIMITED

Unit 3d North Point House, North Point Business Park,
New Mallow Road Cork, T23 AT2P, Ireland

Contact: Wells

Tel: +353212066339

UK REP

APEX CE SPECIALISTS LIMITED

89 Princess Street, Manchester, M1 4HT, UK

Contact: Wells **E-mail:** info@apex-ce.com



SHORTCUTS

Fn + 1 F1
Fn + 2 F2
Fn + 3 F3
Fn + 4 F4
Fn + 5 F5
Fn + 6 F6
Fn + 7 F7
Fn + 8 F8
Fn + 9 F9
Fn + 0 F10
Fn + - F11
Fn + = F12

LIGHT EFFECTS

Fn + S Hue +
Fn + D Hue –
Fn + F Sat +
Fn + G Sat –
Fn + Z Turn On/Off Backlights
Fn + X Toggle RGB Effects +
Fn + C Toggle RGB Effects –
Fn + V Backlight Brightness +
Fn + B (Left) Backlight Brightness –
Fn + B (Right) Backlights Speed +
Fn + N Backlights Speed –

FACTORY RESET

1. Unplug the cable of the keyboard.
2. Press the ESC and hold it.
3. Plug in the cable to connect the computer and keyboard, do NOT release the ESC key until the cable is plugged into both computer and the keyboard.
4. Release the ESC key
5. Wait until the computer completes the setup for USB, now the keyboard won't respond to the key pressing, and a window of USB folder might pop up on the screen.
6. Eject the USB from the computer.
7. Re-plug the cable to connect the keyboard with the computer.
8. Wait a few seconds until the backlights are on.



To be able to customize your key layouts, RGB, macros, and other functions in your Epomaker Alice you can use the VIA Software with the use of a JSON File.

Download the Software at: <https://epomaker.com/blogs/qmk-via/epomaker-alice-via-json-file>



Instructions to install on Windows:

1. Unzip the file to find the .exe and .json files.
2. Install the .exe file in your computer.
3. Run the VIA software once installed.
4. Import the JSON file to be able to edit the Epomaker Alice settings inside VIA.



Instructions to install on macOS:

1. Unzip the file to find the .exe and .json files.
2. Unpack the .dmg file
3. Drag the VIA software to your applications folder to install it.
4. Authorize the VIA software in: System Preferences > Security & Privacy.
5. Import the JSON file to be able to edit the Epomaker Alice settings inside VIA.


SPECS

KEYS AMOUNT:	69Keys
STRUCTURE:	Gasket-mount
STABILIZER TYPE:	Plate-mounted
PCB TYPE:	3/5-pin Hotswap PCB
CONNECTIVITY:	Type-C Wired
ANTI-GHOST KEY:	NKRO
COMPATIBILITY:	WINDOWS/MAC
SOFTWARE:	VIA/QMK Compatible
DIMENSION:	327*170*30 mm
WEIGHT:	Around 0.8kg




REPLACING KEYCAPS AND SWITCHES

 For a full guide on how to remove keycaps and switches scan the QR Code or type in your browser:
<https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches>

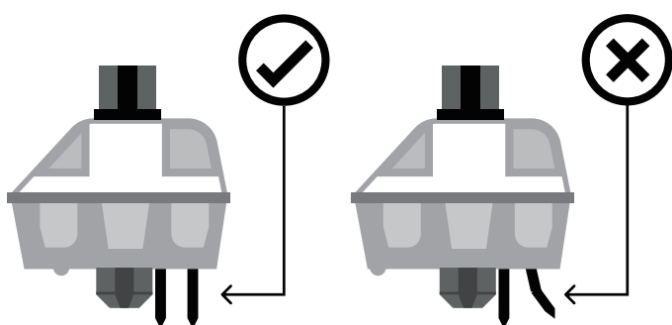

 
Before installing switches, be sure the pins are clean and straight.

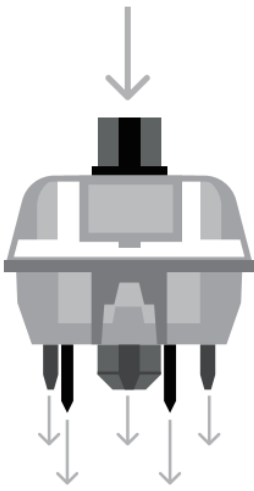

Push Straight Down

Please be gentle. Be sure the pins are aligned with the slots.

 Included Tools

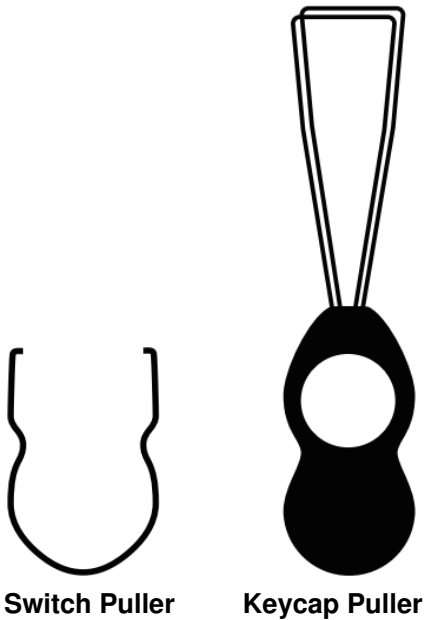


Switch Puller

Keycap Puller

Remove Switches

 1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

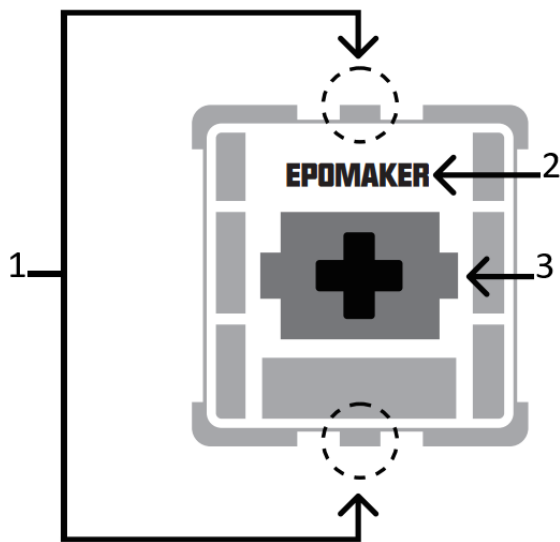

The Switch Puller tool aligns Vertically to the Switch to unclip the plastic securing the switch to the plate.

1. Mechanical Switch

Example of a switch as seen from top after you remove the keycap to prepare for switch removal.

- 2. Logo
- 3. Switch Shaft

Install Switches

1. Check that all the switch metallic pins are perfectly straight and clean.
2. Align the switch vertically to have the Gateron logo facing north. The pins should align themselves to the keyboard PBC.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.



Note: If the key doesn't work its possible you may have bent one of the switches while installing it. Pull the switch out and repeat the process.

Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

TECHNICAL ASSISTANCE

For technical assistance, please email to support@epomaker.com with your purchase order number and a detailed description of your issue.

We normally respond to enquiries within 24 hours. If you purchased your keyboard from a distributor or not from any official store of Epomaker, please contact them directly for any additional help.

COMMUNITY FORUMS

Join our community and learn together with other keyboard enthusiasts.



<https://discord.gg/2q3Z7C2>



<https://www.reddit.com/r/Epomaker/>

WARRANTY

EPOMAKER's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to Epomaker.

We provide a 1 year warranty for our products when bought from our website ([EPOMAKER.com](https://epomaker.com)). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc.

We will ONLY cover the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.








Documents / Resources



[EPOMAKER Alice Wired Mechanical Keyboard](#) [pdf] User Guide

Alice Wired Mechanical Keyboard, Mechanical Keyboard, Alice Wired Keyboard, Keyboard, Alice Keyboard, Alice

References

-  [Epomaker – epomaker](#)
-  [DeepL Translate: The world's most accurate translator](#)
-  [Epomaker – epomaker](#)
-  [Epomaker](#)
-  [DIY Guide: How to Replace Your Mechanical Keyboard Switches – epomaker](#)
-  [Epomaker Alice VIA JSON File – epomaker](#)
-  [Reddit - Dive into anything](#)