

# **EPOMAKER Aura75 Triple Mode Hot Swappable RGB Mechanical Keyboard User Guide**

Home » EPOMAKER » EPOMAKER Aura75 Triple Mode Hot Swappable RGB Mechanical Keyboard User Guide



- 1 EPOMAKER Aura75 Triple Mode Hot Swappable RGB Mechanical
- **Keyboard**
- **2 BUTTONS FUNCTIONS**
- **3 PAIRING**
- **4 CHECK BATTERY**
- **5 SPECS**
- **6 REPLACING KEYCAPS AND SWITCHES**
- 7 Included Tools
- **8 TECHNICAL ASSISTANCE**
- 9 WARRANTY
- 10 Contact
- 11 Documents / Resources



**EPOMAKER Aura75 Triple Mode Hot Swappable RGB Mechanical Keyboard** 



# **BUTTONS FUNCTIONS**

## **WINDOWS SHORTCUT**

- FN + F1: My computer
- FN + F2: Mail
- FN + F3: Search
- FN + F4: Home Page
- FN + F5: Multi-media Player
- FN + F6: Play / Pause
- FN + F7: Previous Track
- FN + F8: Next Track
- FN + F9: Calculator
- FN + F10: Mute
- FN + F11: Volume -
- FN + F12: Volume +
- FN + I: Insert
- FN + WIN: Lock Win-key
- FN + R\_CTRL (HOLD 3S): Menu

# **MAC SHORTCUT**

- FN + F1: screen brightness -
- FN + F2: Screen Brichtness +
- FN + F3: Task
- FN + F4: Control Pad
- FN + F5: F5
- FN + F6: F6
- FN + F7: Previous Track
- FN + F8: Play / Pause

• FN + F9: Next Track

• FN + F10: Mute

• FN + F11: Volume -

• FN + F12: Volume +

# **FUNCTION KEY COMBINATIONS**

• FN + 1!: Short Press to Switch to BT1;

Long Press to Pair Devices

• FN + 2@: Short Press to Switch to BT2;

Long Press to Pair Devices

• FN + 3#: Short Press to Switch to BT3

Long Press to Pair Devices

• FN + 4\$: Short Press to Switch to 2.4G Mode;

Long Press to Pair Devices

• FN + ESC (HOLD 3S): Reset the Keyboard to the Factory Setting

• FN + 5%: Wired Mode

• FN + W: Swap WASD and Arrow keys

• FN + BACKSPACE: Battery Check

## **LIGHT EFFECTS**

FN + HOME	RGB Effects 1-5	FN + ↑	Backlights Brightness -
FN + PGUP	RGB Effects 6-10	FN+↓	Backlights Brightness +
FN + END	RGB Effects 11-15	FN + ←	Dynamic light direction to left
FN + PGDN	RGB Effects 16-20	FN+→	Dynamic light direction to right
FN + \	Toggle Backlight colors	FN +	Backlights Speed-
FN + L	Turn on/off Backlights	FN + =+	Backlights Speed +
FN + L_CTR	L Toggle Sidelight Effect and Off	FN + Z	Toggle Sidelight Brightness
FN + L_ALT	Toggle Sidelight Colors	FN + X	Toggle Sidelight Speed

## **CHANGE RGB EFFECTS**

• Press Fn + Home/PgUp/End/PgDn to switch the RGB effects of your Epomaker Aura75 keyboard.

# **PAIRING**

#### PAIRING BLUETOOTH

- 1. Hold Fn+1! /2@ / 3# for 3-5 seconds till the indicators flashes fast in red/green/yellow the keyboard is ready to pair in Bluetooth.
- 2. Turn on your Bluetooth device and find 'Aura75 BT3.0' or 'Aura75 BT5.0-1/2/3'. then connect. When the keyboard is connected to the Bluetooth device, the light on the 1! / 2@ / 3# key stops flashing and the connection is done.
- 3. Press Fn+1! / 2@ / 3# to toggle between the Bluetooth devices 1/2/3.

## **PAIRING WIRELESS 2.4GHZ**

- 1. Press Fn+4\$ the indicator flashes in green, the keyboard is under the 2.4G mode;
- 2. Continue to hold Fn+4S for for 3-5 seconds till the 4\$ indicator flashes fast, the keyboard is ready to pair;
- 3. Insert the 2.4G dongle to your device, the 4\$ key stops flashing and the connection is done.

## **WIRED MODE**

• Press Fn+5%, the keyboard goes to the wired mode successfully.

## **KNOB**

- Clockwise: Volume / Backlight Brightness -
- Counterclockwise: Volume + / Backlight Brightness +
- Press knob: Toggle the knob function between volume or backlight brightness control.

## **CHECK BATTERY**

• Hold Fn+Backspace, the keys from 1! to O) lights up to show the battery percentage; for example, if the keys from 1! to 6^ light up when holding Fn + Backspace, it means that the battery life is currently 60%; if keys of 1!- 0) light up, battery life is 100%.

## **INDICATOR LIGHT**

- Charging: Red light stays for 2 seconds then off
- Charged: Green light stays for 2 seconds then off
- Win-lock: When the Win key light up, the key is disabled

#### **SPECS**

KEYS AMOUNT: 82 Keys + 1 knob
 STABILIZER TYPE: Plate-mounted

• CASE MATERIAL: ABS Plastic

• PLATE MATERIAL: Steel

• PCB TYPE: 3/5-pin Hotswap PCB

• BATTERY CAPACITY: 3000mAh

• CONNECTIVITY: Type-C Wired, 2.4 & Bluetooth Wireless

• ANTI-GHOST KEY: NKRO in all modes

COMPATIBILITY: WINDOWS/MAC
 DIMENSION: 330 X 145 X 39 mm


• WEIGHT: Around 0.7kg

## REPLACING KEYCAPS AND SWITCHES



For a full guide on how to remove keycaps and switches scan the QR Code or type in your browser:
 https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches

# **Push Straight Down**

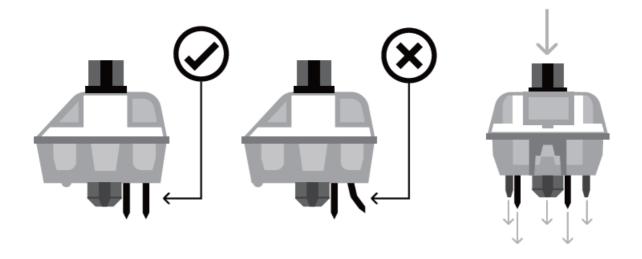

- Please be gentle. Be sure the pins are aligned with the slots.
- Before installing switches, be sure the pins are clean and straight.

# **Remove Switches**

- 1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
- 2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
- 3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.


## **Install Switches**


- 1. Check that all the switch metallic pins are perfectly straight and clean.
- 2. Align the switch vertically to have the Gateron logo facing north. The pins should align themselves to the keyboard PBC.
- 3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
- 4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.

**Note:** If the key doesn't work its possible you may have bent one of the switches while installing it. Pull the switch out and repeat the process.

Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

# **Included Tools**

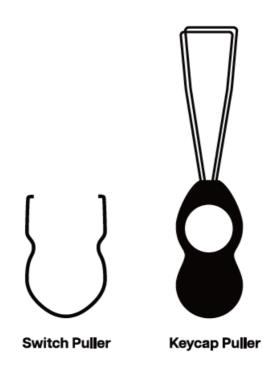

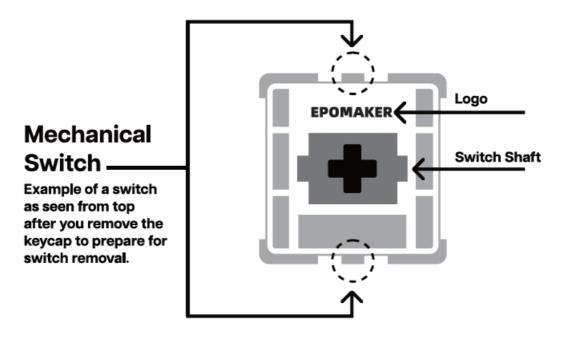

• The Switch Puller tool aligns Vertically to the Switch to unclip the plastic securing the switch to the plate.

## **TECHNICAL ASSISTANCE**

For technical assistance, please email to <a href="mailtosupport@epomaker.com">support@epomaker.com</a> with your purchase order number and a detailed description of your issue. We normally respond to enquiries within 24 hours. If you purchased your keyboard from a distributor or not from any official store of Epomaker, please contact them directly for any additional help.

## **COMMUNITY FORUMS**

Join our community and learn together with other keyboard enthusiasts.





## **WARRANTY**

EPOMAKER's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to Epomaker.

We provide a 1 year warranty for our products when bought from our website ( **EPOMAKER.com**). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc. We will ONLY cover the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.

Should you require more assistance please email us at <a href="mailto:support@epomaker.com">support@epomaker.com</a>

## Contact

- · Made in China
- Manufacturer: Shenzhen Changyun Technology Co., Ltd.
- Address: Seventh Floor, Kai Daer Building, No.168 Tongsha Road, Xili Street, Nanshan District, Shenzhen, Guangdong, CN

• Email: <a href="mailto:support@epomaker.com">support@epomaker.com</a>

• Web: www.epomaker.com

## Scan



## **APEX CE SPECIALISTS LIMITED**

• Unit 3d North Point House, North Point Business Park, New Mallow Road Cork, T23 AT2P, Ireland

• Contact: Wells

• Tel: +353212066339

## **APEX CE SPECIALISTS LIMITED**

• 89 Princess Street, Mancheste, M1 4HT, UK

• Contact: Wells

• E-mail: info@apex-ce.com



# **Documents / Resources**



EPOMAKER Aura75 Triple Mode Hot Swappable RGB Mechanical Keyboard [pdf] User Gui de

Aura75, Aura75 Triple Mode Hot Swappable RGB Mechanical Keyboard, Triple Mode Hot Swappable RGB Mechanical Keyboard, Mode Hot Swappable RGB Mechanical Keyboard, Hot Swappable RGB Mechanical Keyboard, Swappable RGB Mechanical Keyboard, RGB Mechanical Keyboard, Mechanical Keyboard, Keyboard

Manuals+,