




EPOMAKER B21 Mechanical Gaming Keyboard User Manual

[Home](#) » [EPOMAKER](#) » EPOMAKER B21 Mechanical Gaming Keyboard User Manual 



Thank you very much for choosing B21 Mechanical Gaming Keyboard. The keyboard has a variety of cool functions and light effects. Hope it will bring you a new sense of cooperation.

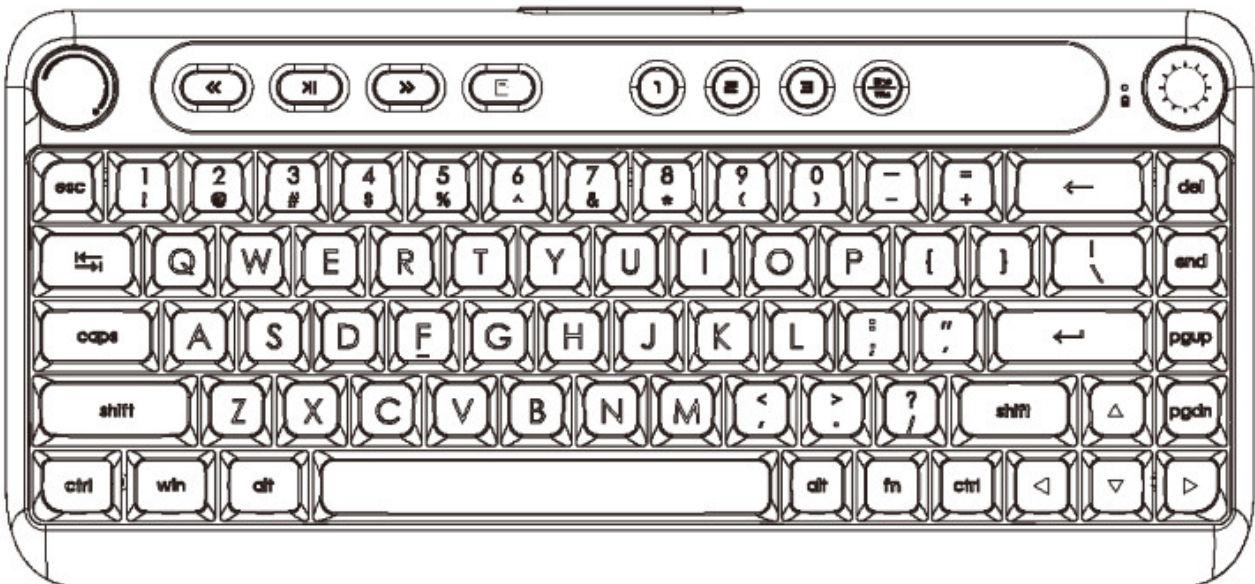

Contents

[1 Connection Method](#)

[2 Mac/Win Dual System Function](#)

[3 Multimedia Button Function](#)


[4 Documents / Resources](#)

[5 Related Posts](#)

Connection Method

Bluetooth Mode

Turn the “mode switch” to the BT position. If no host has been paired before, the keyboard will automatically enter the code-matching state. (if you have paired the host before, you will directly connect back, The indicator light flashes slowly; if the connection fails for 3 seconds, the keyboard enters the Bluetooth sleep state; If the connection is successful, the indicator light will be on for 3 seconds and then the original state of the button backlight will be restored.)


Multi-device connection:  Touch the button to switch to the corresponding Bluetooth device. The light of the corresponding button flashes slowly for 3 seconds to indicate the reconnection. After the reconnection is successful, the corresponding button light is always on to indicate; the reconnection fails and the backlight is off.


Long press for 2 seconds to pair the corresponding device, the corresponding button light flashes quickly to indicate the code pairing, after the code pairing is successful, the corresponding button light is always on to indicate; when the connection fails, the backlight goes out.

USB Wired Connection Mode

Turn the “mode switch” to the USB position to realize the USB wired connection mode and turn off the battery power supply at the same time. (The battery can be charged by connecting the USB in any mode, until the battery is fully charged)

Mac/Win Dual System Function

Windows System  : switch the system to the Win gear position, which matches the Windows system and usage habits; the F1-F12 key functions are directly triggered, and the multimedia key functions need to be combined with the (FN) key to achieve.

Mac System  : Switch the system to the MAC position, and match the MAC system and usage habits at this time; the multimedia keys are directly triggered, and the F1-F12 key functions need to be combined with the (FN) key to achieve. Windows System: switch “win” and “alt” to the left of the space bar to “alt” and ‘win’; the “alt”, “fn” and ctrl” on the right side of the space bar are switched to “ctrl”, “fn” and “alt”.

Multimedia Button Function

In the Windows system,  it is F1-F2, without fn compounding, it can be triggered directly.

F3 Multi-screen display **F4** Main control panel **F7** Last song **F8** Play / Pause **F9** Next song **F10** Mute **F11** Volume – **F12** Volume +

Indicator Light: charging light indicator-red, on when charging, and off when fully charged


Low battery flashing (when the voltage is less than 3.5V, the low battery flashes red (once in 1s), when the voltage


is lower than 3.2V, the keyboard automatically shuts down)

FN Composite Function Key

FN + ↑: increase brightness (0-28-44-60-80, default 100) FN + J: reduce brightness (0-28-44-60-80, default 100)
FN + ←: reduce the light efficiency speed (0-28-44-60-80, 100 by default)
FN + →: increase the light efficiency speed (0-28-44-60-80, 100 by default)
FN + left Ctrl: cycle to switch the number key 1-0 function to: number 1-0 function (default) F1-F12 function
FN + Del: long press for 3 seconds to restore factory settings, clear all power-off memory information, including Bluetooth pairing information


Knob Function Key

Left knob : turn clockwise to increase the volume of multimedia, turn counterclockwise to decrease the volume of multimedia, press mute, press again to remove mute.

Right knob : rotate clockwise to increase the backlight brightness, rotate counterclockwise to reduce the backlight brightness, press cycle to switch the light effect.

The right knob contains extended function: it needs to support the function of clockwise rotation, counter clockwise rotation, and pressing of the left knob and the right knob, Such as: zoom in, zoom out, open, close, forward, backward and other functions.

Documents / Resources

	EPOMAKER B21 Mechanical Gaming Keyboard [pdf] User Manual B21, B21 Mechanical Gaming Keyboard, Mechanical Gaming Keyboard
--	--