



EPOMAKER RT100 Wireless 97 Key Layout Mechanical Keyboard Instruction Manual

[Home](#) » [EPOMAKER](#) » EPOMAKER RT100 Wireless 97 Key Layout Mechanical Keyboard Instruction Manual 

Contents

- 1 EPOMAKER RT100 Wireless 97 Key Layout Mechanical Keyboard
- 2 Product Usage Instructions
- 3 QUICK START GUIDE
- 4 BUTTON FUNCTION
- 5 SWITCH PROMPT
- 6 WIRED OR WIRELESS
- 7 INSTRUCTION
- 8 Options
- 9 Documents / Resources
 - 9.1 References

EPOMAKER

EPOMAKER RT100 Wireless 97 Key Layout Mechanical Keyboard



Product Specifications

- Model: 97 Key Layout Hot-swappable Wired/Wireless Mechanical Keyboard

- Key Layout: 97 keys
- Switch Type: Hot-swappable Mechanical Switches
- Connectivity: Wired/Wireless
- Special Function: Fn+L_Ctrl to switch images on Mini TV

Product Usage Instructions

Wired Connection:

1. Connect one end of the USB cable to the keyboard and the other end to your computer.
2. The keyboard should be ready for use once connected.

Wireless Connection:

1. Ensure the keyboard is charged or has fresh batteries inserted.
2. Turn on the keyboard using the power switch.
3. Put the keyboard in pairing mode by following the instructions in the user manual.
4. On your computer or device, search for available Bluetooth devices and select the keyboard to pair.

Special Function – Image Switching:

To switch images on a Mini TV, press and hold the Fn key and then press the L_Ctrl key. Repeat this action to cycle through different images.

Frequently Asked Questions (FAQ)

Q: How do I know if the keyboard is in wired or wireless mode?

 
A: The keyboard will indicate its current mode through LED lights or on-screen notifications, please refer to the user manual for specific details.

Q: Can I customize the functions of individual keys?

A: Yes, you can often customize key functions using dedicated software provided by the manufacturer. Refer to the user manual for instructions on how to do this.

QUICK START GUIDE

EPOMAKER RT100

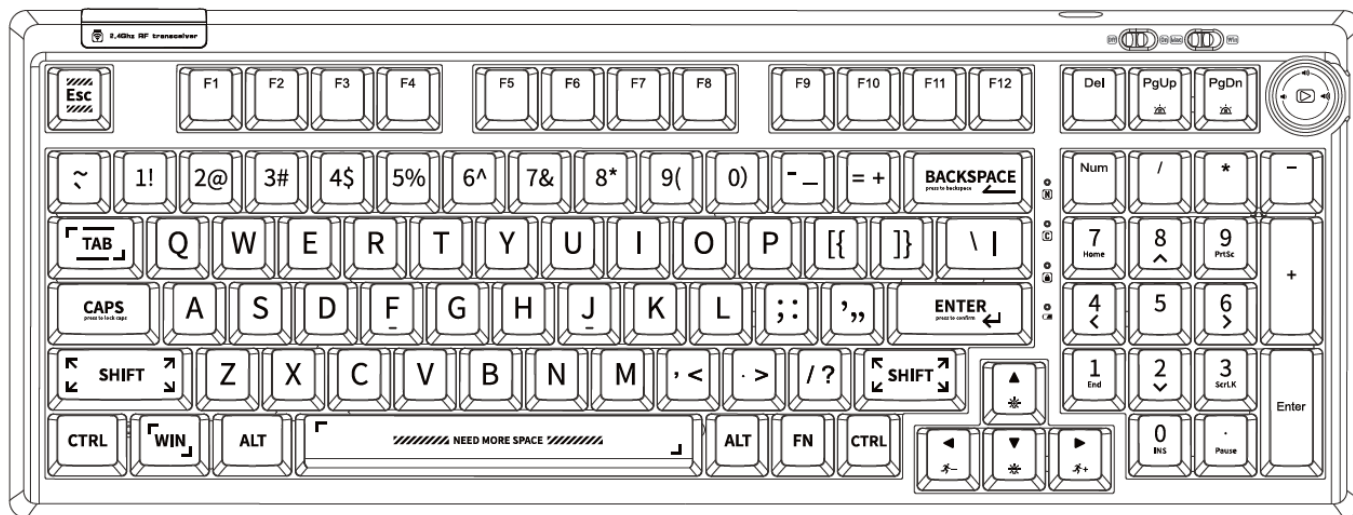


97 Key Layout/Hot-swappable Wired/Wireless Mechanical Keyboard

This Quick Guide is an introduction to the use and functions of EPOMAKER RT100

For in-depth guidance on customizing software functions, please refer to the manual in EPOMAKER RT100

- **MODEL:** EPOMAKER RT100
- **SIZE:** 397 × 147 x 29.51 mm
- **NKRO:** YES
- **SYSTEM:** Windows XP/VISTA/7/8/10,Mac
- **CONNECTION:** USB-C, 2.4GHz Bluetooth 3.0, Bluetooth 5.0.
- **WEIGHT:** 1350g
- **HOTSWAP:** YES
- **KEYCAPS:** PBT
- **LAYOUT:** 97 keys

 EPOMAKER RT100 Iso

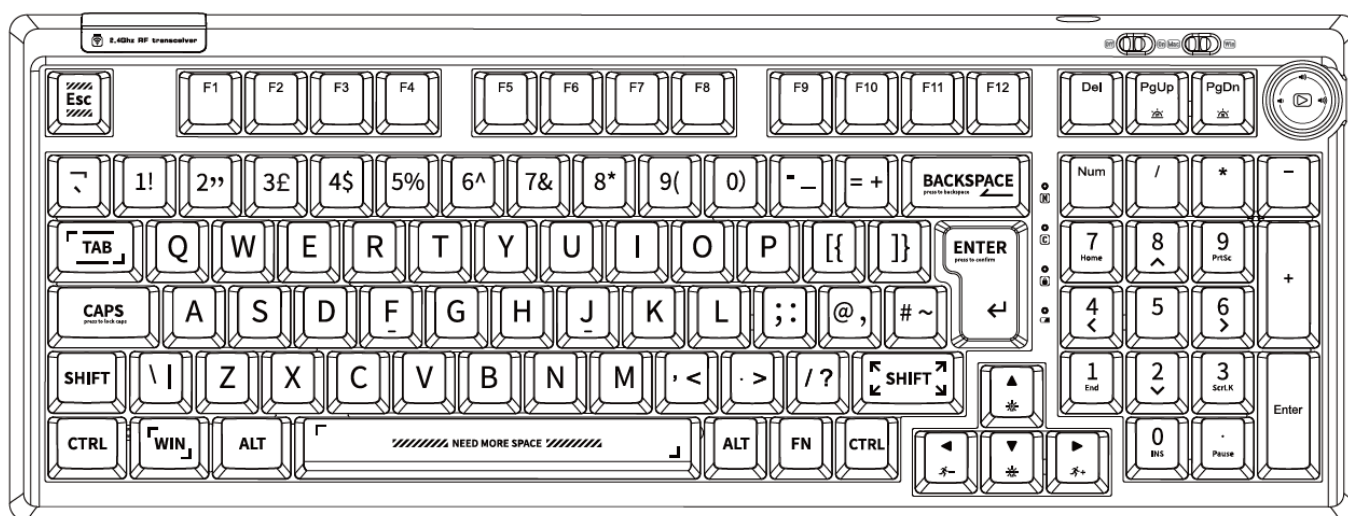


BUTTON FUNCTION

Key Combination	Win Function	Mac Function
FN + ESC	Press and hold for 3s to Restore factory settings	Press and hold for 3s to Restore factory settings
FN + F1	Brightness-	Brightness-
FN + F2	Brightness+	Brightness+
FN + F3	Win+tab	Ctrl+ ↑
FN + F4	win+E	Exhale siri
FN + F5	Mail	
FN + F6	Homepage	
FN + F7	Previous song	Previous song
FN + F8	Play/Pause	Play/Pause

FN + F9	Next song	Next song
FN + Q	Short press to switch Bluetooth 1, long press Bluetooth Q to pair	Short press to switch Bluetooth 1Long press Bluetooth Q to pair
FN + W	Short press to switch Bluetooth 2Long press Bluetooth W to pair	Short press to switch Bluetooth 2Long press Bluetooth W to pair
FN + E	Short press to switch Bluetooth 3Long press Bluetooth EW to pair	Short press to switch Bluetooth 3Long press Bluetooth EW to pair
FN + R	Short press to switch 2.4G, long press R To pair	Short press to switch 2.4G, long press R To pair
FN + WIN	Lock win key	Lock win key
FN + BackSpace	Query power (battery power is available in wireless mode)	Query power (battery power is available in wireless mode)

Backlight Settings	Win Function	Mac Function
FN + ↑	Backlight Brightness +	Backlight Brightness +
FN + ↓	Backlight Brightness -	Backlight Brightness -
FN + ←	Backlight Effect Speed -	Backlight Effect Speed -
FN + →	Backlight Effect Speed +	Backlight Effect Speed +
FN + DEL	Main backlight effect switching	Main backlight effect switching
FN + PGUP	Toggle monochrome lights	Toggle monochrome lights
FN + PGDN	Battery Save Mode (all lights and TV display off)	Battery Save Mode (all lights and TV display off)

 Fn+L_Ctrl Switch Images on Mini TV

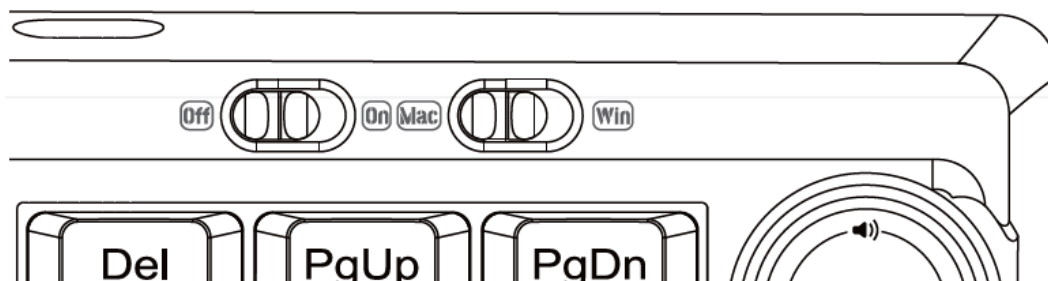

Power switch

OFF power off (wired connection)/ON power on (wireless mode)

 
OFF power off (wired connection)/ON power on (wireless mode)

Mode switch

Left mac mode/right win mode

Left mac mode/right win mode

KNOB MODE

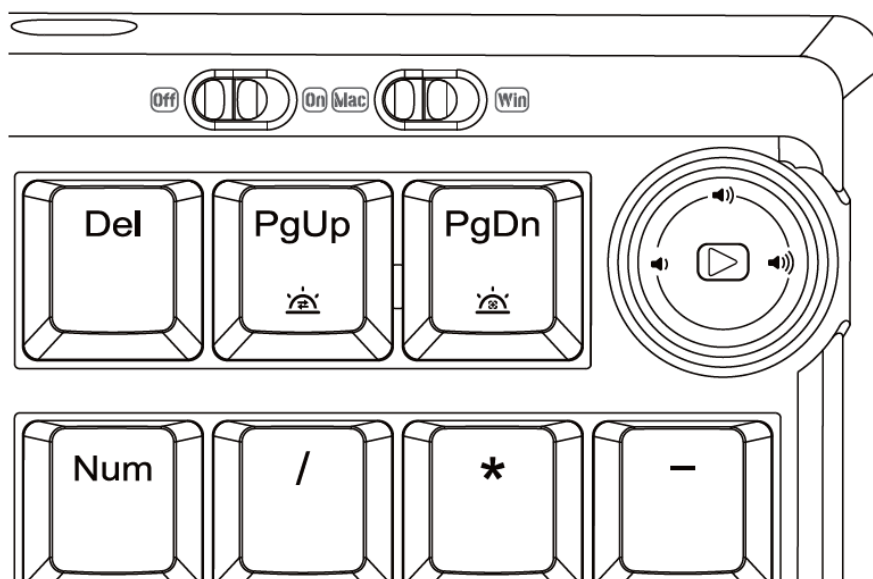

TURN CLOCKWISE

Reduce Volume



TURN COUNTER CLOCKWISE

Increase Volume



PRESS KNOB

 
Play/Pause



CUSTOM FUNCTIONS

You can also use the software to customize the knob functions.

Pressing Fn + Del at the same time allows you to switch the RGB effect of

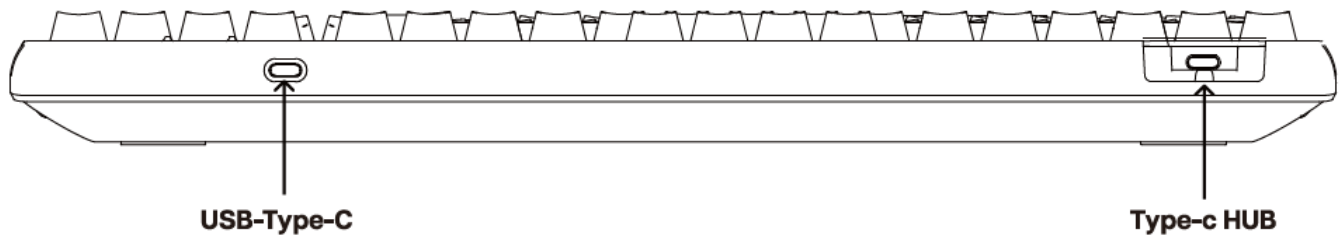

WIRED OR WIRELESS

Use the connection mode switch on the top of the keyboard.

OFF means to turn off the power supply. At this time, inserting the cable can realize Wired connection mode and timely charging.

ON means to turn on the power and enter the wireless working mode.

PAIRING BLUETOOTH

- FN + Q/W/E Long Press for 3 seconds to pair Bluetooth device
- FN + Q/W/E Short Press to switch to last paired device

Turn the keyboard power switch to ON to enable wireless connection mode.

Long press FN+Q/W/E to start pairing. When pairing, the indicator light flashes quickly.

After pairing is successful, the indicator light stays on for a long time, followed by the Main backlight. If pairing fails within 30 seconds, the indicator light goes out and the Keyboard enters the sleep mode.

2.4G PAIRING MODE

Switch to 2.4G wireless connection mode

FN + R

Turn the keyboard power switch to ON, turn on the wireless connection mode, and long Press FN+R to turn on the 2.4G pairing mode. The indicator light will flash quickly, and Insert the receiver to start pairing. After the pairing is successful, the prompt light will Stay on and follow the light effect of the primary key area. If pairing fails within 30 seconds, The indicator light goes out and the keyboard enters the sleep mode.

PAIRING WIRED MODE

Turn the keyboard power switch to OFF to enter the wired connection mode, and use a USB-C wire to connect the keyboard to your device.

 
 
MODE SWITCHING

If you need to switch the system or change the connection device of the keyboard, please Adjust the top mode switch of the keyboard to the operating system corresponding to the Computer. The left side is Mac mode, and the right side is Win mode. Otherwise, some shortcut Keys may not work properly.

KEYBOARD WAKE UP / SLEEP

After the keyboard enters the sleep mode, press any key to wake the keyboard. If you are in Bluetooth/2.4G mode, the keyboard will automatically connect to a Bluetooth/2.4g device.

INSTRUCTION

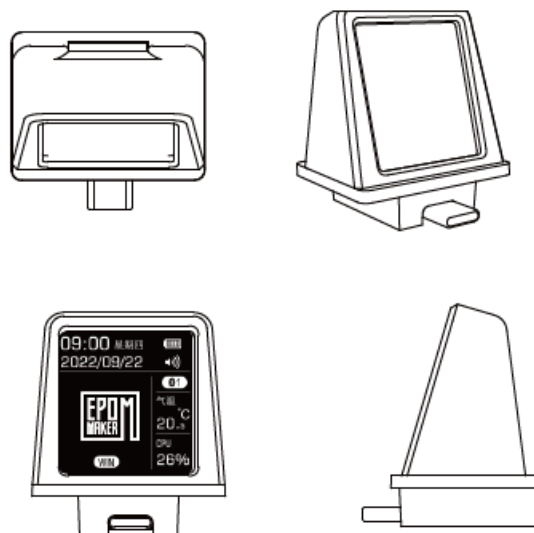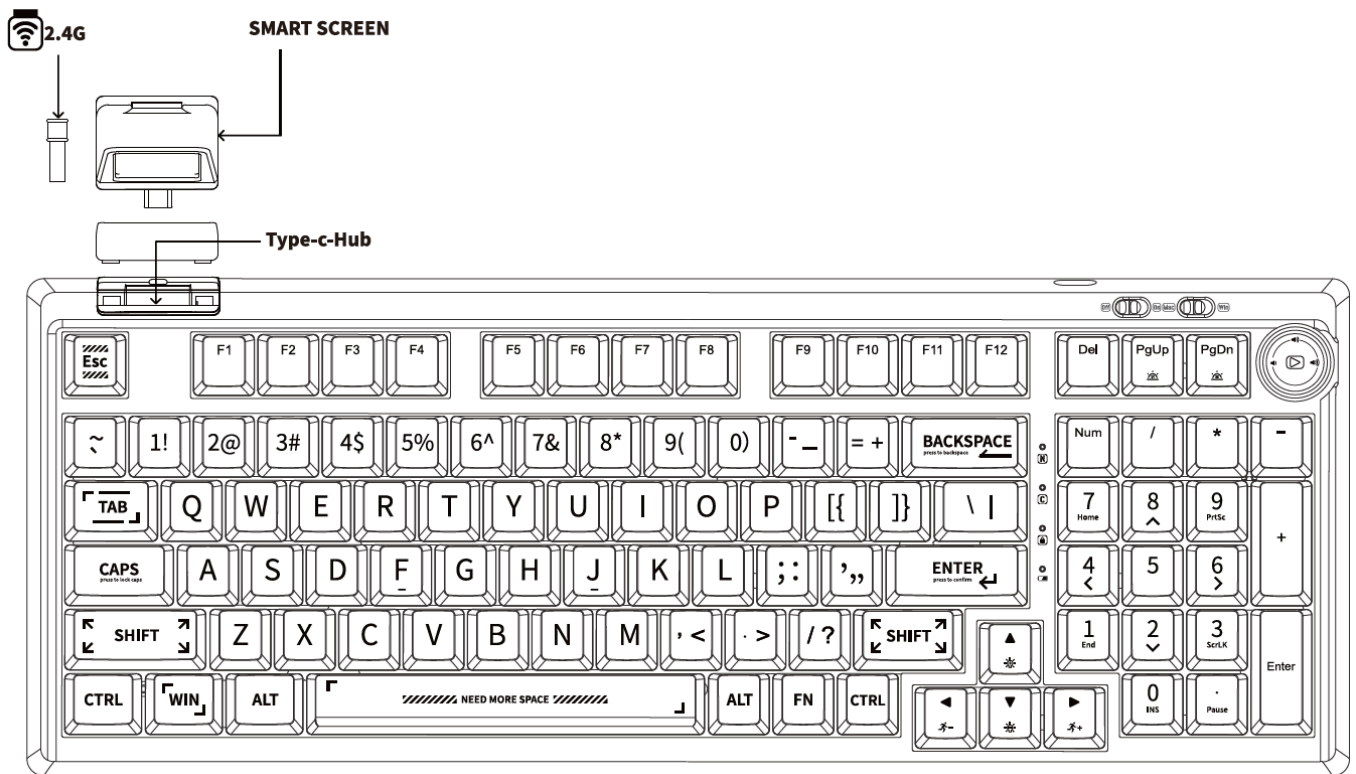

Options

HOT-PLUG SMART SCREEN:

1.33 inches

CONNECTION MODE:

Type-c

 
DISPLAY CONTENT:

time/date/week/power/current connection mode//volume/weather temperature/CPU power consumption/health reminder.

DISPLAY PICTURE:

You can choose to change the display picture through the driver. It supports the use of the driver's own drawing board module to make a GIF dynamic background image.

Documents / Resources

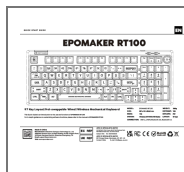

[EPOMAKER RT100 Wireless 97 Key Layout Mechanical Keyboard](#) [pdf] Instruction Manual
RT100 Wireless 97 Key Layout Mechanical Keyboard, RT100, Wireless 97 Key Layout Mechanical Keyboard, Key Layout Mechanical Keyboard, Layout Mechanical Keyboard, Mechanical Keyboard, Keyboard

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.