

# EPOMAKER SKYLINE 75 Triple-Mode Mechanical Gaming Keyboard User Guide


[Home](#) » [EPOMAKER](#) » EPOMAKER SKYLINE 75 Triple-Mode Mechanical Gaming Keyboard User Guide 



## Contents

- [1 EPOMAKER SKYLINE 75 Triple-Mode Mechanical Gaming Keyboard User Guide](#)
- [2 SHORTCUTS](#)
- [3 BACK LIGHT SETTINGS](#)
- [4 CHANGE RGB EFFECTS](#)
- [5 PAIRING BLUETOOTH](#)
- [6 PAIRING WIRELESS 2.4GHz](#)
- [7 PRODUCT SPECIFICATIONS](#)
- [8 TECHNICAL ASSISTANCE](#)
- [9 COMMUNITY FORUMS](#)
- [10 WARRANTY](#)
- [11 Documents / Resources](#)
  - [11.1 References](#)
- [12 Related Posts](#)

**EPOMAKER SKYLINE 75 Triple-Mode Mechanical Gaming Keyboard User Guide**

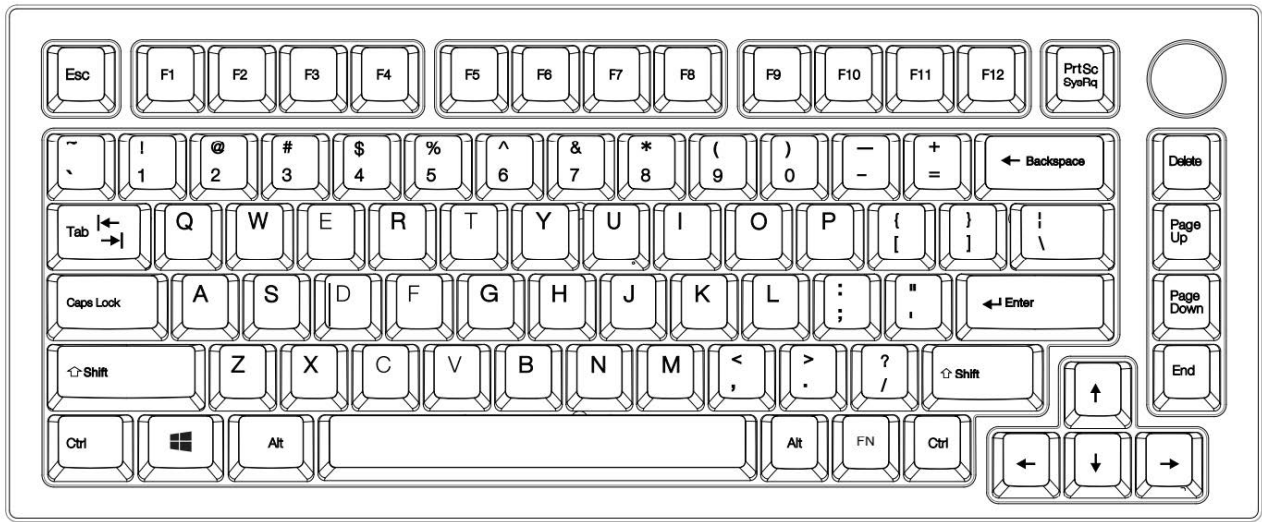

## 75% Hot-Swap Wired/Wireless Mechanical Keyboard Kit

This Quick Guide is an introduction to the use and functionality of the EPOMAKER SKYLINE 75. For in-depth guide of functionality of the customization software please refer to the manual that you can find in the official epomaker website at <https://epomaker.com/pages/software-downloads>

Should you require more assistance please email us at [support@epomaker.com](mailto:support@epomaker.com)

**Made in China**



Manufacturer: Shenzhen Changyun Technology Co., Ltd.  
Address: Seventh Floor, Kai Daer Building, No.168 Tongsha Road,  
Xili Street, Nanshan District, Shenzhen, Guangdong, CN  
Email: [support@epomaker.com](mailto:support@epomaker.com)  
Web: [www.epomaker.com](http://www.epomaker.com)

APEX CE SPECIALISTS LIMITED  
Address: UNIT 3D NORTH POINT HOUSE, NORTH POINT BUSINESS  
PARK, NEW MALLOW ROAD CORK, T23 AT2P, IRELAND  
Contact: Wells  
Tel: +353212066339  
Email: [info@apex-ce.com](mailto:info@apex-ce.com)



**RoHS**  
COMPLIANT



## SHORTCUTS

<b>FN + F1</b>	Media	<b>FN + F9</b>	Email
<b>FN + F2</b>	VOL -	<b>FN + F10</b>	Browser Homepage
<b>FN + F3</b>	VOL +	<b>FN + F11</b>	My computer
<b>FN + F4</b>	Mute	<b>FN + F12</b>	Calculator
<b>FN + F5</b>	Previous Track	<b>FN+ ESC</b>	Long press 3s to the default setting
<b>FN + F6</b>	Play/Pause	<b>FN+ W</b>	Swap WASD with arrow keys
<b>FN + F7</b>	Next Track	<b>FN+ WIN-L</b>	Win Lock
<b>FN + F8</b>	Stop	<b>FN+CTRL-L</b>	Switch between Win/Mac OS

## BACK LIGHT SETTINGS

<b>FN + ~</b>	Customize Backlights
<b>FN + →</b>	Toggle Backlight colors
<b>FN + - _</b>	Backlight Speed -
<b>FN + = +</b>	Backlight Speed +
<b>FN + DEL</b>	Backlight ON/OFF
<b>FN+PGUP/PGDN</b>	Toggle Backlight Modes

## CHANGE RGB EFFECTS

Pressing Fn+PgUp/PgDn at the same time allows you to switch the RGB effect of your Skyline 75 keyboard kit.

## PAIRING BLUETOOTH

Turn on the switch on the back of the keyboard to make sure that the keyboard is under the wireless mode:

- Holding Fn+1/2/3 for 3-5 seconds till the backlight flashes fast, the keyboard is ready to pair.
- Press Fn+1/2/3 to toggle between the bluetooth devices 1/2/3.

## PAIRING WIRELESS 2.4GHz

1. Press Fn+4 till the 4 key flashes fast.
2. Insert the USB dongle, the connection will be completed.

## PRODUCT SPECIFICATIONS

NUMBER OF KEYS	82 KEYS
KNOB FUNCTION	MEDIA CONTROL
HOT-SWAP	YES
BACKLIGHT	RGB BACKLIGHT
CONNECTION	BLUETOOTH /2.4GHZ/TYPE-C WIRED
COMPATIBILITY	WINDOWS/MAC
WORKING CURRENT	2500mAh
PRODUCT WEIGHT	0.5-0.8KG
PRODUCT DIMENSIONS	293.5 x 103.5 x 42.3 mm

## REPLACING KEYCAPS AND SWITCHES



For a full guide on how to remove keycaps and switches scan the QR Code or type in your browser:  
<https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches>

## Remove Switches

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

## Install Switches

1. Check that all the switch metallic pins are perfectly straight and clean.
2. Align the switch vertically to have the Gateron logo facing north. The pins should align themselves to the keyboard PBC.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.



**Note:** If the key doesn't work its possible you may have bent one of the switches while installing it. Pull the switch out and repeat the process.

Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

## TECHNICAL ASSISTANCE

For technical assistance, please email to [support@epomaker.com](mailto:support@epomaker.com) with your purchase order number and a detailed description of your issue.

We normally respond to enquiries within 24 hours. If you purchased your keyboard from a distributor or not from any official store of Epomaker, please contact them directly for any additional help.

## COMMUNITY FORUMS

Join our community and learn together with other keyboard enthusiasts.

<https://discord.gg/2q3Z7C2>

<https://www.reddit.com/user/epomaker/>

## WARRANTY

EPOMAKER's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to Epomaker.

We provide a 1 year warranty for our products when bought from our website (EPOMAKER.com). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc.

We will ONLY cover the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.

**Read More About This Manual & Download PDF:**

## Documents / Resources



[EPOMAKER SKYLINE 75 Triple-Mode Mechanical Gaming Keyboard](#) [pdf] User Guide  
SKYLINE 75, Triple-Mode Mechanical Gaming Keyboard

## References

- [ce.com](#)
- [Epomaker – epomaker](#)
- [Epomaker – epomaker](#)
- [Epomaker](#)
- [DIY Guide: How to Replace Your Mechanical Keyboard Switches – epomaker](#)
- [Software – epomaker](#)
- [Reddit - Dive into anything](#)