



EPOMAKER TK68 Wireless Mechanical Keyboard User Guide

 
[Home](#) » [EPOMAKER](#) » EPOMAKER TK68 Wireless Mechanical Keyboard User Guide 

Contents

- [1 EPOMAKER TK68 Wireless Mechanical Keyboard](#)
- [2 REPLACING KEY CAPS AND SWITCHES](#)
- [3 TECHNICAL ASSISTANCE](#)
- [4 COMMUNITY FORUMS](#)
- [5 WARRANTY](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



EPOMAKER TK68 Wireless Mechanical Keyboard

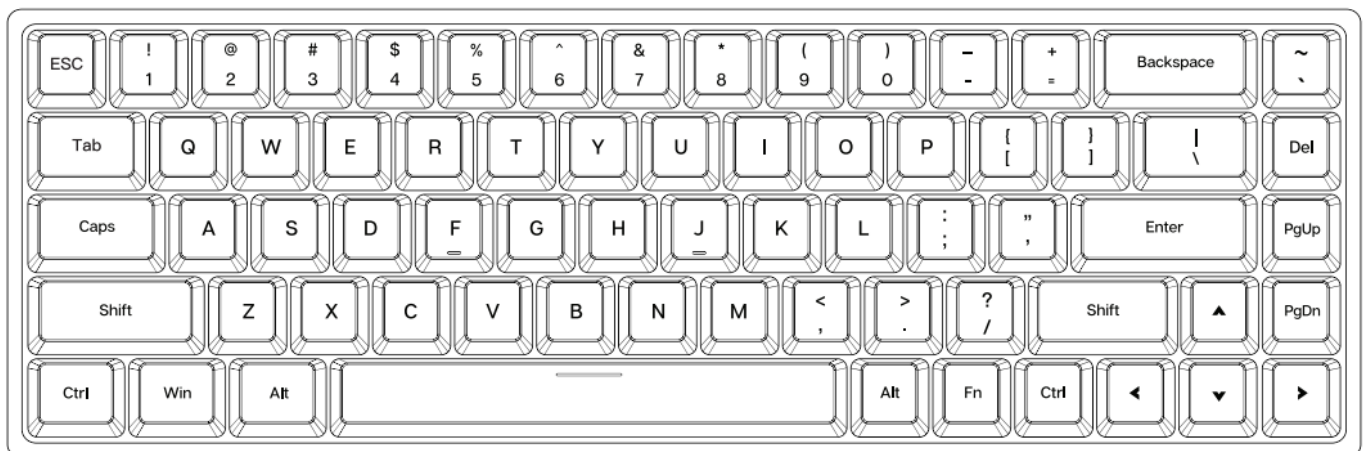

65% Hot Swappable Acrylic Triple-Mode Wired/Wireless Mechanical Gaming Keyboard

Should you require more assistance please email us at support@epomaker.com

Made in China

Manufacturer: Shenzhen Changyun Technology Co., Ltd. Address: Seventh Floor, Kai Daer Building, No.168



APEX CE SPECIALISTS LIMITED

Unit 3d North Point House, North Point Business Park, New Mallow Road Cork, T23 AT2P, Ireland

APEX CE SPECIALISTS LIMITED

89 Princess Street, Mancheste, M1 4HT, UK

Contact: Wells E-mail: info@apex-ce.com

• WIN DOWS

- FN +1 Screen Brightness –
- FN +2 Screen Brightness +
- FN +3 Win+Tab
- FN +4 Win+E
- FN +5 Mail
- FN +6 My Computer
- FN +7 Previous Track
- FN +8 Play/Pause
- FN +9 NextTrack
- FN +0 Mute
- FN +- Volume –
- FN ++ Volume +

• M A C

- FN+1 Screen Brightness-
- FN+2 Screen Brightness+
- FN+3 Task
- FN+4 Control Pad
- FN+5
- FN+6
- FN+7 Previous Track
- FN+8 Play/Pause
- FN+9 Next Track
- FN+0 Mute
- FN+ Volume –
- FN+ Volume +

• FUNCTION KEY COM BINATIONS

- F N + I Print Screen
- FN+O Scroll Lock
- FN + P Pause

- FN +J Insert
- FN+ K Home
- FN+L End
- FN+WIN Lock Win Key
- FN+B
- Turn off/on Sleep in the
- Wireless mode
- FN+N Toggle MAC/Win OS
- FN+M Toggle Numbers/Functions on F-row
- FN + BACKSPACE Check Battery Life Reset the Keyboard (hold 3s)
- FN+Q Short Press to Switch to BT1; Long Press to Pair Devices
- FN+W Short Press to Switch to BT2; Long Press to Pair Devices
- FN+ E Short Press to Switch to BT3 Long Press to Pair Devices
- FN+R Short Press to Switch to 2.4G Mode;Long Press to Pair Devices
- FN +T Wired Mode

• LIGHT EFFECTS

- FN+- Toggle Side Light Effects
- FN+DEL Toggle Side Light Brightness
- FN+PGU P Toggle Side Light Speed
- FN+PGDN Toggle Side Light Colors
- FN +\I Toggle RGB Effects
- FN + ENT ER Turn on/off RGB Lights
- FN + R_SHIFT Toggle RGB Colors
- FN + -I, Backlights Brightness –
- FN + 1' Backlights Brightness +
- FN +<- Backlights Speed-
- FN+→ Backlights Speed +

• CHANGE RGB EFFECTS

Press Fn+\I to switch the RGB effects of your Epomaker TK68 keyboard. Press Fn+- to switch the side light effects.

• PAIRING BLUETOOTH

Turn on the switch on the back of the keyboard to make sure that the keyboard is under the wireless mode:

- Hold Fn+Q/W/E for 3-5 seconds till the indicators flashes fast in red/blue/yellow, the keyboard is ready to pair.
- Turn on your Bluetooth device and find 'Acrylic68', then connect. When the keyboard is connected to the Bluetooth device, the light on the Q/W/E key stops flashing and the connection is done.
- Press Fn+Q/W/E to toggle between the Bluetooth devices 1 /2/3.

• PAIRING WIRELESS 2.4GHz

- .Press Fn+R to the 2.4Ghz mode, and then holding Fn+R for for 3-5 seconds till the light flashes fast in green, the keyboard is ready to pair.
- Insert the 2.4G dongle to your device, the R key stops flashing green and the connection is done.


• WIRED MODE

Press Fn+ T till the key lights white, the keyboard enters the wired mode.


- SPECS

- KEYS AMOUNT: 68keys
- SHELL MATERIAL: Acrylic
- STRUCTURE: Gasket-mounted
- STABILIZER TYPE: Plate-mounted
- PCB TYPE: 3/5-pin Hotswap PCB
- PLATE MATERIAL: PC
- BATTERY CAPACITY: 2500mAh
- CONNECTIVITY: Type-C Wired, 2.4 & Bluetooth Wireless
- ANTI-GHOST KEY: NKRO in all modes
- COMPATIBILITY: WINDOWS/MAC
- DIMENSION: 329 x 119 x 30 mm
- WEIGHT: Around 0.76kg


REPLACING KEY CAPS AND SWITCHES



REPLACING KEYCAPS AND SWITCHES
For a full guide on how to remove keycaps and switches scan the QR Code or type in your browser:
<https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches>

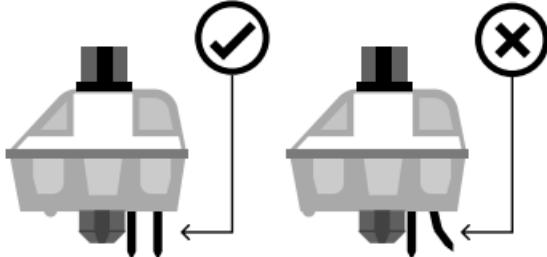


Before installing switches, be sure the pins are clean and straight.




Push Straight Down
Please be gentle. Be sure the pins are aligned with the slots.

Included Tools




Switch Puller



Keycap Puller

Mechanical Switch
Example of a switch as seen from top after you remove the keycap to prepare for switch removal.

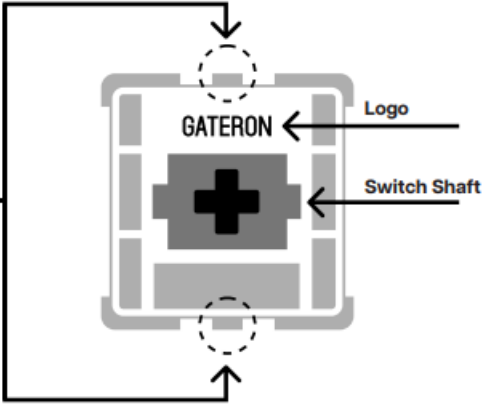

Remove Switches

1. Grab your Switch Removal Tool and align the gripping teeth vertically (on the Y-Axis) at the center of the switch, as shown in the example graphic above.
2. Grab the switch with the Switch Puller and apply pressure until the switch releases itself from the plate.
3. Using firm but gentle force pull the switch away from the keyboard using a vertical motion.

Install Switches

1. Check that all the switch metallic pins are perfectly straight and clean
2. Align the switch vertically to have the Gateron logo facing north. The pins should align themselves to the keyboard PCB.
3. Press the switch down until you hear a click. This means your switch clips have attached themselves to the keyboard plate.
4. Inspect the switch to ensure it's properly attached to your keyboard, and test it.

<https://epomaker.com/blogs/guides/diy-guide-how-to-remove-and-replace-your-mechanical-keyboard-switches>

Note: If the key doesn't work its possible you may have bent one of the switches while installing it. Pull the switch out and repeat the process. Pins may be damaged beyond repair and need replacement if this process is not done correctly. Never apply excessive force when replacing keycaps or switches. If you cannot remove or install keycaps or switches please contact customer service as soon as possible to avoid damage to the keyboard due to operating errors.

TECHNICAL ASSISTANCE

For technical assistance, please email to support@epomaker.com with your purchase order number and a detailed description of your issue.

We normally respond to enquiries within 24 hours. If you purchased your keyboard from a distributor or not from any official store of Epomaker, please contact them directly for any additional help.

COMMUNITY FORUMS


Join our community and learn together with other keyboard enthusiasts.

- <https://discord.gg/2q3Z7C2>
- <https://www.reddit.com/r/Epomaker/>

WARRANTY

EPOMAKER's Warranty covers any factory defects that might affect the proper functionality of your purchase. It doesn't cover any damage that may occur from normal wear and tear. If your product is defective we will send you a replacement unit. Replacement units might require you to send the defective unit back to Epomaker. We provide a 1 year warranty for our products when bought from our website ([EPOMAKER.com](https://epomaker.com)). Your item will not be covered by your 1 year warranty if the inspection shows any sign of modification or changes unsupported by the original product, these include: Changing internal components, Assembling and reassembling the product, Replacing Batteries, etc. We will ONLY COVer the item if it is bought from our official stores. You do not have a warranty with us if you bought the item from another reseller or likewise. Please contact the store that you bought your product from to resolve issues.

Documents / Resources

	EPOMAKER TK68 Wireless Mechanical Keyboard [pdf] User Guide TK68, Wireless Mechanical Keyboard, Mechanical Keyboard, Wireless Keyboard, Keyboard, T K68 Keyboard
-------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

-  [Epomaker](#)
-  [Reddit - Dive into anything](#)