



EPOS surround sound with Windows 10 User Guide

[Home](#) » [EPOS](#) » EPOS surround sound with Windows 10 User Guide 

Contents

- [1 EPOS surround sound with Windows 10](#)
- [2 How to Configure](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

EPOS

EPOS surround sound with Windows 10




How to get EPOS surround sound with Windows 10.


For Windows 10, the settings have been changed to be 24 bit as default, which means that as a GSX 1000 or GSX 1200 PRO user, you will need to manually change it back to 16 bit for the EPOS surround sound to work.

How to Configure

1. Right click on the speaker icon at the bottom menu bar

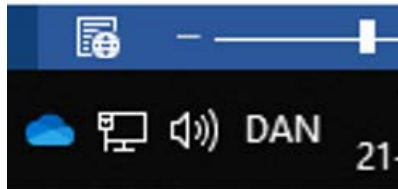

2. Open "Open Sound settings"

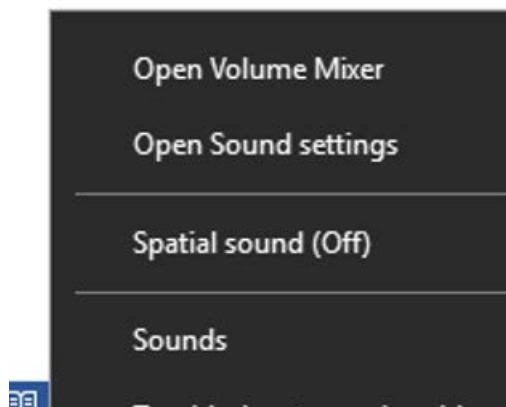

3. Open "Sound Control Panel"

Related Settings


[Bluetooth and other devices](#)

[Sound Control Panel](#)


[Microphone privacy setting](#)

[Ease of Access audio setting](#)


4. Under speakers, Select "GSX 1000" or "GSX 1200 PRO"

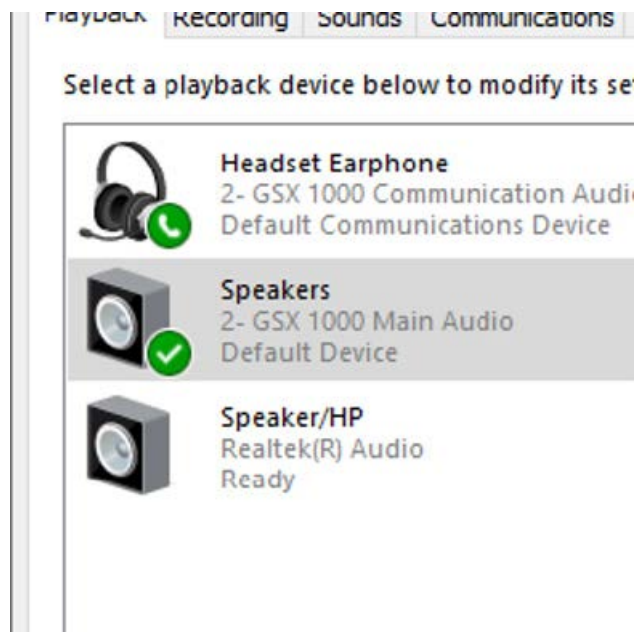


5. Open "Properties" to access the settings and preferences. (In the same window as previous step)

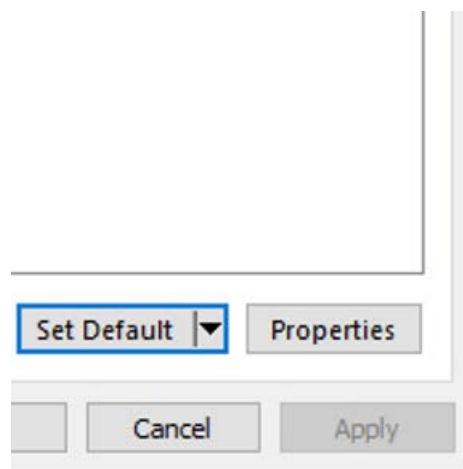


6. Select "Advanced" under Speaker Properties

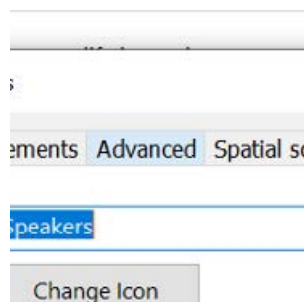


7. Access the drop down and select 16 bit, 48000 Hz (DVD Quality) (In the same window as previous step)

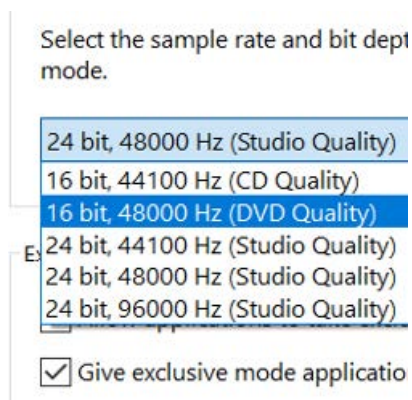


8. Click "OK" to save the change.(In the same window as previous step)

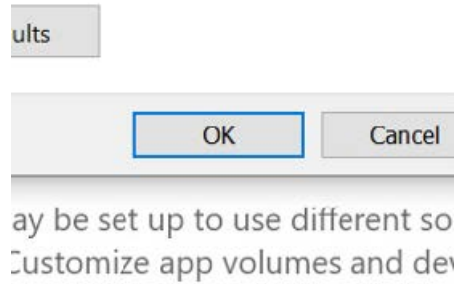

9. Check that the Speakers (GSX 1000 or GSX 1200 PRO) is still selected.

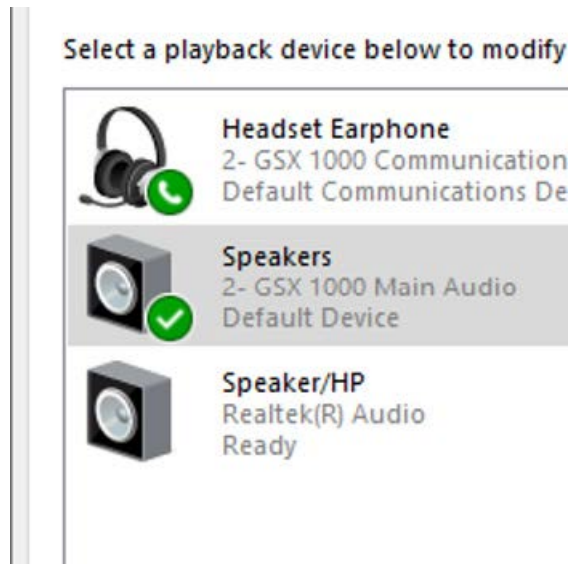

10. Click "Configure" to access the configuration settings (In the same window as previous step)
- 11.

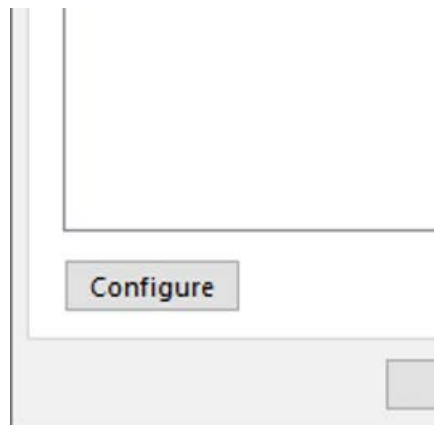

Select "7.1 Surround" as Audio channels under "Speaker Setup"

Choose your configuration

Select the speaker setup below that is most like the configuration on your computer.

Audio channels:

Stereo
7.1 Surround

 Test

12. Click "Next"

Click any speaker above to test it.

Next	Cancel
------	--------

13. Option to customize your configuration

Check the boxes below to indicate which are present in your surround configuration

Optional speakers:

- ☒ Center
- ☒ Subwoofer
- ☒ Side pair
- ☒ Rear pair

14. Click "Next" (In the same window as previous step)

Click any speaker above to test it.

Next	Cancel
------	--------

15. Option to select full-range speakers

 
Satellite speakers usually have a limited d
range and require that they be used with
If your configuration includes full-range s
select them below.

Full-range speakers:

- ☒ Front left and right
- ☒ Surround speakers

16. Click "Next" (In the same window as previous step)

Click any speaker above to test it.




17. Click "Finish"



18. Click "OK" to close the sound control window.

LinkPad Dock USB Audio
not plugged in

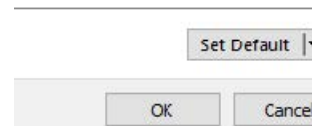

19. Close the sound settings and you are ready to enjoy 7.1 EPOS surround sound on your GSX 1000 or GSX 1200 PRO.

Related Settings

[Bluetooth and other devices](#)

[Sound Control Panel](#)

[Microphone privacy settings](#)

[Ease of Access audio settings](#)

Have a question?

[Fixing sound problems](#)

[Setting up a microphone](#)



[Get help](#)

—



[EPOS EPOS surround sound with Windows 10](#) [pdf] User Guide
EPOS, surround sound, Windows 10