



EPSON Chit and Receipt Printing Instruction Manual

[Home](#) » [Epson](#) » EPSON Chit and Receipt Printing Instruction Manual 



Contents

- [1 Chit and Receipt Printing](#)
- [2 Overview](#)
- [3 How to Configure Chit and Receipt Printing](#)
- [4 Appendix – POS/KDS Menu Routing Considerations](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

Chit and Receipt Printing

About this Guide

This guide consists of three sections:

- Overview – A detailed description of what chit and receipt printing is in an Epson TrueOrder Kitchen Display System (KDS).
- How to configure Chit and Receipt Printing – A procedure that can be followed to enable this functionality.
- Appendix – POS/KDS Menu Routing Considerations

Overview

When enabled, this function allows the Master or POS attached device to print an incoming chit or receipt on attached printer. This can only be done when the POS is sending print jobs to the KDS which is configured for a POS parser.




EPSON is a registered trademark and EPSON is a registered logomark of Seiko Epson Corporation. All other product and brand names are trademarks and/or registered trademarks of their respective companies. Epson disclaims any and all rights in these marks. Copyright 2024 Seiko Epson Corporation.


How to Configure Chit and Receipt Printing

This procedure assumes that you already have a Multi-Station KDS setup as described in the Epson KDS Multi-Station Quick Start Guide. However, these instructions can be referenced to enable incoming chit and receipt printing in any Epson KDS that uses a Parser.

1. Enable Print Chit Function
 1. Select Stations
 2. Click Device Config.
 3. Select POS Attached Device to enable the Chit and Receipt Printing function.

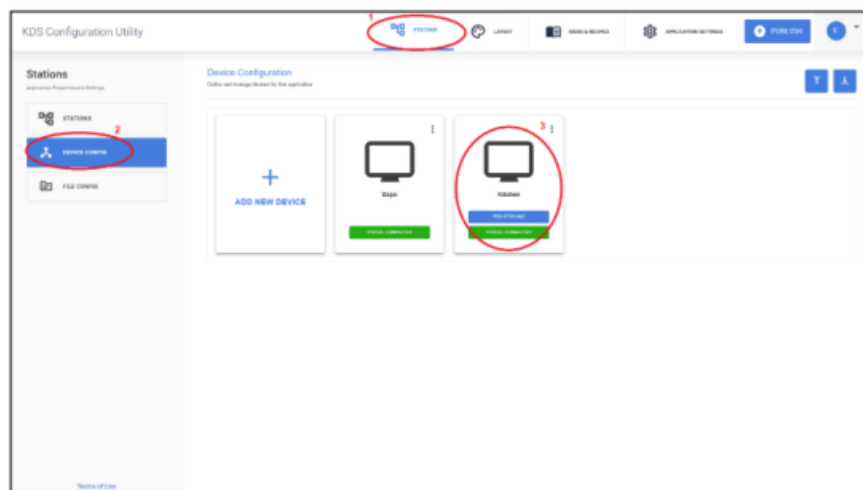

4. Click Print Chit.
5. Click Save
6. Click Publish.

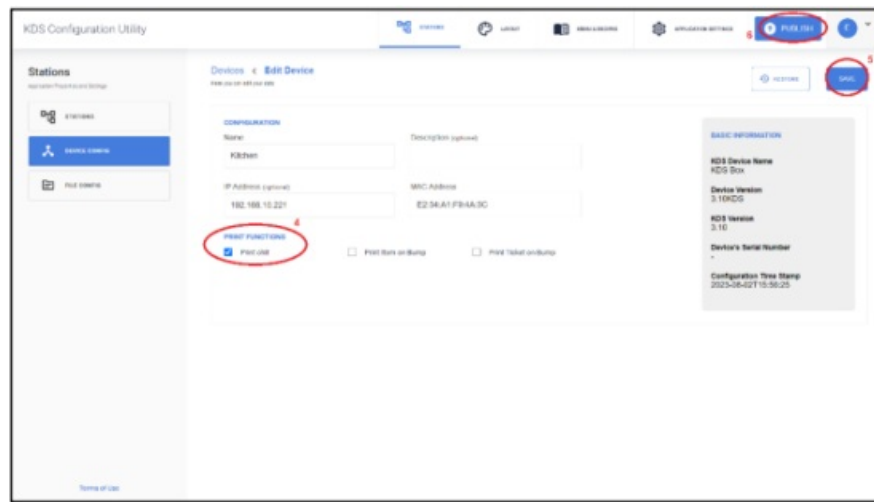

Appendix – POS/KDS Menu Routing Considerations


Some considerations dependent on if you are POS Menu Routing vs KDS Menu Routing.

KDS Menu Routing – The print job is directed to the Master, POS Attached device so the “Print Chit” option will enable the incoming receipt/chit to print immediately when it is sent.

POS Menu Routing – The print jobs are not directed to the Master, POS Attached device. They are directed to the prep stations. Enabling the “Print Chit” option on the Master, POS Attached device will print all print jobs directed to the prep stations.

111-56-QUM-011
Rev 3.20

Documents / Resources

	<p>EPSON Chit and Receipt Printing [pdf] Instruction Manual</p> <p>111-56-QUM-011 Rev 3.20, Chit and Receipt Printing, Receipt Printing, Printing</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.