

**EPSON®**  
**ELPMB68 Projector**  
**Ceiling Mount**



# EPSON ELPMB68 Projector Ceiling Mount User Guide

[Home](#) » [Epson](#) » EPSON ELPMB68 Projector Ceiling Mount User Guide 

## Contents

- [1 ELPMB68 Projector Ceiling Mount](#)
- [2 Product Usage Instructions](#)
- [3 Safety Precautions](#)
- [4 Installation](#)
- [5 Maintenance](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

# EPSON®

**ELPMB68 Projector Ceiling Mount**



## Product Specifications

- Model: ELPMB68
- Type: Projector Ceiling Mount
- Part Number: V12H006AE0
- Email: [info@euromet.com](mailto:info@euromet.com)
- EM Number: 09058

## Product Usage Instructions

### Installation

1. Position and securely fasten the ceiling plate to the ceiling.
2. Insert the calibration device into the ceiling plate.
3. Position the projector adaptor plate with adjustable arms on the bottom side of the projector.
4. Secure the adjustable arm plate to the projector by positioning the plate's screws with the designated holes on the bottom of the projector. Secure the projector to the ceiling mount with the two setscrews. Calibrate and position the Mount with the four adjustment
5. knobs. In the case of heavy loads, use a hex key to calibrate the projector position.
6. Tighten the four button screws to eliminate vibration or movement during operation.

### Maintenance

- Do not try to service this product yourself, except as specifically explained in this User's Guide. Refer all other servicing to qualified service personnel.
- **HARDWARE'S INSPECTION:** Regularly inspect all hardware components for any signs of wear or damage.
- **CLEANING:** Use a soft, dry cloth to gently wipe down the mount's surfaces, removing any dust or dirt. For stubborn stains or dirt buildup, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals that may damage the mount's finish. Ensure that the mount is completely dry before reattaching the projector to prevent any electrical issues.
- **LUBRICATION OF MOVING PARTS (IF APPLICABLE):** If the projector mount includes moving parts such as

hinges or swivel mechanisms, apply a small amount of lubricant to ensure smooth operation. Use a lubricant recommended by the manufacturer to prevent damage to the mount's components.

**CONCLUSIONS:** By following this maintenance plan, you can keep your mount adapter and in optimal condition, prolonging their lifespan and ensuring reliable performance for your presentations or entertainment needs.

## **FAQ**

### **Q: Can I install this ceiling mount by myself?**

A: It is recommended to have at least two people for the installation process to ensure safety and proper mounting.

## **User's Guide**

### **ELPMB68**

### **Projector Ceiling Mount V12H006AE0**

## **Safety Precautions**

### **DANGER**

- Failure to comply with these safety precautions results in death or serious injury;
- ELECTRICAL SHOCK HAZARD! Always turn off, disconnect, and disengage all power sources to the projector before servicing;
- Maximum projector weight limit is 45kg (99 lbs).

### **WARNING**

Failure to comply with these safety precautions may result in serious injury.

 
- At least two qualified people should perform the installation procedure. Personal injury and/or property damage can result from dropping or mishandling the projector;
- If mounting to ceiling studs, make sure that the mounting screws are anchored into the center of the ceiling studs. Use of an edge-to-edge stud finder is recommended;
- Be aware of the mounting environment. If drilling and/or cutting into the mounting surface, always make sure that there are no electrical wires in the wall;
- Do not install near sources of high heat. Do not install on a structure that is prone to vibration, movement or chance of impact.

## **TOOLS INCLUDED**


- 5 mm hex key;

## **Installation**


- Position and securely fasten the ceiling plate to the ceiling.

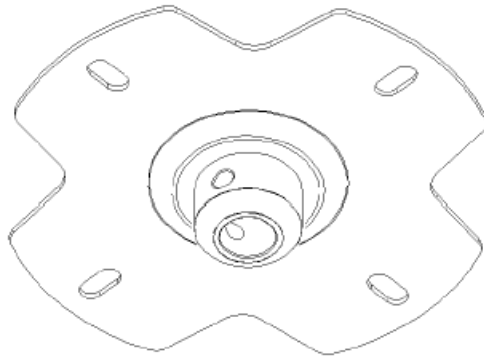

 - Insert the calibration device into the ceiling plate

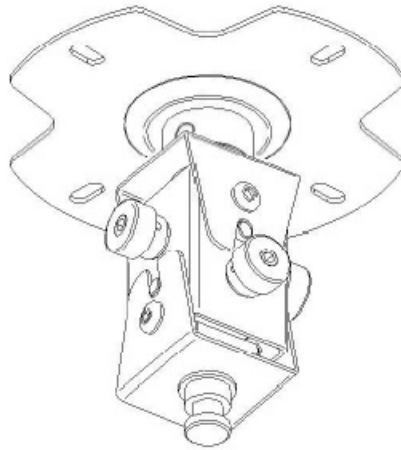


 - Position the projector adaptor plate with adjustable arms on the bottom side of the projector.

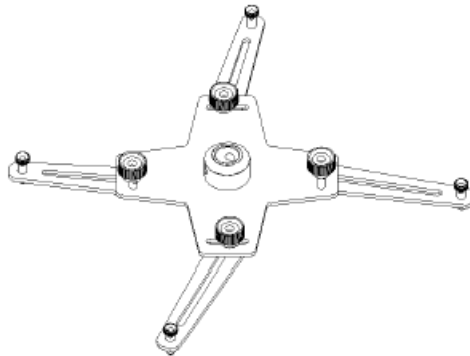


- Secure the adjustable arm plate to the projector by positioning the plate's screws with the designated holes on the bottom of the projector.

 
Secure the projector to the ceiling mount with the two setscrews

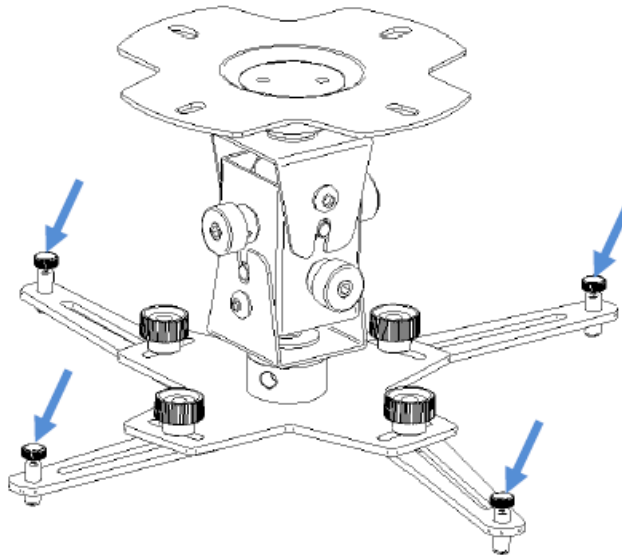

 - Calibrate and position the Mount with the four adjustment knobs.
- In the case of heavy loads, use a hex key to calibrate the projector position.

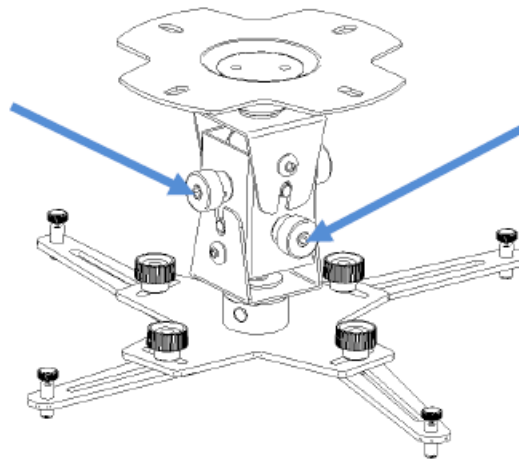

 - Tighten the four button screws to eliminate vibration or movement during operation.

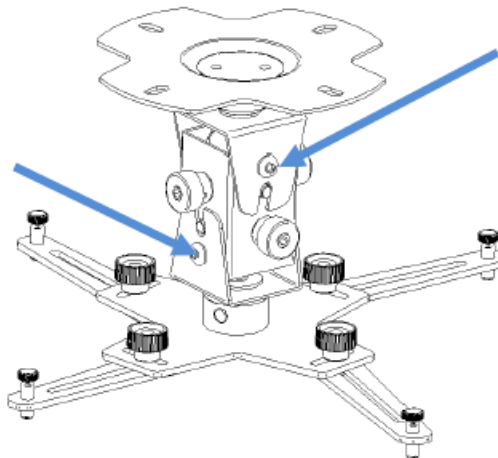

## Maintenance

Do not try to service this product yourself, except as specifically explained in this User's Guide. Refer all other servicing to qualified service personnel.

### HARDWARE'S INSPECTION

The ELPMB68 projector ceiling mount does not require special maintenance, but a visual inspection must be

conducted before each installation involving the system.

Please conduct a visual inspection to ensure that all screws are in the correct positions and none are missing.

- Tighten any loose hardware as needed to maintain stability and prevent the risk of the projector falling or becoming misaligned.
- Ensure that screws, nuts and all components are not bent, damaged, or broken.
- Please use the appropriate tool to check that all screws are securely tightened.
- If any parts are broken or missing, please contact the seller to obtain the necessary spare parts.

## CLEANING

Use a soft, dry cloth to gently wipe down the mount's surfaces, removing any dust or dirt. For stubborn stains or dirt buildup, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals that may damage the mount's finish. Ensure that the mount is completely dry before reattaching the projector to prevent any electrical issues.

 
## LUBRICATION OF MOVING PARTS (IF APPLICABLE):

If the projector mount includes moving parts such as hinges or swivel mechanisms, apply a small amount of lubricant to ensure smooth operation. Use a lubricant recommended by the manufacturer to prevent damage to the mount's components.

## CONCLUSIONS

By following this maintenance plan, you can keep your mount adapter and in optimal condition, prolonging their lifespan and ensuring reliable performance for your presentations or entertainment needs.

## Documents / Resources

	<p><a href="#">EPSON ELPMB68 Projector Ceiling Mount</a> [pdf] User Guide ELPMB68, ELPMB68 Projector Ceiling Mount, Projector Ceiling Mount, Ceiling Mount</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.