

**EPSON**  
**SD-880 Dual**  
**Floppy Disk Drive**



## EPSON SD-880 Dual Floppy Disk Drive Instructions

[Home](#) » [Epson](#) » EPSON SD-880 Dual Floppy Disk Drive Instructions 

### Contents

- [1 EPSON SD-880 Dual Floppy Disk Drive](#)
- [2 OVERVIEW](#)
- [3 Specifications](#)
- [4 Installation Instructions](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)
- [7 Related Posts](#)

# EPSON

### EPSON SD-880 Dual Floppy Disk Drive



### OVERVIEW

Doom Keeper GK-100DL

## Features

- Three-color backlight
- Backlit symbols and keys
- Metal base for increased durability

**More Information:** [defender.ru](https://defender.ru)

## Werewolf GK-120DL

### Features:

- Metal base for increased durability
- Hotkeys for quick access to office, multimedia, and internet applications
- Rainbow backlight
- **More Information:** [defender.ru](https://defender.ru)

## Raid GK-778DL

### Features:

- Backlit symbols and keys
- Rainbow backlight
- Convenient flat keys

**More Information:** [defender.ru](https://defender.ru)

For a comprehensive list of Defender's gaming keyboards, you can visit their official catalog: [defender.ru](https://defender.ru) If you have specific features in mind or need assistance with other models, feel free to ask!

## Specifications

- **Model:** EPSON SD-880
- **Compatibility:** IBM PC-compatible computers
- **Interface:** ISA
- **Drive Types:** 3.5" 1.44MB and 5.25" 1.2MB

## Installation Instructions

### Step 1: Preparation

Turn off the computer and disconnect the power cable to avoid any electrical hazards.



### Step 2: Access FDD Slots

Refer to your computer manual to open the case and locate the FDD slots.




### Step 3: Mounting the FDD

Mount the EPSON SD-880 FDD in either the upper or lower slot using four screws, ensuring the bezel is flush with the front of the PC.



### Step 4: Jumper Configuration

Refer to the jumper settings to configure the FDD based on your requirements. Make changes with caution when the computer is off and unplugged.

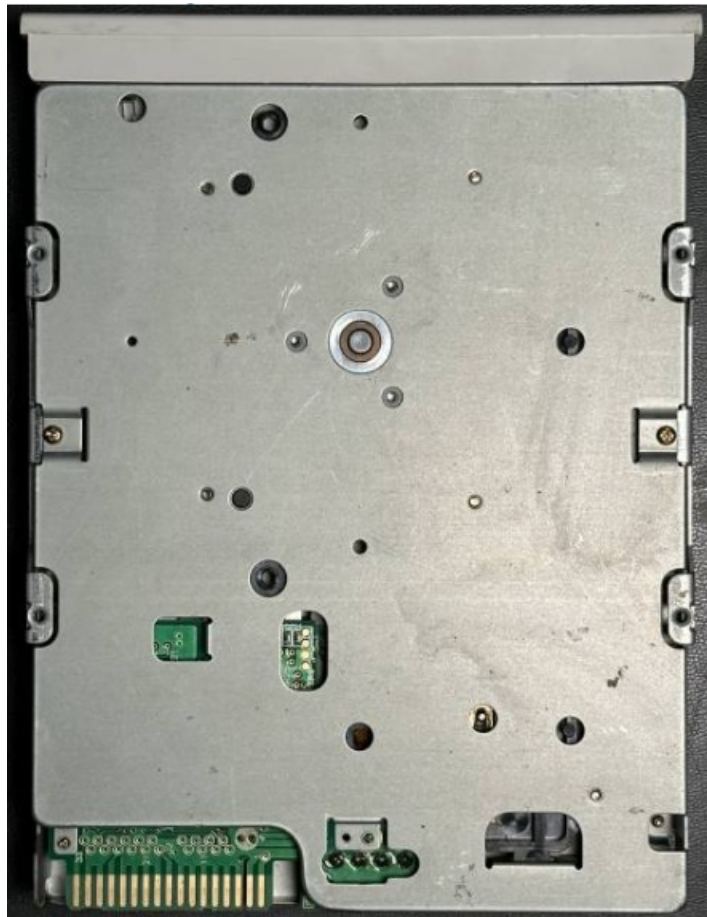

### Step 5: Cable Connection

Attach the 4-pin power cable and the 34-pin edge connector to the rear of the FDD, aligning pin 1 to the left with the cable connector.

### Jumper Configurations


Refer to the provided diagram for detailed jumper configurations for drive select and mode change settings.

### FAQ

#### Q: How do I determine which drive (3.5" or 5.25") is set as Drive A or Drive B?

A: The jumper settings (SS1) determine which drive is assigned as Drive A or Drive B. In the default position (A), Drive A is set as the 3.5" FDD if the dual drive is in the upper slot and uses the end FDD connector on the cable.

### Documents / Resources

	<p><a href="#">EPSON SD-880 Dual Floppy Disk Drive</a> [pdf] Instructions SD-800, SD-880 Dual Floppy Disk Drive, SD-880, Dual Floppy Disk Drive, Floppy Disk Drive, Disk Drive, Drive</p>
---	---

### References

- [User Manual](#)

## **Manuals+. Privacy Policy**

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.