



# ERGO WS8938 Wireless Panic Button Instruction Manual

[Home](#) » [ERGO](#) » ERGO WS8938 Wireless Panic Button Instruction Manual 

## Contents

- [1 ERGO WS8938 Wireless Panic Button](#)
- [2 Introduction](#)
- [3 Activating, Enrolling and Programming](#)
- [4 Compatibility](#)
- [5 Specifications](#)
- [6 Replacing the Batteries](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

**ERGO**

## ERGO WS8938 Wireless Panic Button



### Introduction



The WS8938 Wireless Panic Button is designed to transmit an emergency signal from any location within the range of the alarm system, regardless, if the system is armed or disarmed. The button is small and lightweight enough to be placed in a shirt pocket or tucked away inside a purse. It can be used with the supplied neck strop or multifunctional clip – which can connect to your belt, car visor or be permanently mounted to a convenient location. To activate, press, and hold the button for approximately 2 seconds. The LED located on the top of the unit will light up to confirm a signal has been sent.

**NOTE:** Signals will not be received if the button is not within range of the wireless receiver.

### Activating, Enrolling and Programming



To conserve battery power the button comes deactivated. To activate simply remove the cover and slide the switch to the ON position. This device is supervised. If the unit is removed from the coverage range a trouble will be indicated on the system. If this is not desired, the supervisory bit for this zone can be disabled on the receiver. The following outlines the basic steps for programming and enrolling this device on PowerSeries receivers. For additional options or for other receivers please refer to the specific receiver installation manuals.

- Step 1 – Program Electronic Serial Number (ESN)

Section [804], subsections (01) – [32]

[01]Zone 1 | \_ \_ \_ \_ \_

[32]Zone32 | \_ \_ \_ \_ \_

Enter the 6-digit ESN located on the back of the device into the next available zone slot.

- Step 2 -Program Zone Definition

Section [00 1] -[004]

Define the selected zone number with appropriate zone type [e.g., 24hr Panic (16), 24hr Holdup (12), 24hr Medical (15)]

- Step 3 -Enable Wireles, Zone Attribute

Section [101] -[132]

Turn Option [8] ON (wireles, zone attribute) in corresponding zone attribute section Step 4 -Enable/Disable Supervision (default is enabled)

Section [804], subsections (82) -[85]

(82) Wireless Zone Supervision (Zones 1- 8)

		OPTION ON	OPTION OFF
_____	Option 1	Zone 01 Supervision Enabled	Disabled
.	.	.	.
_____	Option 8	Zone 08 Supervision Enabled	Disabled

(83) Wireless Zone Supervision (Zones 9-16)

(84) Wireless Zone Supervision (Zones 17-24)

(85) Wireless Zone Supervision (Zones 25-32)

## Compatibility

The WS8938 is compatible with the RF5132-868 Receiver.

## Specifications

- 32°10 | 20°f(0 °-49°)
- 5-93% RH
- Water-Resistant


## Replacing the Batteries

Under normal conditions, the batteries can last up to 2 years. If the battery is low, the trouble light on the keypad will turn ON. To replace the batteries, remove the top cover by inserting a coin into the slot located on the bottom right corner and twisting. Remove the screw at the center of the board to expose the batteries. Replace both batteries with Panasonic CR-2025 lithium batteries (see diagram). The polarity of the battery must be observed, as shown in the diagram above. Improper handling of lithium batteries may result in heat generation, explosion or


fire, which may lead to personal injuries.

**WARNING:** Danger of explosion if batteries are installed incorrectly. Replace only with the same or equivalent type recommended by the manufacturer. Keep away from small children. Do not try to recharge these batteries. If batteries are swallowed, promptly see a doctor. Disposal of used batteries must be made in accordance with the waste recovery and recycling regulations in your area.

#### Belt Clip Assembly and Mounting

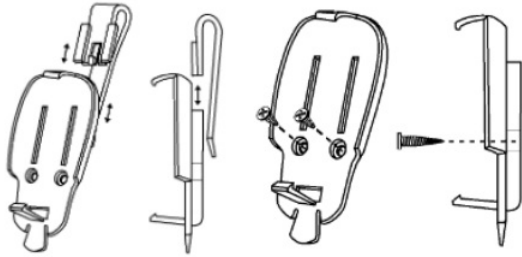

#### Replacing the Battery

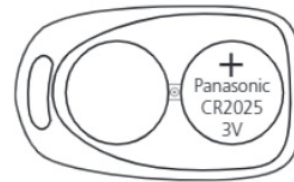

## Documents / Resources



[ERGO WS8938 Wireless Panic Button](#) [pdf] Instruction Manual

WS8938, Wireless Panic Button, WS8938 Wireless Panic Button, Panic Button, Button