




ESI CASES BG6812 Class B Digital Device User Manual

[Home](#) » [ESI CASES](#) » ESI CASES BG6812 Class B Digital Device User Manual 

ESI CASES BG6812 Class B Digital Device



Contents

- [1 GENERAL SAFETY](#)
- [2 PRODUCT OVERVIEW](#)
- [3 ACCESSORIES](#)
- [4 BASIC OPERATION](#)
- [5 SPECIFICATIONS](#)
- [6 FCC STATEMENT](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

GENERAL SAFETY

Read this manual thoroughly before you start using the Speaker.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not place any object on top of the product

This product must be positioned in a sufficiently stable location.

- No naked flame source, such as candles, should be placed on the product.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products.

As this could result in the product temperature rising and could cause a fire.

- If you notice any unusual odors or smoke around the unit, immediately switch off the product and contact the service center. Failure to do so may result in fire or electric shock.
- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust.
- Please ensure to contact our call center for any repair or service required for the products.

 
Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
 - Away from direct sunlight or heaters.
 - Away from splashes or food.
 - Protected from excessive dust or grease.
 - Do not place this equipment in a confined space such as a bookcase or similar unit. Allow 20cm above and 5cm spacing on both sides for proper ventilation.
 - Do not place the Product near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
 - Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
 - Do not place small metallic objects on top of the unit.
 - Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion.
- Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the product.

PRODUCT OVERVIEW


1. Hang Strap Hole
2. Power ON & OFF

3. Volume UP/ Skip Forward
4. Play / Pause
5. Volume down/ Skip backward
6. Mode
7. USB-A Input
8. AUX Input
9. TF Card Slot
10. USB-C Charging

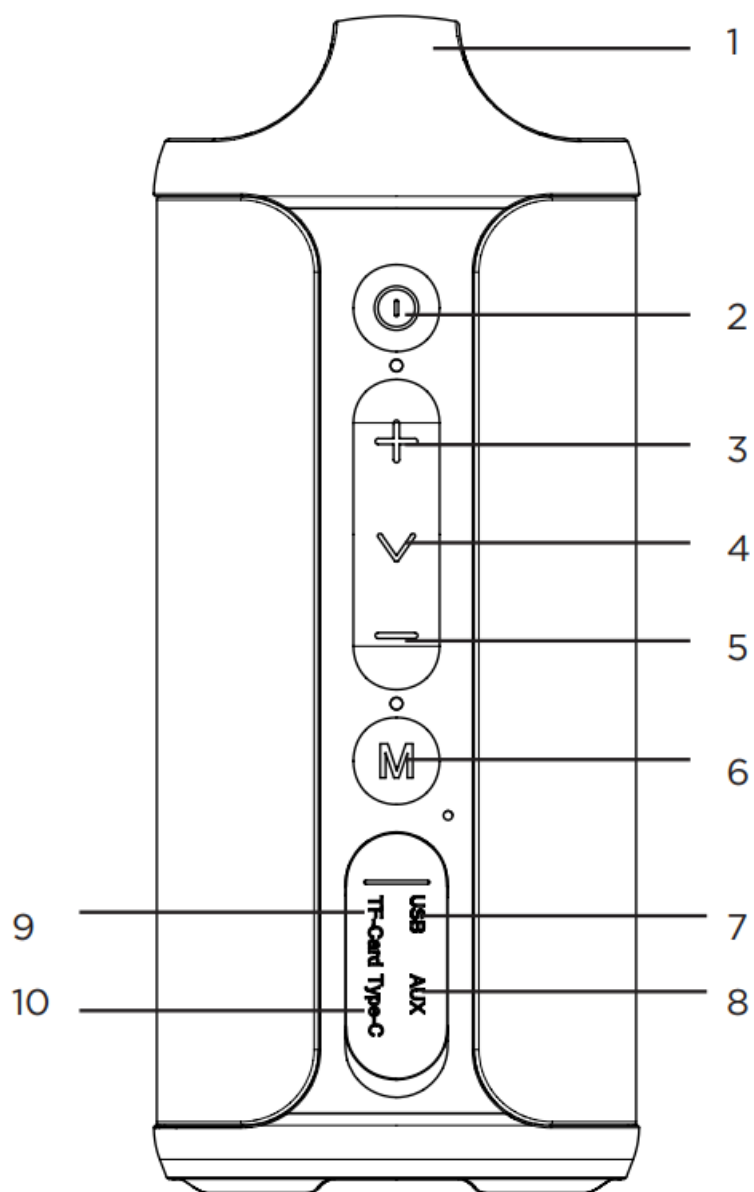


ACCESSORIES

  - 3.5 mm Audio cable

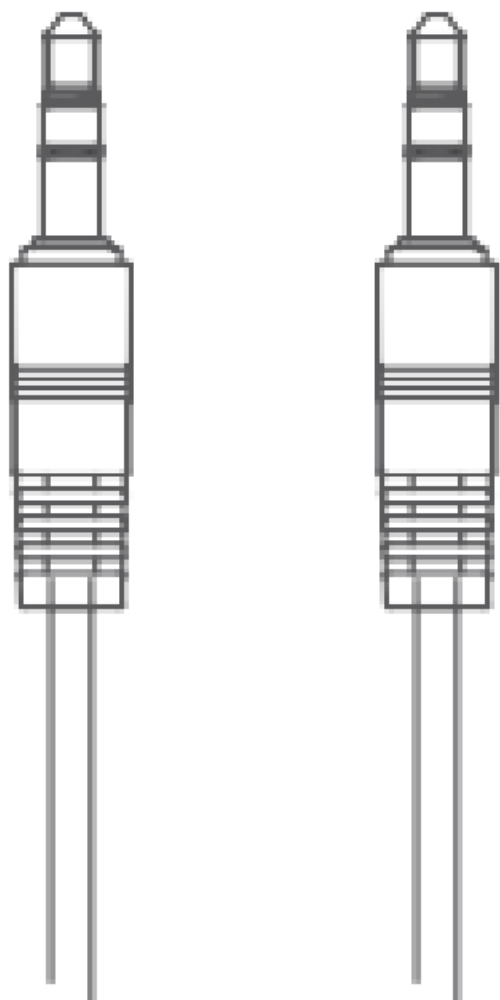

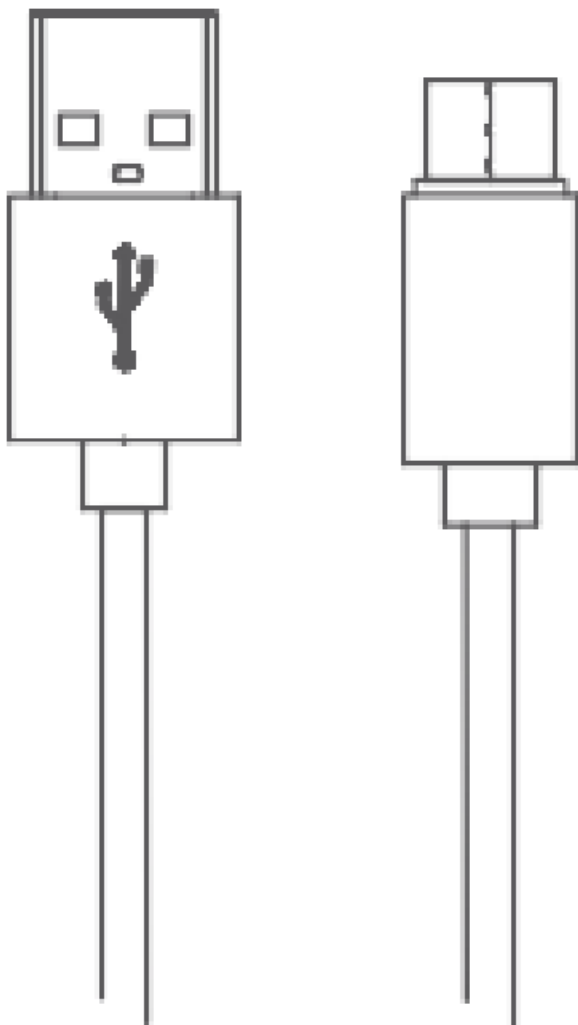


- Type-C cable




BASIC OPERATION



 
Bluetooth Mode

- Press the  button to turn on the device and enter Bluetooth Mode , Follow the operating instructions for Bluetooth connection on your device and allow searching bluetooth speaker. Usually this is done by going to “set up ”menu, connect for “Bluetooth” function and then selecting the option to search for Bluetooth device “ COBBS 20WL1 ” , your device (mobile phone, PC, tablet,. etc.) will detect the Bluetooth speaker and connect. if your phone requires a password or a PIN number, enter 0000 and confirm it.




After connection, you can adjust volume and select last/next song by pressing  and  .

If you want to get the coming phone call, short press  , then you can make phone call by the speaker. Press again to end the phone call.




Music playback from Micro SD card

- Power on the speaker and insert a Micro SD card. Make sure to insert the memory card carefully and in the correct position. The music will start to play automatically.
- To playback your music, press  button to play/pause the music.
- Press the or for the next track  or  previous track or adjust the music volume.

Music playback from USB input

- Power on the speaker and insert the USB flash disk inside to play music. The music will start to play automatically.
- To playback your music, press  button to play/pause the music.
- Press the  or  previous track or adjust the music volume.


Aux-in Mode

- Press  to turn on the device, then connect with the speaker by Aux in cable to PC, Mobile or other audio source. And then audio signal can be played by the speaker from external audio resource. During Aux-in mode, press the  /  to adjust the music volume.

Charging

- Charge the speaker through the charging cable from a computer or through a DC adaptor (Not supplied).
- Status LED Indication will be red, after fully charged, the light will be off.

True Wireless Stereo bluetooth connection (TWS function for two speakers)

1. Power on two speakers and the default setting is the Bluetooth mode, the LED light flash (a sound is heard confirming both speakers are set into Bluetooth pairing mode).
 - a. Make sure both speakers are not paired to any devices. If so, please disconnect.
2. Press the  button twice (2x) on 1 of the speakers, so it will then pair to the other.
3. On one speaker, the light will remain orange, on the other it will flash orange/blue.

This means you have successfully connected both speakers to each other, and that 1 of the speakers are ready to connect to with your smart device.
4. Open the mobile phone Bluetooth – search the “COBPS20WL1”;
5. Find the name “COBPS20WL1” – select the connection.
6. Bluetooth speaker voice prompt, it will state “Bluetooth connected”, then you will enjoy the music from both speakers.
7. Press M button twice (2x) again if you want to quit the TWS function and enjoy music through one speaker.

Note:

1. low power signal red light flashing slowly, charging red light steady on, full of red light off.
2. Bluetooth waiting for pairing state, 10 minutes no operation, automatic shutdown.

SPECIFICATIONS

Input	5Vdc 1A
Lithium Battery	3.7Vdc 1200mAh
Speaker power	10W
Dimensions	75 (w) x 75 (d) x 190 (h) mm
Playtime	3-4 Hours at 50% Volume 1 Hour at 100% Volume
Charge Time	3-4 Hours

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference, and
- (2)this device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources

	ESI CASES BG6812 Class B Digital Device [pdf] User Manual BG6812 Class B Digital Device, BG6812, Class B Digital Device, B Digital Device, Digital Device
---	--

References

- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.