

# **ESI U86 XT macOS Beta Driver Instructions**

Home » ESi » ESI U86 XT macOS Beta Driver Instructions

#### **Contents**

- 1 ESI U86 XT macOS Beta Driver
- 2 ESI U86 XT / U168 XT / U108 PRE macOS beta driver
- 3 Documents / Resources
  - 3.1 References



## **ESI U86 XT macOS Beta Driver**



### ESI U86 XT / U168 XT / U108 PRE macOS beta driver

This is a beta driver supporting macOS 11 BigSur, macOS 12 Monterey and macOS 13 Ventura. This means that certain limitations (see below) and possibly problems are to be expected. You can participate in driver testing to help our further development of this new driver platform that was developed from scratch to support macOS 11 BigSur, macOS 12 Monterey and macOS 13 Ventura. If you have any issues or you want to report something about our driver, you can send an email to info@esi-audio.com and/or contact our technical support.

#### release notes:

- this is a beta driver supporting macOS 11 BigSur, macOS 12 Monterey and macOS 13 Ventura
- works with Intel, M1 and M2 CPU based systems
- · there is no control panel application included yet
- · works with Audio MIDI Setup utility from Apple

**important notice:** in some cases after installation the output level is muted, to fix this move the level slider in Audio MIDI Setup as a workaround

www.esi-audio.com

# **Documents / Resources**



ESI U86 XT macOS Beta Driver [pdf] Instructions
U86 XT macOS Beta Driver, U86 XT, macOS Beta Driver, Driver

### References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.