



 
espiro miloo

 
 
 
 
2 in 1 Universal Stroller User Manual

 
 
 
 
 
 
 
 
Contents [[hide](#)]

 
 
 
 
 
 
 
 
- [1 Miloo 2 in 1 Universal Stroller](#)
- [2 ASSEMBLY](#)
- [3 CARRYCOT VENTILATION](#)
- [4 CLEANING AND OPERATING](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

 
 
 
 
 
 
 
 
 
Miloo 2 in 1 Universal Stroller

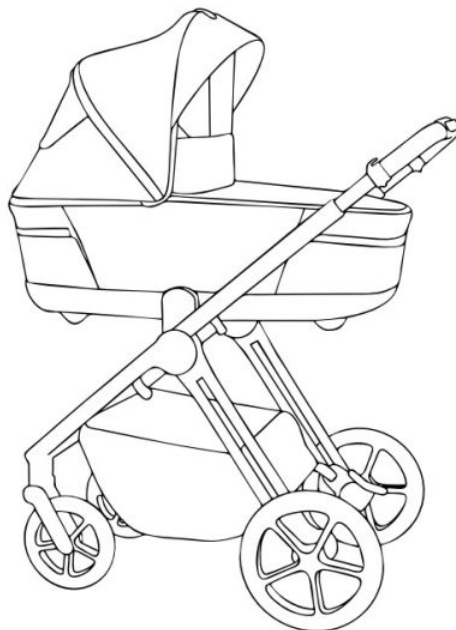


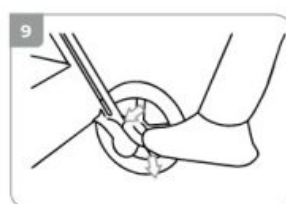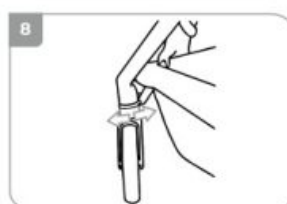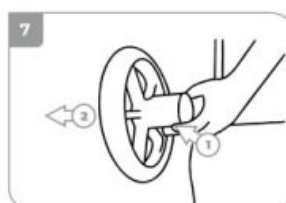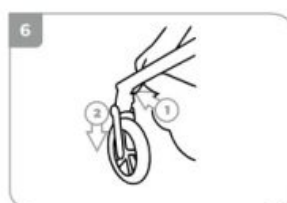


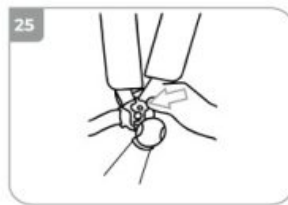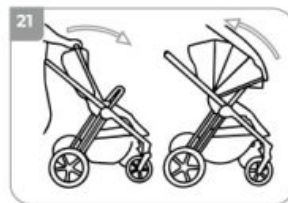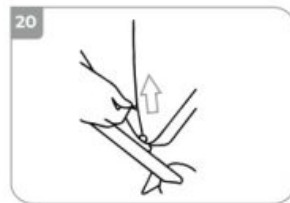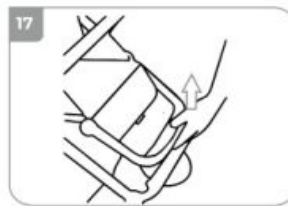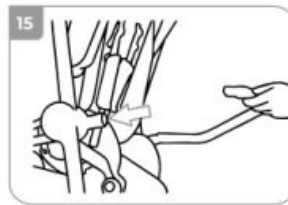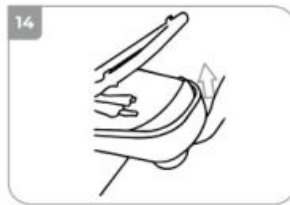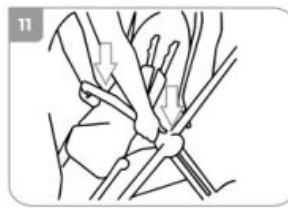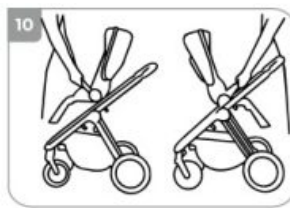

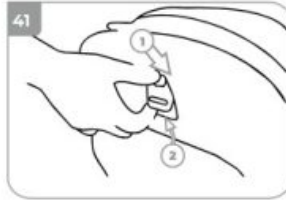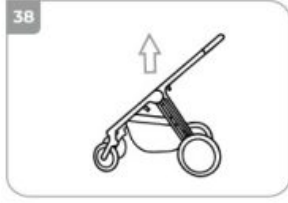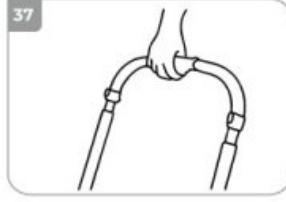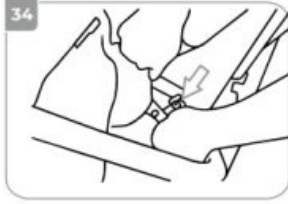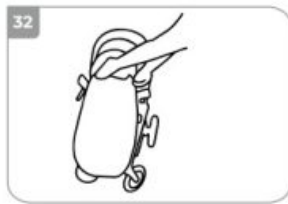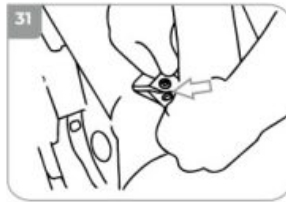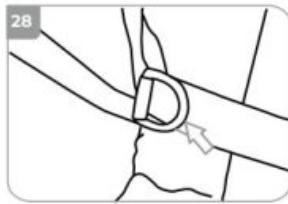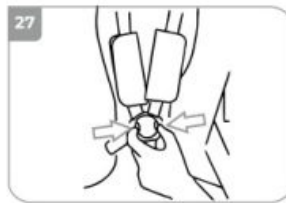

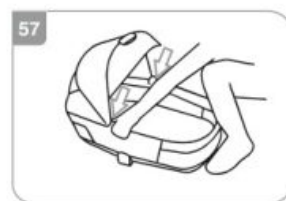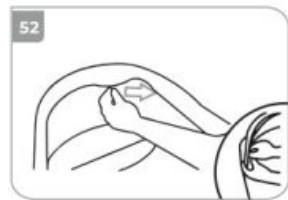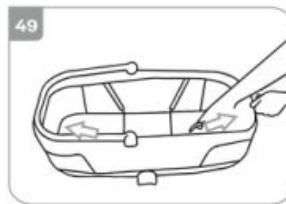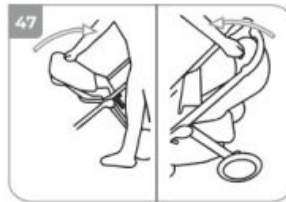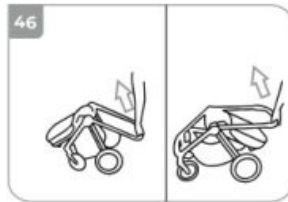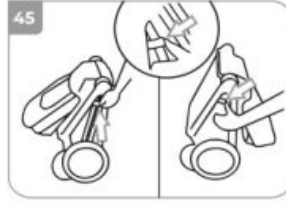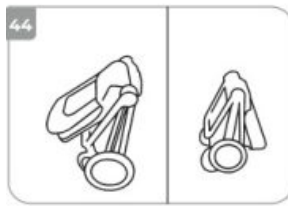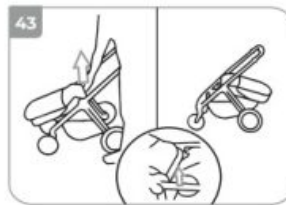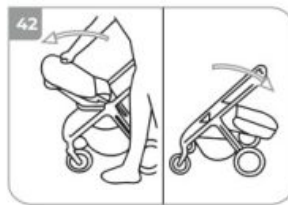

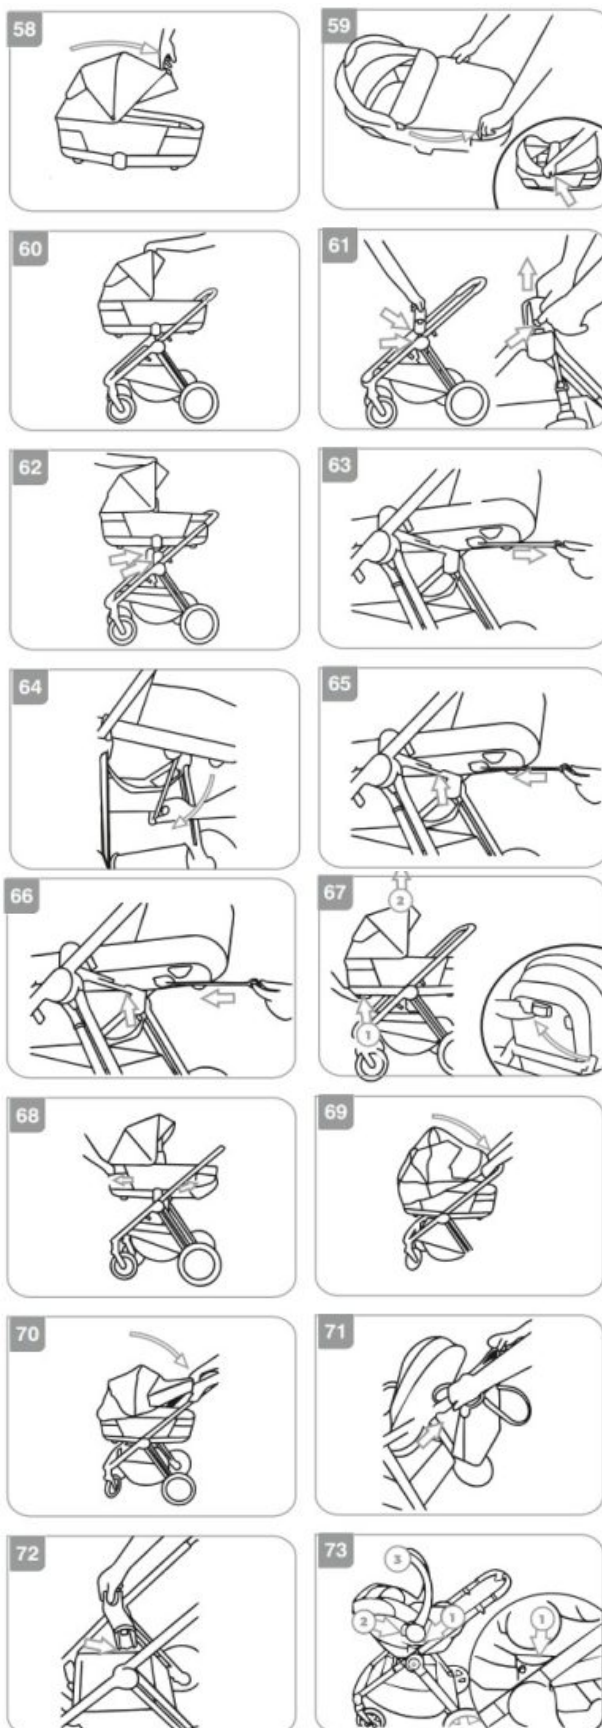

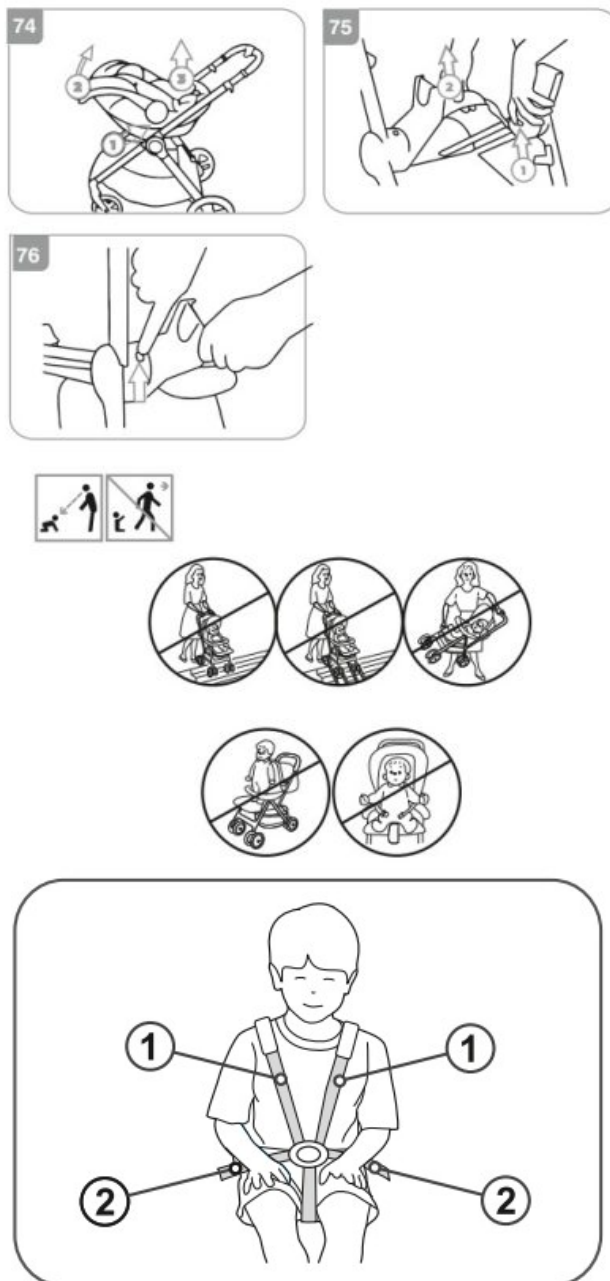

ATTENTION! Correctly mounted shoulder straps (1) should be located slightly above the child's shoulders, and the hip straps (2) should tightly hold the child's pelvis.

Straps cannot be twisted

Congratulations on your purchase of the MILOO pram from BDG Produkcja. Your child's journey will certainly be safe, comfortable and pleasant in it.

IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

COMPONENTS OF THE PRAM.

- 1.seat, 2. canopy,
3. bumper bar,
4. footmuff,
5. frame,
6. rear wheel – 2pc,

7. front wheel 2pc, 8. basket, 9. carrycot, 10. footcover, 11. bag

2. UNFOLDING THE PRAM

Release the latch of the locking mechanism on the outside of the pram frame (1).

NOTE: The unfolding lock on the MILOO pram consists of two safeguards (guide and the front leg).

Both parts have the option of unlocking themselves. This type of protection is intended to avoid damaging the locking mechanism if you try to unfold the pram without unlocking it first.

3. Pull the frame of the pram upwards until the latches lock into place.

Check that both latches are correctly locked before use.

Note: Periodically check the pram locks. Never use the pram if malfunction is detected.

WHEELS

ASSEMBLY OF THE FRONT WHEELS

4. Slide the front wheel assembly into the hub until it locks into place. Make sure the wheel is properly locked.

Repeat the operation on the other side.

ASSEMBLY OF THE REAR WHEELS

5. Slide the rear wheel assembly into the hub until it locks into place. Make sure the wheel is properly locked. Repeat the operation on the other side.

DISASSEMBLY OF THE FRONT WHEELS

6. Press the button of the locking mechanism (1) and simultaneously pull the front wheel out of the hub (2).

DISASSEMBLY OF THE REAR WHEELS

7. Press the button of the locking mechanism (1) and simultaneously pull the rear wheel out of the hub (2).

FRONT SWIVEL WHEELS

8. Turn the locking mechanism towards the outside of the pram to lock the front swivel wheel. Repeat the operation on the other side. Turn the locking mechanism towards the inside of the pram to unlock the front wheels.

ATTENTION: The swivel wheels must be unlocked before the pram can be pushed backwards!!!

Failure to operate the swivel wheels may result in mechanical damage of the rolling elements, which will not be subject to a complaint.

25. Join the main buckle of the stroller.

NOTE: The buckles have magnets. Bringing them closer automatically locks them in the correct position.

LENGTH ADJUSTMENT

To adjust the length of the safety belts, move the buckles to shorten or lengthen the safety belts.

SHOULDER BELTS HEIGHT ADJUSTMENT

26. Adjust the belt buckles to the correct height by sliding the buckles on the straps (up and down).

ATTENTION: Before using the pram, make sure that the belts are correctly adjusted (length, height) and correctly assembled.

27. To release the buckle, press the buttons on its sides.

28. To use an additional harness, attach it to the plastic rings on the pram belts.

ASSEMBLY OF THE INSERT

29. Thread the ends of the belts through the holes in the insert.

30. Fasten the belts.

31. Thread the straps through the buckles on the seat. Fasten the straps with the velcro fasteners.

Once in place, the insert should sit tight on the seat.

FOOTMUFF

32. Place the insert on the seat.

33. Put the ends of the belt through the holes in the insert.

34. Thread the straps through the buckles on the seat. Fasten the straps with the velcro fasteners.

35. Put the straps behind the handle of the canopy in the seat. Fasten the straps with the velcro fasteners.

Once in place, the insert should sit tight on the seat.

ASSEMBLY OF THE RAIN COVER

36. Place the rain cover over the seat to protect the canopy and the footrest.

ADJUSTING THE GUIDE BAR LENGTH

37. Press the button on the guide bar and adjust to desired position at the same time.

FOLDING THE FRAME

Slide the guide bar into the frame, unlock the wheels.

38. Pull the strap in the middle of the frame upwards.

Lock the pram against unfolding spontaneously.

When folded, the pram can be placed on the wheels and the guide bar.

39. The frame can be carried by the elastic strap, which also reduces the weight when carrying it.

FOLDING THE PRAM WITH THE SEAT

The pram can be folded with the seat assembled both ways.

Unlock the front wheels.

Slide in the guide bar.

41. Push the button of the locking mechanism at the back of the backrest (1), lift the handle (2).

42. Fold the seat so that the backrest is close to the rear or front wheels (seat facing forward or backwards).

PARKING DEVICE (BRAKE)

9. Press the rear part of the parking button with your foot to lock the rear wheels. Press the front part of the parking button to unlock the rear wheels.

SEAT

MOUNTING AND DISMOUNTING THE SEAT

NOTE: Never assemble or disassemble the seat with a child inside.

Never assemble the seat if additional adaptors are fitted to the structure.

10. The seat on the MILOO pram can be assembled either facing forward or backwards. To do this, insert the seat facing forward or backwards into the holes of the locks.

NOTE: Make sure that the seat is correctly assembled in the frame.

11. To release the seat from the pram, press the buttons on either side of the seat, then pull the seat out of the frame.

BACKREST ADJUSTMENT

12. To reposition the backrest, lift the adjustment handle (1).

13. Adjust the backrest to the desired position (2).

14. To raise the backrest, lift it and adjust into the desired position.

BUMPER BAR

15. To assemble the bumper bar, slide it into the holes on either side of the seat. Make sure the bumper bar is properly secured against sliding out.

16. To release the bumper bar, press the button on the side of the bumper bar and pull it out of the seat hole. Repeat on the other side.

FOOTREST ADJUSTMENT

17. To raise the footrest to the child's lying position, lift the end of the footrest up and

adjust it to the desired position.

18. To change the position of the footrest, press the buttons on both sides of the footrest and adjust it to the desired position.

USE OF THE CANOPY

19. The canopy on the MILOO pram is height-adjustable in two levels. To raise the canopy, move its handle upwards. Repeat on the other side.

To lower the canopy, move its handle downwards. Repeat on the other side.

The canopy on the MILOO pram can be extended further.

20. Slide the canopy slider open.

21. Adjust the canopy to the desired position.

SAFETY BELTS

ASSEMBLY

22. To assemble the safety belts, connect the shoulder belt buckle to the hip belt buckle.

23. Repeat on the other side.

24. Join the buckles on the right and left side.

43. Pull the strap between the backrest and the seat.

44. Fold the frame until the locking mechanism locks into place. Once folded, the pram can be placed on the wheels and the guide bar.

UNFOLDING THE PRAM WITH SEAT

45. Unlock the locking latch on the outside of the frame.

46. Pull the pram frame upwards until locks engage. Check if both locks are correctly locked before use.

47. Unfold the backrest to a seated position.

48. Lift the bumper bar.

CARRYCOT

49. Unfold the bars of the carrycot until they lock into the plastic holders.

50. Fix the carrycot lining with the zipper and then place the mattress inside.

ASSEMBLY OF THE CANOPY

51. Assemble the canopy onto the bar of the carrycot.

52. Zip up the zipper under the carry cot bar.

53. Zip up the zipper which attaches the canopy to the carrycot.

CANOPY ADJUSTMENT

54. To unfold the canopy, pull the bar until it locks into place.
55. Press the buttons on both sides of the canopy adjusters at the same time and adjust them to the desired position.
56. To extend the canopy further, unzip the zipper (1).
57. Press the buttons on both sides of the canopy adjusters simultaneously and adjust the canopy to the desired position.
58. Adjust the canopy to the desired position.

FOOTMUFF OF THE CARRYCOT

59. Attach the footmuff with the zipper.

ASSEMBLY AND DISASSEMBLY OF THE CARRYCOT

The carrycot on the MILOO pram can be assembled directly on the pram frame or on the booster adapters.

60. To assemble the carrycot to the pram, position it so that it is at the front of the frame, and then slide it into the handles on either side of the frame until the locks click into place.

NOTE: Make sure that the carrycot is correctly assembled to the frame of the pram.

ASSEMBLY OF THE CARRYCOT ON THE ADAPTERS

NOTE: The carrycot adapters are only used to assemble the carrycot on the pram.

Never assemble the seat onto the carrycot adapters.

61. To assemble the carrycot adapters to the frame of the pram, slide the adapters into the slots of the locks on both sides of the frame.

To disassemble the adapters, press the upper button and pull the adapter out of the pram.

Repeat on the other side.

NOTE: Never assemble or disassemble the carrycot with the child inside.

62. To assemble the carrycot to the pram, position the carrycot so that the canopy is at the front of the frame and then slide it into the pre-mounted carrycot adapters until it locks into place.

NOTE: Make sure the carrycot is correctly secured to the adapters.

The carrycot has an additional bracket which is designed to stabilise the carrycot on the pram structure.

NOTE: The additional bracket can only be assembled if you are assembling the carrycot on the booster adapters.

63. To assemble the bracket, extend the bracket until you feel resistance.

64. Point the bracket towards the frame and slide it over the structure until you hear the lock click.
65. To disassemble the carrycot, detach the bracket from the pram frame.
66. Turn it to a horizontal position and slide it under the pram carrycot until it locks in place.
67. Tilt the locking mechanism handle underneath the carrycot and at the same time pull the carrycot out of the pram frame (2).

CARRYCOT VENTILATION

The carrycot has ventilation in the front and rear sections and in the canopy.

68. To access the carrycot ventilation, unzip the zippers on the outside of the carrycot and pull the fabric back.

RAIN COVER

69. Place the rain cover over the carrycot.

MOSQUITO NET

70. Place the mosquito net on the carrycot.

ASSEMBLY OF THE BAG ON THE PRAM HANDLES

71. Place the bag in the handles of the guide bar.

ASSEMBLY OF THE CAR SEAT

72. Attach the adapters to the pram frame by sliding them into the holes on the pram locks. Make sure, they are properly locked.

73. Position the car seat facing backwards and then slide the seat into the previously attached adapters

- (1). Press the buttons on both sides of the car seat handle (2) and fold the handle (3), to lock it in the adapters.

NOTE: Make sure that the car seat is correctly secured.

DISASSEMBLY OF THE CAR SEAT

74. Press the button on either side of the car seat handle (1) and lift the handle (2). Pull the car seat out of the adapters (3).

FOLDING THE PRAM WITH ADAPTERS

The pram can be folded with the adapters mounted on the frame.

75. To fold the pram with adapters, push the locking mechanism upwards and at the same time lift the folding strap until the pram is folded.

DISASSEMBLY OF THE ADAPTERS

76. Disassemble the adapter from the pram by pressing the button (1) and at the same time pulling it out of the frame (2). Repeat on the other side.

CLEANING AND OPERATING

Plastic parts of the stroller and stripes may be cleaned with soft, damp cloth. Do not use aggressive cleaning agents.

Clean metal parts with dry cloth removing dust and water. If the stroller gets muddy or after its use during winter, maintain it with use of lubricating products.

Upholstery cleaning manual: – Clean using a cloth with mild cleaning agent, do not wet it, do not whirl, dry unfolded.

Check periodically if screws did not get loose and replace damage parts.

Lubricate riding elements, i.e. wheels hubs and axes using common products, eg. silicone grease. It should be done especially after using the stroller on sandy ground or during winter. Aggressive agents may cause corrosion.

Remember to maintain all metal elements.

WARNING

IMPORTANT – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

WARNING Never leave the child unattended

– **WARNING** Ensure that all the locking devices are engaged before use

WARNING To avoid injury ensure that your child is kept away when unfolding and folding this product.

WARNING Do not let the child play with this product

– **WARNING** This seat unit is not suitable for children under 6 months

WARNING Always use the restraint system

– **WARNING** Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use

WARNING This product is not suitable for running or skating

 
Maximum weight and age of the child for which the vehicle is suitable: 22 kg or 4 years whichever comes first.

– Parking device (brake) should be activated when putting the child in or taking the child out of the stroller – When parking the stroller, always activate the brake (parking device)

– Maximum load of the bag on the stroller's handle is 1.5 kg. – Maximum load of the basket

is 3 kg. – Maximum load of pocket of the canopy/carrycot is 0.3 kg. – Any load on the handle and/or posterior part of the backrest and/or sides of the stroller will influence stability of the stroller – Do not hang bags which are not appropriate for hanging or bags different than recommended by the manufacturer on the stroller's guides – it is dangerous and may lead to damage to the stroller. – This stroller is intended for use by one child. Do not use accessories which are not approved by the manufacturer. Use only spare parts which are approved or recommended by the manufacturer. – Do not use additional platforms attached to the stroller. In the event any defects are detected, do not use the product and contact the service of BDG PRODUKCJA of the seller. Never go down or up the stairs with the stroller (also on slides), especially with a child inside – it may lead to serious injury to the child and damage to the stroller. – Rocking the stroller may deteriorate its structure and lead to damage. – Never lift or move the product with the child inside it. – Make sure folding elements are locked prior to using the stroller (that is is properly unfolded and locked in place). – Always assemble all protective and securing elements of the stroller in compliance with instructions. – Always attach the crotch belt on the bumper bar. – Check periodically if all elements of the stroller are operational and safe, in particular check if the seat unit, carrycot and the car seat are properly assembled to the chassis. – When folding and unfolding the stroller, as well as when adjusting the backrest, handle or other elements of the stroller, keep your and your child's body parts safe.

The stroller is intended for moving forward. BDG PRODUKCJA sp. K. is not liable for any damage to property or injuries arising from the assembly and use of the product which is not compliant with instructions and recommendations of the manufacturer covered by this user manual. – Use only elements supplied or recommended by the manufacturer/distributor. You may assemble the carrycot, seat unit, or the car seat on the stroller's frame. Carrycot: – Do not use any additional mattress than the one recommended by the manufacturer. – The product shall not be used, as soon as the child is able to sit by himself, roll over and can push itself up on its hands and knees. Maximum weight of the child: 9kg. Handles for carrying should be placed outside the carrycot when using it. Car seat: – Car seat does not substitute cradle or baby cot. If your child wants to sleep, put it inside and appropriate carrycot, cradle or baby cot. Upholstery cleaning manual: – Clean using a cloth with mild cleaning agent, do not wet it, do not whirl, dry unfolded. Be aware of the risk of open fire and other sourced of strong heat in the vicinity of the product. – Wheels: inflate to 28P.SI. (2.0BAR).

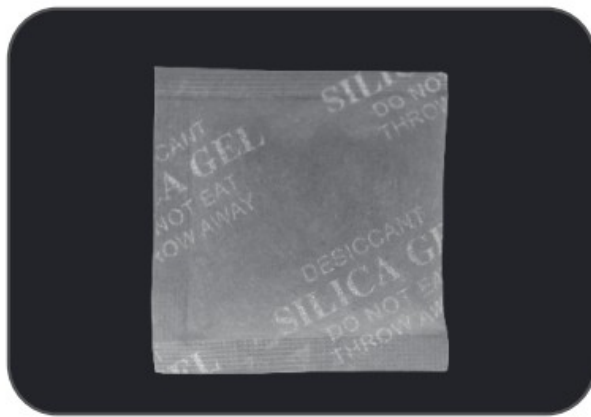

Silica gel packets inside. Do not swallow. Discard after unwrapping the product



BDG PRODUKCJA SP. Z.O.O.

Ul. Warszawska 8 42-262 Poczesna POLAND

Tel. +48 (34) 360 46 64, +48 (34) 360 46 53

Tel. serwis +48 (34) 364 36 41

E-mail: biuro@babydesign.eu,

E- mail serwis: serwis@babydesign.eu

www.espiro.pl

Documents / Resources

	<p>espiro Miloo 2 in 1 Universal Stroller [pdf] User Manual</p> <p>Miloo 2 in 1 Universal Stroller, Miloo, 2 in 1 Universal Stroller, Universal Stroller, Stroller</p>
--	--

References

- [User Manual](#)

2 in 1 Universal Stroller, espiro, MILOO, Miloo 2 in 1 Universal Stroller, Stroller, Universal

espiro Stroller

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.