



# ESPRESSIF ESP32-MINI-1 Highly-Integrated Small-Sized Wi-Fi+Bluetooth Module User Manual

[Home](#) » [ESPRESSIF](#) » ESPRESSIF ESP32-MINI-1 Highly-Integrated Small-Sized Wi-Fi+Bluetooth Module User Manual 



# ESPRESSIF

**ESP32MINI1  
User Manual**



**Preliminary v0.1  
Espressif Systems  
Copyright © 2021**

## **About This Manual**

This user manual shows how to get started with ESP32-MINI-1 module.

## **Document Updates**

Please always refer to the latest version on <https://www.espressif.com/en/support/download/documents>.

## **Revision History**

For revision history of this document, please refer to the last page.

## **Documentation Change Notification**

Espressif provides email notifications to keep customers updated on changes to technical documentation. Please subscribe at [www.espressif.com/en/subscribe](http://www.espressif.com/en/subscribe).

## **Certification**

Download certificates for Espressif products from [www.espressif.com/en/certificates](http://www.espressif.com/en/certificates).

## Contents

### [1 Overview](#)

### [2 Get Started on ESP32MINI-1](#)

### [3 Learning Resources](#)

### [4 Revision History](#)

### [5 Documents / Resources](#)

#### [5.1 References](#)

### [6 Related Posts](#)

## Overview

### 1.1 Module Overview

LE MCU module that has a rich set of peripherals. This module is an ideal choice for a wide variety of IoT applications, ranging from home automation, smart building, consumer electronics to industrial control, especially suitable for applications within a compact space, such as bulbs, switches, and sockets. ESP32-MINI-1 is a highly-integrated, small-sized Wi-Fi+Bluetooth® +Bluetooth® This module comes in two versions:

- 85 °C version
- 105 °C version

**Table 11. ESP32MINI1 Specifications**

Categories	Items	Specifications
Wi-Fi	Protocols	802.11 b/g/n (802.11n up to 150 Mbps)
		A-MPDU and A-MSDU aggregation and 0.4 $\mu$ s guard interval support
	Frequency range	2412 ~ 2484 MHz
Bluetooth®	Protocols	Protocols v4.2 BR/EDR and Bluetooth® LE specifications
	Radio	Class-1, class-2 and class-3 transmitter
		AFH
	Audio	CVSD and SBC

Hardware	Module interfaces	SD card, UART, SPI, SDIO, I2C, LED PWM, Motor PWM, I2S, infrared remote controller, pulse counter, GPIO, touch sensor, ADC, DAC, Two-Wire Automotive Interface (TWAI™, compatible with ISO11898-1)
	Integrated crystal	40 MHz crystal
	Integrated SPI flash	4 MB
	Operating voltage/Power supply	3.0 V ~ 3.6 V
	Operating current	Average: 80 mA
	Minimum current delivered by the power supply	500 mA
	Recommended operating temperature range	85 °C version: –40 °C ~ +85 °C; 105 °C version: –40 °C ~ +105 °C
	Moisture sensitivity level (MSL)	Level 3

## 1.2 Pin Description

ESP32-MINI-1 has 55 pins. See pin definitions in Table 1-2.

**Table 12. Pin Definitions**

Name	No.	Type	Function
GND	1, 2, 27, 38 ~ 55	P	Ground
3V3	3	P	Power supply
I36	4	I	GPIO36, ADC1_CH0, RTC_GPIO0

I37	5	I	GPIO37, ADC1_CH1, RTC_GPIO1
I38	6	I	GPIO38, ADC1_CH2, RTC_GPIO2
I39	7	I	GPIO39, ADC1_CH3, RTC_GPIO3
EN	8	I	High: enables the chip Low: the chip powers off <b>Note:</b> do not leave the pin floating
I34	9	I	GPIO34, ADC1_CH6, RTC_GPIO4
I35	10	I	GPIO35, ADC1_CH7, RTC_GPIO5
IO32	11	I/O	GPIO32, XTAL_32K_P (32.768 kHz crystal oscillator input), ADC1_CH4, TOUCH9, RTC_GPIO9
IO33	12	I/O	GPIO33, XTAL_32K_N (32.768 kHz crystal oscillator output), ADC1_CH5, TOUCH8, RTC_GPIO8
IO25	13	I/O	GPIO25, DAC_1, ADC2_CH8, RTC_GPIO6, EMAC_RXD0
IO26	14	I/O	GPIO26, DAC_2, ADC2_CH9, RTC_GPIO7, EMAC_RXD1
IO27	15	I/O	GPIO27, ADC2_CH7, TOUCH7, RTC_GPIO17, EMAC_RX_DV
IO14	16	I/O	GPIO14, ADC2_CH6, TOUCH6, RTC_GPIO16, MTMS, HSPICLK, HS2_CLK, SD_CLK, EMAC_TXD2
IO12	17	I/O	GPIO12, ADC2_CH5, TOUCH5, RTC_GPIO15, MTDI, HSPIQ, HS2_DATA2, SD_DATA2, EMAC_TXD3

IO13	18	I/O	GPIO13, ADC2_CH4, TOUCH4, RTC_GPIO14, MTCK, HSPID, HS2_DATA3, SD_DATA3, EMAC_RX_ER
IO15	19	I/O	GPIO15, ADC2_CH3, TOUCH3, RTC_GPIO13, MTDO, HSPICS0, HS2_CMD, SD_CMD, EMAC_RXD3
IO2	20	I/O	GPIO2, ADC2_CH2, TOUCH2, RTC_GPIO12, HSPiWP, HS2_DATA0, SD_DATA0
IO0	21	I/O	GPIO0, ADC2_CH1, TOUCH1, RTC_GPIO11, CLK_OUT1, EMAC_TX_CLK
IO4	22	I/O	GPIO4, ADC2_CH0, TOUCH0, RTC_GPIO10, HSPiHD, HS2_DATA1, SD_DATA1, EMAC_TX_ER
NC	23	–	No connect
NC	24	–	No connect
IO9	25	I/O	GPIO9, HS1_DATA2, U1RXD, SD_DATA2
IO10	26	I/O	GPIO10, HS1_DATA3, U1TXD, SD_DATA3
NC	28	–	No connect
IO5	29	I/O	GPIO5, HS1_DATA6, VSPICS0, EMAC_RX_CLK
IO18	30	I/O	GPIO18, HS1_DATA7, VSPICLK
IO23	31	I/O	GPIO23, HS1_STROBE, VSPID
IO19	32	I/O	GPIO19, VSPIQ, U0CTS, EMAC_TXD0

Cont'd on next page

**Table 12 – cont'd from previous page**

Name	No.	Type	Function
IO22	33	I/O	GPIO22, VSPIWP, U0RTS, EMAC_TXD1
IO21	34	I/O	GPIO21, VSPIHD, EMAC_TX_EN
RXD0	35	I/O	GPIO3, U0RXD, CLK_OUT2
TXD0	36	I/O	GPIO1, U0TXD, CLK_OUT3, EMAC_RXD2
NC	37	–	No connect

<sup>1</sup> Pins GPIO6, GPIO7, GPIO8, GPIO11, GPIO16, and GPIO17 on the ESP32-U4WDH chip are connected to the SPI flash integrated on the module and are not led out.

<sup>2</sup> For peripheral pin configurations, please refer to [ESP32 Series Datasheet](#).

## Get Started on ESP32MINI1

### 2.1 What You Need

To develop applications for ESP32-MINI-1 module you need:

- 1 x ESP32-MINI-1 module
- 1 x Espressif RF testing board
- 1 x USB-to-Serial board
- 1 x Micro-USB cable
- 1 x PC running Linux

In this user guide, we take Linux operating system as an example. For more information about the configuration on Windows and macOS, please refer to [ESP-IDF Programming Guide](#).

### 2.2 Hardware Connection

1. Solder the ESP32-MINI-1 module to the RF testing board as shown in Figure 2-1.



**Figure 2-1. Hardware Connection**

2. Connect the RF testing board to the USB-to-Serial board via TXD, RXD, and GND.
3. Connect the USB-to-Serial board to the PC.
4. Connect the RF testing board to the PC or a power adapter to enable 5 V power supply, via the Micro-USB cable.
5. During download, connect IO0 to GND via a jumper. Then, turn "ON" the testing board.
6. Download firmware into flash. For details, see the sections below.
7. After download, remove the jumper on IO0 and GND.
8. Power up the RF testing board again. ESP32-MINI-1 will switch to working mode. The chip will read programs from flash upon initialization.

**Note:**

IO0 is internally logic high. If IO0 is set to pull-up, the Boot mode is selected. If this pin is pull-down or left floating, the Download mode is selected. For more information on ESP32-MINI-1, please refer to ESP32-MINI-1 Datasheet.

## 2.3 Set up Development Environment

The Espressif IoT Development Framework (ESP-IDF for short) is a framework for developing applications based on the Espressif ESP32. Users can develop applications with ESP32 in Windows/Linux/macOS based on ESP-IDF. Here we take Linux operating system as an example.

### 2.3.1 Install Prerequisites

To compile with ESP-IDF you need to get the following packages:

- CentOS 7:

```
sudo yum install git wget flex bison gperf python cmake ninja-build ccache dfu-util
```

- Ubuntu and Debian (one command breaks into two lines):

```
sudo apt-get install git wget flex bison gperf python python-pip python-setuptools cmake ninja-build-  
libffi-dev libssl-dev dfu-util
```

- Arch:

```
sudo Pacman -S --needed gcc git make flex bison gperf python-pip cmake ninja ccache dfu-util
```

**Note:**

- This guide uses the directory ~/esp on Linux as an installation folder for ESP-IDF.
- Keep in mind that ESP-IDF does not support spaces in paths.

### 2.3.2 Get ESP-IDF

To build applications for ESP32-MINI-1 module, you need the software libraries provided by Espressif in [ESP-IDF repository](#).

To get ESP-IDF, create an installation directory ( ~/esp) to download ESP-IDF to and clone the repository with 'git clone':

```
mkdir -p ~/esp  
cd ~/esp  
git clone --recursive https://github.com/espressif/esp-idf.git
```

ESP-IDF will be downloaded into ~/esp/esp-idf. Consult [ESP-IDF Versions](#) for information about which ESP-IDF version to use in a given situation.

### 2.3.3 Set up Tools

Aside from the ESP-IDF, you also need to install the tools used by ESP-IDF, such as the compiler, debugger, Python packages, etc. ESP-IDF provides a script named 'install.sh' to help set up the tools in one go.

```
cd ~/esp/esp-idf  
./install.sh
```

### 2.3.4 Set up Environment Variables

The installed tools are not yet added to the PATH environment variable. To make the tools usable from the command line, some environment variables must be set. ESP-IDF provides another script 'export.sh' which does that. In the terminal where you are going to use ESP-IDF, run:

```
. $HOME/esp/esp-idf/export.sh
```

Now everything is ready, you can build your first project on ESP32-MINI-1 module.

## 2.4 Create Your First Project

### 2.4.1 Start a Project

Now you are ready to prepare your application for ESP32-MINI-1 module. You can start with the [get-started/hello\\_world](#) project from the examples directory in ESP-IDF.

Copy get-started/hello\_world to ~/esp directory:

```
cd ~/esp  
cp -r $IDF_PATH/examples/get-started/hello_world .
```

There is a range of [example projects](#) in the examples directory in ESP-IDF. You can copy any project in the same way as presented above and run it. It is also possible to build examples in-place, without copying them first.

### 2.4.2 Connect Your Device

Now connect your ESP32-MINI-1 module to the computer and check under what serial port the module is visible. Serial ports in Linux start with '/dev/tty' in their names. Run the command below two times, first with the board unplugged, then with plugged in. The port which appears the second time is the one you need:

```
ls /dev/tty*
```

**Note:**

Keep the port name handy as you will need it in the next steps.



### 2.4.3 Configure

Navigate to your 'hello\_world' directory from Step 2.4.1. Start a Project, set ESP32 chip as the target, and run the project configuration utility 'menuconfig'.

```
cd ~/esp/hello_world
```

```
idf .py set-target esp32
```

```
idf .py menuconfig
```

Setting the target with 'idf.py set-target esp32' should be done once, after opening a new project. If the project contains some existing builds and configurations, they will be cleared and initialized. The target may be saved in the environment variable to skip this step at all. See [Selecting the Target](#) for additional information.

If the previous steps have been done correctly, the following menu appears:

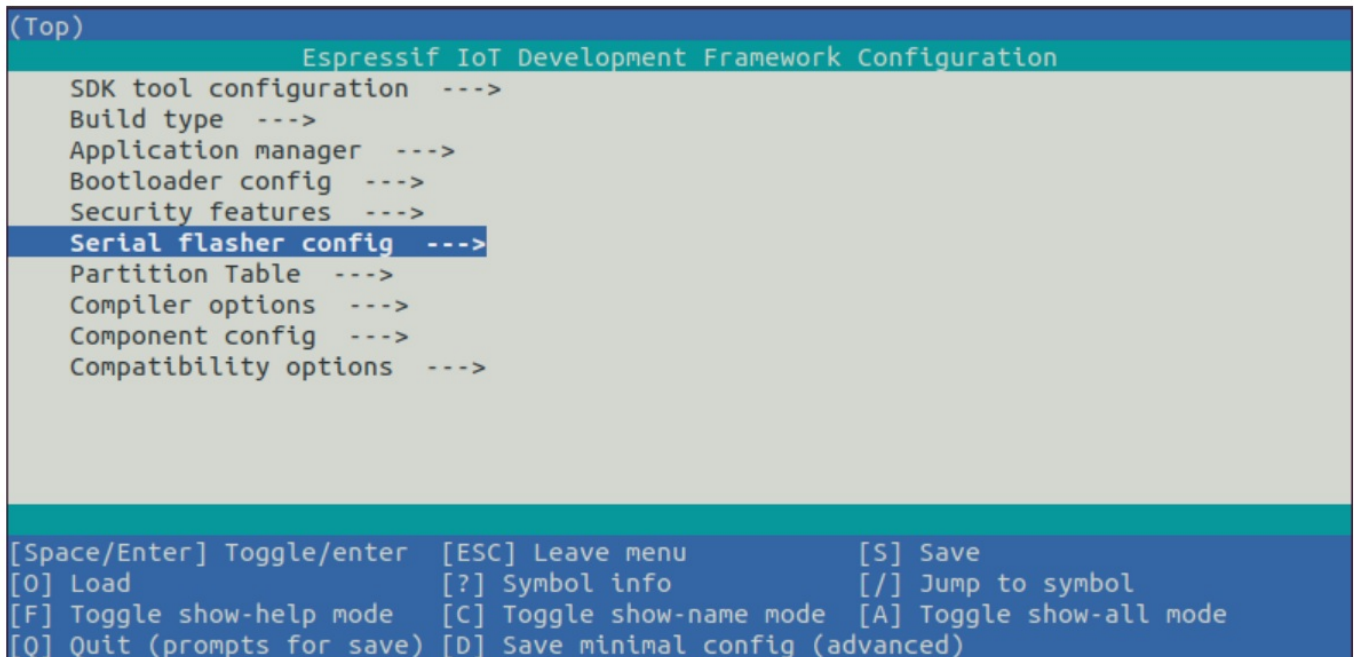


Figure 2-2. Project Configuration - Home Window

The colors of the menu could be different in your terminal. You can change the appearance with the option 'style'. Please run 'idf.py menuconfig --help' for further information.

### 2.4.4 Build the Project

Build the project by running:

```
idf .py build
```

This command will compile the application and all ESP-IDF components, then it will generate the bootloader, partition table, and application binaries.

```
$ idf .py build
```

```
Running cmake in directory /path/to/hello_world/build
```

```
Executing "cmake -G Ninja --warn-uninitialized /path/to/hello_world"...
```

```
Warn about uninitialized values.
```

```
-- Found Git: /usr/bin/git (found version "2.17.0")
```

```
-- Building empty aws_iot component due to configuration
```

```
-- Component names: ...
```

```
-- Component paths: ...
```

```
... (more lines of build system output) [527/527] Generating hello_world.bin esptool.py v2.3.1
```

```
Project build complete. To flash, run this command:
```

```
../.. components/esptool_py/esptool/esptool.py -p (PORT) -b 921600 write_flash --flash_mode dio
```

```
--flash_size detect --flash_freq 40m 0x10000 build/hello_world.bin build 0x1000 build /bootloader/bootloader.  
bin 0x8000 build/ partition_table / partition -table.bin or run 'idf .py -p PORT flash'
```

If there are no errors, the build will finish by generating the firmware binary .bin file.

### 2.4.5 Flash onto the Device

Flash the binaries that you just built onto your ESP32-MINI-1 module by running:

`idf .py -p PORT [-b BAUD] flash`

Replace PORT with your module's serial port name from Step: Connect Your Device. You can also change the flasher baud rate by replacing BAUD with the baud rate you need. The default baud rate is 460800.

For more information on idf.py arguments, see `idf.py`.

**Note:**

The option 'flash' automatically builds and flashes the project, so running 'idf.py build' is not necessary.

Running `esptool.py` in directory `[...]/ esp/hello_world`

Executing "python `[...]/ esp-idf/components/esptool_py/esptool/esptool.py -b 460800 write_flash @flash_project_args` "...

`esptool .py -b 460800 write_flash --flash_mode dio --flash_size detect --flash_freq 40m 0x1000 bootloader/bootloader. bin 0x8000 partition_table / partition -table.bin 0x10000 hello-world.bin`

`esptool .py v2.3.1`

Connecting ....

Detecting chip type ... ESP32

Chip is ESP32U4WDH (revision 3)

Features: WiFi, BT, Single Core

Uploading stub ...

Running stub ...

Stub running ...

Changing baud rate to 460800

Changed.

Configuring flash size ...

Auto-detected Flash size: 4MB

Flash params set to 0x0220

Compressed 22992 bytes to 13019...

Wrote 22992 bytes (13019 compressed) at 0x00001000 in 0.3 seconds ( effective 558.9 kbit/s )...

Hash of data verified.

Compressed 3072 bytes to 82...

Wrote 3072 bytes (82 compressed) at 0x00008000 in 0.0 seconds ( effective 5789.3 kbit/s )...

Hash of data verified.

Compressed 136672 bytes to 67544...

Wrote 136672 bytes (67544 compressed) at 0x00010000 in 1.9 seconds ( effective 567.5 kbit/s )...

Hash of data verified.

Leaving ...

Hard resetting via RTS pin...

If everything goes well, the "hello\_world" application starts running after you remove the jumper on IO0 and GND, and re-power up the testing board.

#### 2.4.6 Monitor

To check if "hello\_world" is indeed running, type 'idf.py -p PORT monitor' (Do not forget to replace PORT with your serial port name).

This command launches the IDF Monitor application:

`$ idf .py -p /dev/ttyUSB0 monitor`

Running `idf_monitor` in directory `[...]/ esp/hello_world/build`

Executing "python `[...]/ esp-idf/tools/idf_monitor.py -b 115200 [...]/ esp/hello_world/build/ hello -world. elf` "...

---- `idf_monitor` on /dev/ttyUSB0 115200 -----

Quit: Ctrl+] | Menu: Ctrl+T | Help: Ctrl+T followed by Ctrl+H --ets

Jun 8 2016 00:22:57

rst :0x1 (POWERON\_RESET),boot:0x13 (SPI\_FAST\_FLASH\_BOOT)

ets Jun 8 2016 00:22:57...

After startup and diagnostic logs scroll up, you should see "Hello world!" printed out by the application.

...

Hello world!

Restarting in 10 seconds ...

This is esp32 chip with 1 CPU core, WiFi/BT/BLE, silicon revision 3, 4MB external flash

Restarting in 9 seconds ...

Restarting in 8 seconds ...

Restarting in 7 seconds ...

To exit IDF monitor use the shortcut Ctrl+].

That's all that you need to get started with ESP32-MINI-1 module! Now you are ready to try some other [examples](#) in ESP-IDF, or go right to developing your own applications.

## Learning Resources

### 3.1 MustRead Documents

The following link provides documents related to ESP32.

- [ESP32 Datasheet](#)

This document provides an introduction to the specifications of the ESP32 hardware, including overview, pin definitions, functional description, peripheral interface, electrical characteristics, etc.

- [ESP32 ECO V3 User Guide](#)

This document describes differences between V3 and previous ESP32 silicon wafer revisions.

- [ECO and Workarounds for Bugs in ESP32](#)

This document details hardware errata and workarounds in the ESP32.

- [ESP-IDF Programming Guide](#)

It hosts extensive documentation for ESP-IDF ranging from hardware guides to API reference.

- [ESP32 Technical Reference Manual](#)

The manual provides detailed information on how to use the ESP32 memory and peripherals.

- [ESP32 Hardware Resources](#)

The zip files include the schematics, PCB layout, Gerber, and BOM list of ESP32 modules and development boards.

- [ESP32 Hardware Design Guidelines](#)

The guidelines outline recommended design practices when developing standalone or add-on systems based on the ESP32 series of products, including the ESP32 chip, the ESP32 modules, and development boards.

- [ESP32 AT Instruction Set and Examples](#)

This document introduces the ESP32 AT commands, explains how to use them, and provides examples of several common AT commands.

- [Espressif Products Ordering Information](#)

### 3.2 MustHave Resources

Here are the ESP32-related must-have resources.

- [ESP32 BBS](#)

This is an Engineer-to-Engineer (E2E) Community for ESP32 where you can post questions, share knowledge, explore ideas, and help solve problems with fellow engineers.

- [ESP32 GitHub](#)

ESP32 development projects are freely distributed under Espressif's MIT license on GitHub. It is established to help developers get started with ESP32 and foster innovation and the growth of general knowledge about the hardware and software surrounding ESP32 devices.

- [ESP32 Tools](#)

This is a webpage where users can download ESP32 Flash Download Tools and the zip file "ESP32 Certification and Test"..

- [ESP-IDF](#)

This webpage links users to the official IoT development framework for ESP32.

- [ESP32 Resources](#)

This webpage provides the links to all available ESP32 documents, SDK and tools.

## Revision History

Date	Version	Release notes
2021-01-14	V0.1	Preliminary release



[www.espressif.com](http://www.espressif.com)

## Disclaimer and Copyright Notice

Information in this document, including URL references, is subject to change without notice.

ALL THIRD PARTY'S INFORMATION IN THIS DOCUMENT IS PROVIDED AS IS WITH NO WARRANTIES TO ITS AUTHENTICITY AND ACCURACY.

NO WARRANTY IS PROVIDED TO THIS DOCUMENT FOR ITS MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR ANY PARTICULAR PURPOSE, NOR DOES ANY WARRANTY OTHERWISE ARISING OUT OF ANY PROPOSAL, SPECIFICATION, OR SAMPLE.

All liability, including liability for infringement of any proprietary rights, relating to the use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein.

The Wi-Fi Alliance Member logo is a trademark of the Wi-Fi Alliance. The Bluetooth logo is a registered trademark of Bluetooth SIG.


All trade names, trademarks, and registered trademarks mentioned in this document are the property of their respective owners and are hereby acknowledged.

**Copyright © 2021 Espressif Systems (Shanghai) Co., Ltd. All rights reserved.**

**Espressif Systems**  
**ESP32-MINI-1 User Manual (Preliminary v0.1)**










[www.espressif.com](http://www.espressif.com)

## Documents / Resources

	<a href="#">ESPRESSIF ESP32-MINI-1 Highly-Integrated Small-Sized Wi-Fi+Bluetooth Module</a> [pdf] User Manual ESP32MINI1, 2AC7Z-ESP32MINI1, 2AC7ZESP32MINI1, ESP32 -MINI -1 Highly-Integrated Small-Sized Wi-Fi Bluetooth Module, ESP32 -MINI -1, Highly-Integrated Small-Sized Wi-Fi Bluetooth Module
---	---

## References

-  [Certificates | Espressif Systems](#)
-  [Subscribe | Espressif Systems](#)

-  [Technical Documents | Espressif Systems](#)
-  [Overview | Espressif Systems](#)
-  [ESP32 Resources | Espressif Systems](#)
-  [Tools | Espressif Systems](#)
-  [SDKs & Demos | Espressif Systems](#)
-  [ESP-IDF Programming Guide - ESP32 - — ESP-IDF Programming Guide latest documentation](#)
-  [Build System - ESP32 - — ESP-IDF Programming Guide latest documentation](#)
-  [Build System - ESP32 - — ESP-IDF Programming Guide latest documentation](#)
-  [Get Started - ESP32 - — ESP-IDF Programming Guide latest documentation](#)
-  [ESP-IDF Versions - ESP32 - — ESP-IDF Programming Guide latest documentation](#)
-  [Espressif Systems · GitHub](#)
-  [ESP32 Forum - Index page](#)
-  [Overview | Espressif Systems](#)
-  [Technical Documents | Espressif Systems](#)