

ESR

**6B019A
Wireless
Keyboard Cases**



ESR 6B019A Wireless Keyboard Cases User Manual

[Home](#) » [ESR](#) » ESR 6B019A Wireless Keyboard Cases User Manual 

Contents

- [1 ESR 6B019A Wireless Keyboard Cases](#)
- [2 Product Usage Instructions](#)
- [3 Frequently Asked Questions](#)
- [4 Product Information](#)
- [5 Power button](#)
- [6 Pairing Mode](#)
- [7 Auto Reconnect](#)
- [8 Power Light Overview](#)
- [9 Caps Lock indicator](#)
- [10 Backlight](#)
- [11 Shortcut Keys](#)
- [12 Troubleshooting Guide](#)
- [13 FCC Statement](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)

ESR

ESR 6B019A Wireless Keyboard Cases



Specifications:

- Caps Lock indicator
- Connection status
- Low battery indicator
- Charging status
- Power button
- USB-C port

Product Usage Instructions

Powering On/Off:

To turn on the keyboard, select the On option using the Power button. To turn it off, select the Off option.

Pairing Mode:

To enter pairing mode, press and hold the Pairing Mode button for 3 seconds. The connection indicator will flash. If not connected within 1 minute, the pairing mode will turn off.

Standby Mode:

The keyboard backlight will turn off after 1 minute of inactivity. After 10 minutes of inactivity, the keyboard will enter standby mode. Press any key to wake up the keyboard.

Auto Reconnect:

When turned on, the keyboard will automatically attempt to reconnect with the last paired device for 5 seconds.

Backlight:

Press the Backlight button to select brightness (low, medium, bright) and color (7 colors available).

Factory Reset:

To perform a factory reset, press and hold the Factory Reset button for 3 seconds. The low battery indicator will flash 2 times to confirm reset completion.

Touchpad:

Press the Touchpad button to turn the touchpad on/off.

Frequently Asked Questions

Troubleshooting Guide:

If the keyboard stops working:


1. Ensure the keyboard power is turned on.
2. If the keyboard is out of battery, charge it.
3. If the connection is unstable, turn off the keyboard for 10 seconds before turning it back on.

If the issue persists, disconnect the keyboard from your device list and follow the pairing instructions to reconnect.

Reminder:

1. The keyboard has a built-in rechargeable battery lasting for weeks of normal use.
2. When not in use for an extended period, turn off the keyboard to prolong battery life.

Product Information

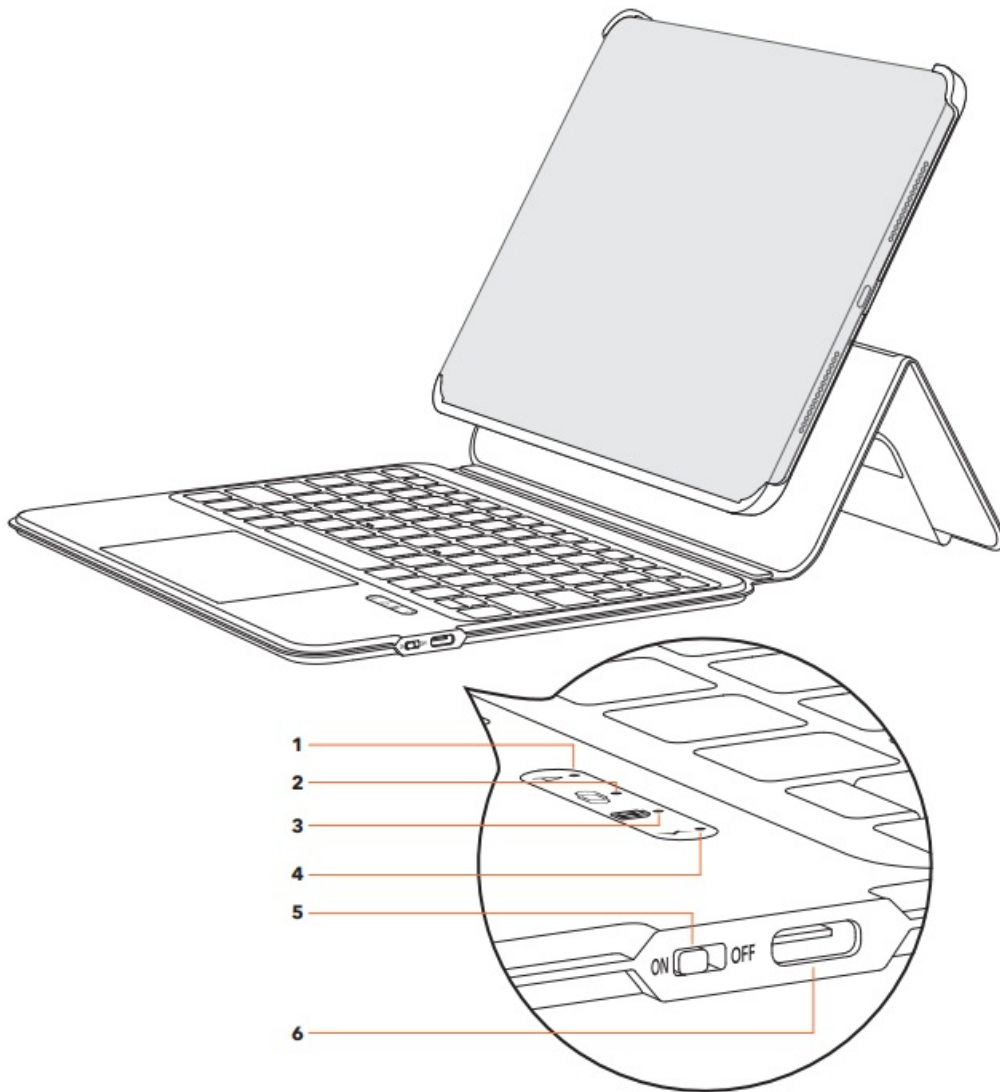



1. Caps Lock indicator
2. Connection status
3. Low battery indicator
4. Charging status
5. Power button
6. USB-C port

Power button

Select On to turn on the keyboard. Select Off to turn it off.




Pairing Mode

Press  +  for 3 seconds to enter pairing mode. The connection indicator will flash. If not connected within 1 minute, the pairing mode will turn off.

Auto Reconnect

When turned on, for 5 seconds the keyboard will automatically attempt to reconnect with the last paired device

Power Light Overview

Charging: 
Fully charged: 
Low battery: 





Caps Lock indicator

When Caps Lock is on, the blue indicator light will be on.

Standby Mode

The keyboard backlight will turn off automatically after 1 minute of inactivity. After 10 minutes of inactivity, the keyboard will enter standby mode. Press any key to wake up the keyboard.

Backlight

- Press  +  to select the backlight brightness (low, medium, and bright; the default is medium).
- Press  +  to select the backlight color (7 colors; the default is white).


Factory Reset

- Press and hold  +  +  for 3 seconds. The low battery indicator will flash 2 times to indicate that the factory reset is complete.

Touchpad

- Press  +  to turn the touchpad on/off.

Shortcut Keys

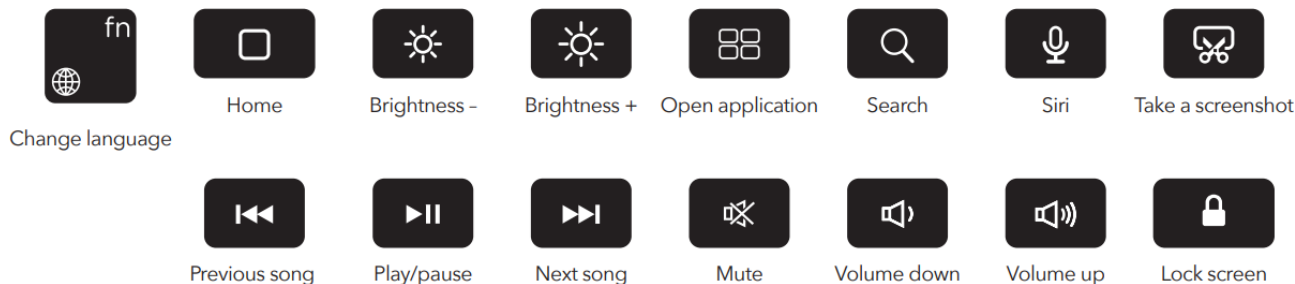

Troubleshooting Guide

If the keyboard stops working, please check the following:

1. Ensure the keyboard power is turned on.
2. If the keyboard is out of battery, charge the keyboard.
3. If the connection is unstable, turn the keyboard off and wait 10 seconds before turning it back on. If the problem persists, disconnect the keyboard by going to your iPad's Settings and removing "ESR Keyboard" from the device list. Follow the pairing instructions to reconnect your keyboard.

If the keyboard remains unresponsive, repeat the steps above. If you are still experiencing problems, contact our customer service at esrgear.com/contact-us/.

Reminder

1. This keyboard has a built-in polymer rechargeable battery that lasts for weeks of normal use.
2. When not using the keyboard for an extended time, turn it off to prolong battery life.

FCC Statement

FCC ID: 2APEW-6B019A

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure statement.

The device can be used in portable exposure condition without restriction

IC: 24790-6B019A

IC Warning statement:

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development

Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement

IC RF exposure statement: The device has been evaluated to meet the general IC RF exposure requirement. The device can be used in portable exposure conditions without restriction

This product complies with the radio interference requirements of the European Community


Declaration of Conformity

This product is intended for use within Europe. Electronic Silk Road Corp. hereby declares that this product 6B019A is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU, 2014/35/EU, 2014/30/EU. The Declaration of Conformity for the 6B019A is available from www.esrgear.com



■ This symbol indicates that this product shall not be treated as household waste. Instead, it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Documents / Resources

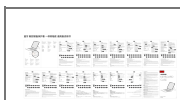

[ESR 6B019A Wireless Keyboard Cases](#) [pdf] User Manual
6B019A, 6B025A, 6B019A Wireless Keyboard Cases, 6B019A, Wireless Keyboard Cases, Keyboard Cases, Cases

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.