



eta MIXNITO Table Blender Instruction Manual

[Home](#) » [ETA](#) » eta MIXNITO Table Blender Instruction Manual 

eta MIXNITO Table Blender



Contents

- [1 INSTRUCTIONS FOR USE](#)
- [2 SAFETY WARNINGS](#)
- [3 FEATURES OF THE DEVICE \(PIC. 1\)](#)
- [4 PREPARATION FOR USE](#)
- [5 USING THE BLENDER](#)
- [6 MAINTENANCE](#)
- [7 ENVIRONMENTAL PROTECTION](#)
- [8 TECHNICAL DATA](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

INSTRUCTIONS FOR USE

Dear customer, thank you for purchasing our product. Please read the operating instructions carefully before putting the appliance into operation and keep these instructions including the warranty, the receipt and, if possible, the box with the internal packing.



SAFETY WARNINGS

- Consider the instructions for use as a part of the appliance and pass them on to any other user of the appliance.
- Check whether the data on the type label correspond with the voltage in your socket. The power supply plug has to be connected to a socket of electrical installation that conforms to respective standards.
- Never use the appliance if the power cord or power plug are damaged, if it is not functioning correctly or if it has fallen on the floor and been damaged or if it has fallen into water. In such cases take the appliance to a professional service centre to verify its safety and correct function.
- This appliance must not be used by children. Keep the device and its supply cord out of reach of children. The device may be used by persons with reduced physical or mental abilities or lack of experience and knowledge only if they are under supervision or they have been instructed about using the appliance safely and understand the potential dangers. Children must not play with the appliance.
- Be careful when pouring hot liquid into the food processing device or the mixer because it may spurt out of the appliance because of sudden boil.
- If the power cord of this appliance is damaged, the cord must be replaced by the manufacturer, their service technician or by a similarly qualified person, this will prevent the creation of a dangerous situation.
- Always unplug the appliance from power supply if you leave it unattended.
- Before replacing accessories or accessible parts, which move during operation, before assembly and disassembly, before cleaning or maintenance and after finishing work turn off the appliance and disconnect it from the mains by pulling the power cord from the power socket!
- Be careful when handling the blender, the knife is very sharp! – Maximum time of processing is 60 sec. After that, keep the break for approx. 3 min necessary for the motor unit to cool off. When the appliance is in operation, prevent pets, plants or insects to get in contact with it.
- The product is intended for home use and similar (in shops, offices and similar workplaces, in hotels, motels and other residential environments, in facilities providing accommodation with breakfast). It is not intended for commercial use!
- The appliance must not be used in damp or wet environment and in any environment with the danger of fire or explosion (spaces where chemicals, fuels, oils, gases, paints and other flammable or volatile materials are stored).
- The appliance is equipped with thermal safety fuse which disconnects current supply in case of engine overloading. If it occurs, unplug the appliance and let the appliance get cooled.
- Correctly placing the lid on the bowl will release the safety lock and the appliance may be turned on.
- Never leave the appliance unsupervised and check it during the whole time of preparing meals!
- Never immerse the drive unit into water and do not wash it in running water!
- Every time before the propulsion unit is switched on, the container needs to be attached properly and the lid needs to be placed appropriately so as to close the container. The safety plug needs to be inserted in the lid.
- Do not remove the lid and dish if the propulsion unit is in operation!
- Do not shake the motor unit or the jug when the blender is in use.
- Check if the switch is in the (0) position before each connecting of the appliance to the el. outlet and always unplug the appliance from the el. outlet after finishing work.
- Before removing the lid or container, let the rotating part stop.
- Do not connect this appliance to a programmer device, a timer or any other device, which switches power to the appliance automatically.
- Do not process ingredients of higher temperature than approx. 80 °C.

- If the processed ingredients start to stick on the accessory (e.g. the knife, blender container or the lid), turn the appliance off and clean carefully with a spatula.
- Use the mixer only in its working position and at places where there is no risk of tipping and in sufficient distance from heat sources (e.g. heater, stove, cooker, grill etc.) and wet surfaces (sinks, basins etc.)
- Use the appliance only with accessory intended for this type of device. Using other accessory may pose danger for the user.
- Never put e.g. fingers, forks, knives, spatulas, spoons into the rotating parts of the appliance.
- Prevent the supply cord to hang loosely over the edge of the working desk where children could reach it.
- The power cord must not be damaged with sharp or hot objects, open fire, it must not be sunk into water or bent over sharp edges. Never put it on hot surfaces or do not let it hang over the edge of a table or work tables. Hitting, stumbling or pulling the power cord e.g. by children can result in tilting over or drawing the appliance down and serious injury!
- Use the appliance only with original accessories from the manufacturer.
- Use the appliance only for the purpose it is intended for as specified in this manual. Never use the appliance for any other purpose.
- Product images are for illustrative purposes only.
- The manufacturer is not responsible for damage and injuries caused by improper use of the appliance and the accessories (e.g. food deterioration, injury, cutting) and its guarantee for the appliance does not apply in situations when the safety warnings above are not complied with.

Warning

When the blender is in the state of idle operation, e.g. The blade fails to touch the foods, unplug the unit until the foods have been relaxed.

FEATURES OF THE DEVICE (PIC. 1)

A – propulsion unit

A1 – ON/OFF switch / rotary knob

A2 – propulsion shaft

A3 – supply cord

B – dish

B1 – container base

B2 – knife


B3 – handle

B4 – sealing

C – lid

C1 – lid plug

Product images are for illustrative purposes only.

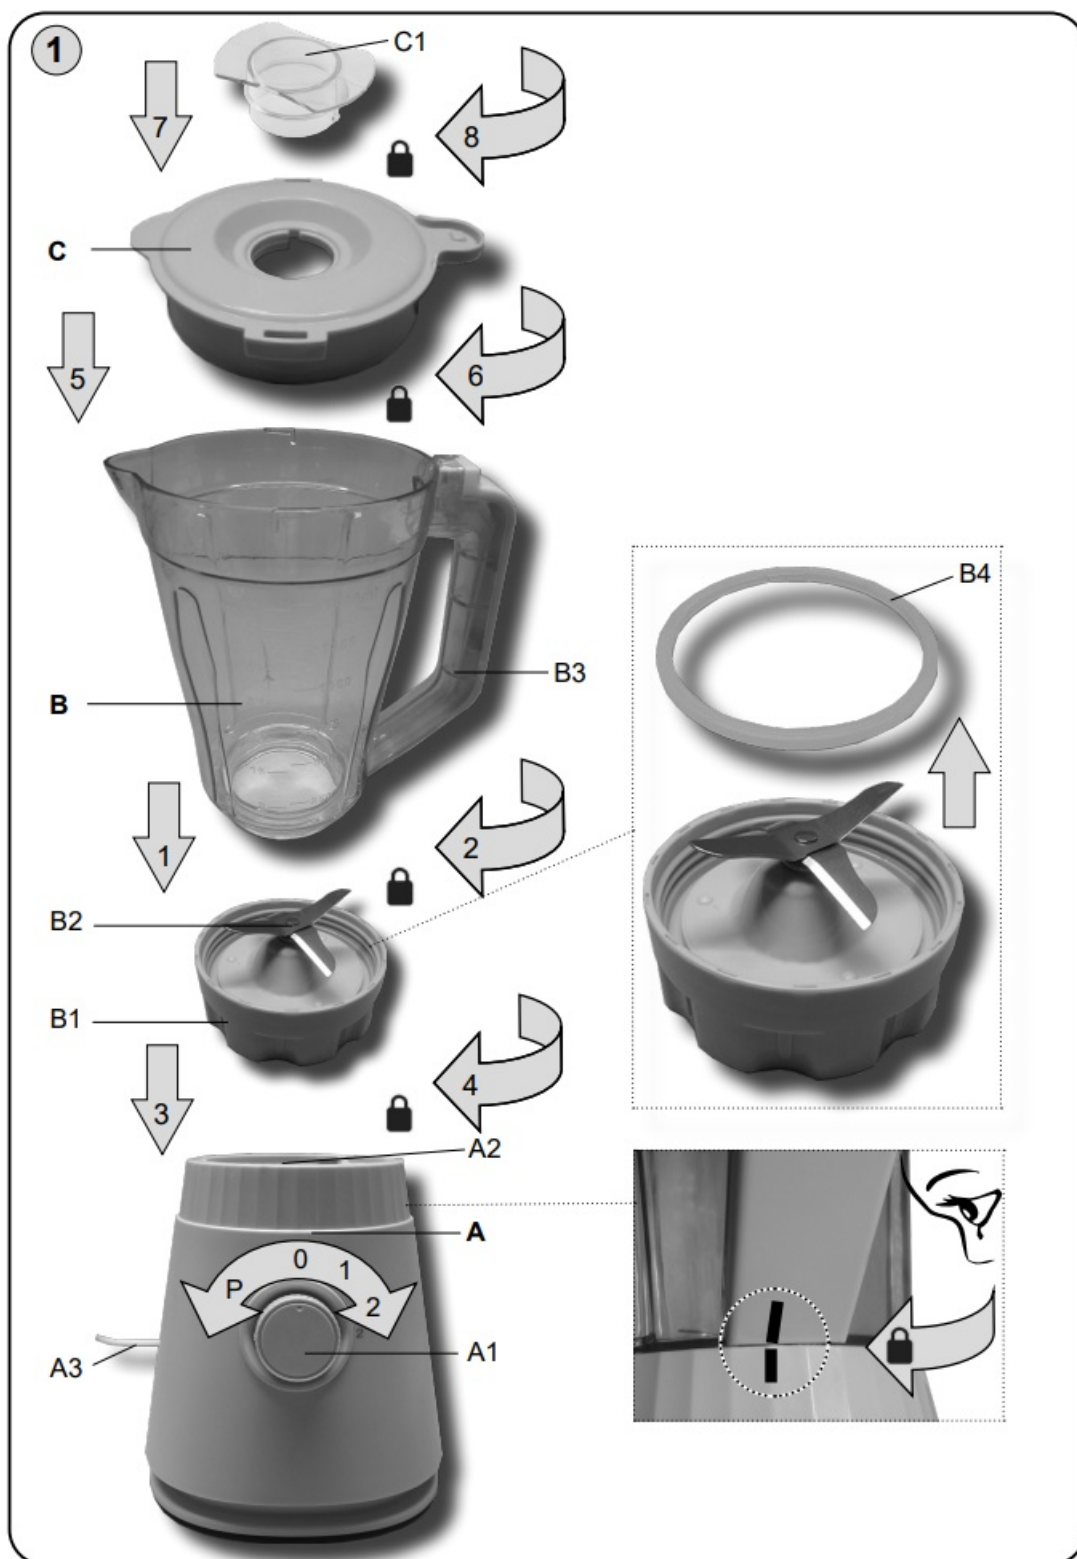

PREPARATION FOR USE

We recommend washing the container before using it for the first time. The knife section is treated with oil not harmful to health for technological reasons. Therefore first fill in the container with warm water (max. 50 °C) with a small amount of detergent. Then put the container on the food processor, set the maximum rotational speed and run for 1 minute. Then rinse the container with clear water. Plug power supply fork A3 to the electric power. Choose the amount of the processed food so that the maximum volume of the containers marked with the gauge line is not exceeded. Possible short-time mild smoke when the appliance is operated for the first time is not a defect and the appliance is not subject to a complaint for this reason. Possible short-time mild smoke is not a defect and the appliance is not subject to a complaint for this reason.

On/Off switch (A1)

- 0** – off
- 1** – minimum speed
- 2** – maximum speed
- P** – pulse button (the motor is running at max. power the whole time the button is pressed).

Container (B) assembly process

Assemble the B container according to Fig. 1. To disassemble the container, apply the reverse procedure.

Putting the container (B) on the driver unit (A)

Put the container B on the driver unit A according to Fig. 1. If the container is properly fit, the safety catch will be released, and the appliance is ready for use. Apply the reverse procedure to remove the container.

Safety locking system

- Place the container onto the main body with the handle to the right.
- Turn the container to the right until you hear a slight click. The arrows on the main body and container should now be aligned with each other. If this is the case, the container is locked correctly.
- Position the lid onto the blender so that the long holding lip is facing toward you.
- Turn this holding lip to the right, so that it is positioned right on top of the jug handle. Now the blender is ready for use.

USING THE BLENDER

Pour or put the ingredients into the dish B and close the mixer with the lid C.

Set the switch A1 to position “1-2” or use the position “P” pulse. The ingredients will be processed approx. in 10 seconds to 2 minutes.

Recommendation

- If you process big amounts of food, divide them in separate portions so that you do not overload the motor unit.
- When inserting the food materials into the jar, please be aware of the order. First pour the liquid, add food.
- It is better to use a low speed and then increase the speed.
- If the food materials are pushed toward the jar wall you set too high speed. You should reduce speed
- Soak hard ingredients in water before processing (e.g. legume, soy beans etc.).
- You can also process hot liquids up to temperature of 80 °C, e.g. sauces, soups.
- Never fill the container with liquids which make foam (e.g. milk) up to 1500 ml so that they do not overflow. In this case we recommend amounts max. 1000 ml.

MAINTENANCE

Do not use coarse and aggressive cleaning agents (e.g. sharp objects, scrapers, diluting agents or other solvents). Clean drive unit with a soft and wet cloth with a little detergent. Clean all accessories in hot water with a detergent right after use (do not use a dishwasher). We recommend filling the container with warm water and a small amount of detergent, and then use 2 speed. For easier cleaning of the mixer you can disassemble the

assembled bowl.

More extensive maintenance or maintenance requiring intervention in the inner parts of the appliance must be carried out by professional service! Failure to comply with the instructions of the manufacturer will lead to expiration of the right to warranty repair!



ENVIRONMENTAL PROTECTION

If the dimensions allow, there are labels of materials used for production of packing, components and accessories as well as their recycling on all parts. The symbols specified on the product or in the accompanying documentation mean that the used electric or electronic products must not be disposed of together with municipal waste. For proper disposal of the product, hand it over at special collection places where it will be taken over free of charge. Suitable disposal of the product can help to maintain valuable natural resources and to prevent possible negative impacts on the environment and human health, which could be the possible consequences of improper waste disposal. Ask for more details at the local authorities or in the nearest collection site. Fines can be imposed for improper disposal of this type of waste in agreement with the national regulations. If the appliance is to be put out of operation for good, after disconnecting it from power supply we recommend cutting off the power cord and thus it will not be possible to use the appliance again.

TECHNICAL DATA

Voltage (V): shown on the type label of the appliance

Input (W): shown on the type label of the appliance

Container volume (l) about: 1.5

Weight (kg) about: 1.7

Protection class of the appliance: II.

Input in off mode is < 0.11 W

Noise level: Acoustic noise level of ≤ 85 dB(A) re 1pW

The manufacturer reserves the right to change the technical specifications and accessories for the respective models. The pictures are only illustrative.

WARNINGS AND SYMBOLS USED ON THE APPLIANCE, PACKAGING OR IN THE INSTRUCTIONS MANUAL:



HOUSEHOLD USE ONLY, DO NOT IMMERSE IN WATER OR OTHER LIQUIDS TO AVOID DANGER OF SUFFOCATION, KEEP THIS PLASTIC BAG AWAY FROM BABIES AND CHILDREN. DO NOT USE THIS BAG IN CRIBS, BEDS, CARRIAGES OR PLAYPENS. THIS BAG IS NOT A TOY.




NOTICE

MIXNITO



Documents / Resources

	<p>eta MIXNITO Table Blender [pdf] Instruction Manual MIXNITO Table Blender, MIXNITO, Table Blender, Blender</p>
---	--

References

- [🌐 AEG Hausgeräte | Setzen Sie auf Qualität | AEG](#)
- [🔧 Serwis Digison](#)
- [🇪🇵 ETA - tady je doma](#)
- [🇪🇵 ETA - tu je doma](#)