



Eterna CONVHTTIM 2kW Convector Heater With 24 Hour Timer Instruction Manual

[Home](#) » [Eterna](#) » Eterna CONVHTTIM 2kW Convector Heater With 24 Hour Timer Instruction Manual 

Contents

- [1 Eterna CONVHTTIM 2kW Convector Heater With 24 Hour Timer](#)**READ THIS FIRST**
- [2 SPECIFICATION](#)
- [3 WARNING](#)
- [4 OPERATION OF THE HEATER](#)
- [5 ATTACHING THE FEET](#)
- [6 INSTRUCTIONS FOR USE / TIMER OPERATION](#)
- [7 TIMER OPERATION](#)
- [8 SETTING THE TIMER](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Eterna

Eterna CONVHTTIM 2kW Convector Heater With 24 Hour Timer



READ THIS FIRST

Check the pack and make sure you have all of the parts listed on the front of this booklet. If not, contact the supplier where you bought this product.

IMPORTANT SAFEGUARDS:

When using an electrical appliance, basic safety precautions should always be observed, including the following: Ensure the feet are correctly attached before use.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Extreme caution is necessary where children or persons with reduced physical, sensory or mental capabilities may come into contact with the heater when in use.

The product is for household/office use only.

WARNING – In order to avoid overheating do not cover or obstruct grilles or air intake openings when in use.

Do not place the heater on carpets with a very deep pile.

Always ensure that the heater is placed on a firm level surface and ensure that the heater is not positioned close to flammable materials, such as curtains, drapes etc as this could create a fire hazard.

The heater must not be located adjacent to or against an electrical socket.

Do not run the cord under carpets/rugs.

Arrange the cord away from high traffic areas and where it will not become a trip hazard.

Keep the mains lead away from the heater when in use.

Do not operate the heater with a damaged cord/plug or if the heater malfunctions.

If the supply cord is damaged, it must be replaced by a qualified engineer.

Avoid the use of an extension cord as this may overheat and cause a risk of fire.

Do not use the heater in any areas where petrol, paint or other flammable liquids or flammable fumes may be present e.g. garages or workshops.

Do not use this heater in the immediate surroundings of a bath, shower, swimming pool or where water is present.

This heater is hot when in use. To avoid burns and personal injury, do not let bare skin touch hot surfaces.

Never leave the heater unattended whilst it is in use.

SPECIFICATION

VOLTAGE: 220-240V~50-60Hz POWER MAX: 2kW

WARNING

- The heater should never be used without the feet securely fitted.
- This product must only be operated in an upright position.
- Do not try to repair the heater yourself, always consult a suitably qualified engineer.
- Do not use the heater in small rooms when they are occupied by persons who are not capable of leaving the room on their own, unless constant supervision is provided.

OPERATION OF THE HEATER

NOTE: It is normal for the heater to smell slightly for a short while when turned on for the first time or after a period of not being used.

ATTACHING THE FEET


1. Tip heater upside down.
2. Attach feet to each end of the heater using the screws provided. Affix the feet using 2 screws diagonally to correspond with the pre cut holes. Fasten securely.
3. Turn heater correct way up.

Model Identifier(s):		CONVHTSTD	CONVHTFAN	CONVHTTIM	
Heat output					
Nominal heat output	P _{nom}	2.0	2.0	2.0	kW
Minimum heat output (indicative)	P _{min}	0.75	0.75	0.75	kW
Maximum continuous heat output	P _{max,c}	2.0	2.0	2.0	kW
Auxiliary electricity consumption					
At nominal heat output	e _{lmax}	N/A	N/A	N/A	kW
At minimum heat output	e _{lmin}	N/A	N/A	N/A	kW
In standby mode	e _{lSB}	N/A	N/A	0.00091	kW
Type of heat output/room temperature control					
With mechanic thermostat room temperature control					Yes

Contact details: Eterna Lighting Ltd, Huxley Close, Wellingborough, Northamptonshire NN8 6AB

INSTRUCTIONS FOR USE / TIMER OPERATION

This model is also fitted with a 24hr timer which has 96 segments around its circumference, each segment being equivalent to 15 minutes of time. With the aid of this timer it is possible to preset the time and duration of the period(s) that is desired for the heater to operate in any 24hr period.³

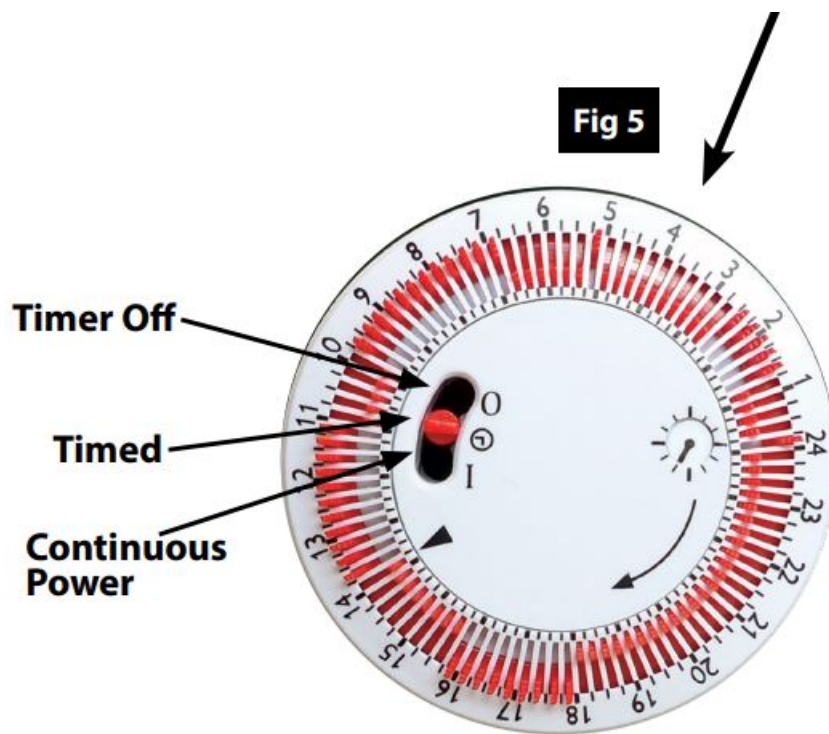

TIMER OPERATION

The centre of the timer has a 3 position slide switch. (See Fig. 5 opposite).

1. Unit is always off
2. Timer function is on
3. Unit is always on

SETTING THE TIMER

Ensure the slide switch on the timer is at the clock position.

Rotate the outer ring of the timer in a clockwise direction until the current time is lined up with the arrow pointer, i.e. if the time the timer is being set is 8pm, rotate the outer ring until the number 20 is in line with the arrow pointer.

Set the time the heater is required to run by pulling the segments around the outer ring forward appropriate to the running period(s) required.

When set, the heater will operate each day during the times programmed.

NOTE: The heater must always be plugged into a power socket, the element switches must be in the on position and the thermostat must be suitably set to ensure the heater will come on.

If the heater is required to run continuously, the slide switch on the timer should be set to the "I" position.

If it is subsequently required to revert back to timer operation, the slide switch on the timer should be set to the clock.

NOTE: When using in timer mode, due consideration should be given to the fact that the heater may come on whilst unattended.

Choose a suitable location for the heater, taking into account the safety instructions above.

Insert the plug of the heater into a suitable socket.

Turn the thermostat knob fully in a clockwise direction to the maximum setting.

Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on.

Example: Switch 1 = 750W | Switch 2 = 1.25kW | Combined = 2kW

When the desired room temperature has been reached, the thermostat knob should be turned slowly anti-

clockwise until the thermostat click is heard and the lights on the element switches are seen to go out. After this the heater will keep the air temperature in the room at the set temperature by switching on and off automatically.

WARNING: Children of less than 3 years should be kept away from the heater unless continuously supervised. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and **WARNING!** they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

CAUTION: SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.

CLEANING:

- Always remove the plug from the electrical socket and allow the heater to cool down before cleaning the heater.
- Wipe heater with a soft dry cloth.
- Store the heater in a clean dry place.


CLEANING WARNING: Do not immerse the heater in water. Do not use any cleaning chemicals such as detergents and abrasives. Do not allow the interior to get wet.

EVENTUALLY, YOU MAY WANT TO REPLACE THIS PRODUCT: Regulations require the recycling of Waste from Electrical and Electronic Equipment (European“WEEE Directive” effective August 2005—UK WEEE Regulations effective 2nd January 2007). Environment Agency Registered Producer: WEE/GA0248QZ. WHEN YOUR PRODUCT COMES TO THE END OF ITS LIFE OR YOU CHOOSE TO REPLACE IT, PLEASE RECYCLE IT WHERE FACILITIES EXIST – DO NOT DISPOSE WITH HOUSEHOLD WASTE.

IF YOU EXPERIENCE PROBLEMS: If you believe your product is defective, please return it to the place where you bought it. Our Technical Team will gladly advise on any Eterna Lighting product, but may not be able to give specific instructions regarding individual installations.

Email: sales@eterna-lighting.co.uk / technical@eterna-lighting.co.uk Visit our website: www.eterna-lighting.co.uk

Documents / Resources

	<p>Eterna CONVHTTIM 2kW Convector Heater With 24 Hour Timer [pdf] Instruction Manual CONVHTTIM 2kW Convector Heater With 24 Hour Timer, CONVHTTIM, 2kW Convector Heater With 24 Hour Timer</p>
---	--

References

- [Homepage - ETERNA LIGHTING](#)