

eufy SECURITY T7401 Smart Safe User Guide

Contents

- [1 T7401 Smart Safe](#)
- [2 Product Information: Smart Safe](#)
 - [2.1 Overview:](#)
 - [2.2 Battery Life:](#)
 - [2.3 Setup Instructions:](#)
 - [2.3.1 Step 1: Charge Smart Safe](#)
 - [2.3.2 Step 2: Unlock Smart Safe](#)
 - [2.3.3 Step 3: Add to the eufy Security App](#)
 - [2.3.4 Step 4: Mount Smart Safe \(Optional\)](#)
 - [2.4 Notice:](#)
 - [2.5 Customer Service:](#)
 - [2.6 Documents / Resources](#)

T7401 Smart Safe

Product Information: Smart Safe

The Smart Safe is a secure storage device designed to protect your valuable belongings. It features multiple unlocking options, including a keypad, fingerprint reader, and mechanical lock. The safe also includes a panic button for emergency situations. It has a charging port and indicator for convenient charging. The safe is equipped with a sync button and LED light for easy operation.

Overview:

- Keypad
- Fingerprint Reader
- Mechanical Lock
- PANIC Button
- Charging Port
- Charging Indicator
- SYNC Button
- LED Light

Battery Life:

The Smart Safe has a battery life of up to 6 months per charge.

Setup Instructions:

Step 1: Charge Smart Safe

Fully charge the Smart Safe before using it for the first time. It may take approximately 2 hours to charge using a 5V/2A adapter.

Step 2: Unlock Smart Safe

There are two options available for unlocking the Smart Safe for the first time:

Option 1: Default Password

Enter the default password "123456". The charging indicator will flash blue during this process. Once unlocked, the indicator will turn solid blue, indicating that the safe is fully charged.

Note: The default password will expire after setup. Use the eufy Security app to set a new password.

Option 2: Backup Key

Use the backup key to unlock the Smart Safe.

Step 3: Add to the eufy Security App

Download and install the eufy Security app on your smartphone. Sign up for an account and follow the on-screen instructions to add the Smart Safe to the app.

Step 4: Mount Smart Safe (Optional)

If desired, you can mount the Smart Safe using the screw holes on the bottom. The mounting method depends on the type of surface:

Option 1: Wooden Surface

What you need:

- Screwdriver

Option 2: Surfaces Made out of Hard Materials

What you need:

- Power Drill

- Pencil

Notice:

The Smart Safe complies with Part 15 of the FCC Rules and meets general RF exposure requirements. Shielded cables must be used for connections to other computing devices to maintain compliance with FCC regulations.

Customer Service:

If you have any questions or require assistance, please contact our customer service:

United States: +1 (800) 988 7973

United Kingdom: +44 (0) 1604 936 200

Germany: +49 (0) 69 9579 7960

Email: support@eufylife.com

Anker Innovations Limited
Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon,
Hong Kong

Follow us on social media:

Twitter: @EufyOfficial

Facebook: @EufyOfficial

Instagram: @EufyOfficial

[View Fullscreen](#)



QUICK START GUIDE
Smart Safe

1 OVERVIEW

Keypad Fingerprint Reader Mechanical Lock PANIC Button Charging Port Charging Indicator

1

2.34"

9.84"

SYNC Button LED Light

6.30"

2 SETUP

STEP 1. CHARGE SMART SAFE

Fully charge Smart Safe before first use. This may take 2 hours if you use a 5V/2A adapter.

STEP 2. UNLOCK SMART SAFE

Two options are available for unlocking Smart Safe for the first time.

Option 1. Default Password

Enter "123456"

Charging Indicator Flashing blue Blue

Description Charging Fully charged

The battery life can last up to 6 months per charge.

The default password "123456" will expire after setup. Use the eufy Security app to set a new password.

Option 2. Backup Key

STEP 3. ADD TO THE EUFY SECURITY APP

1. Download and install the eufy Security app, then sign up for an account.

STEP 4. MOUNT SMART SAFE (OPTIONAL)

You can mount Smart Safe through the screw holes on the bottom.

2. Follow on-screen instructions to complete the setup.

Option 1. Wooden Surface

What you need:

The model T7401 supports 2.4 GHz Wi-Fi only. Make sure the Wi-Fi signal is strong.

Screwdriver

2

3

4

5

6

Option 2. Surfaces Made out of Hard Materials

What you need:

Power Drill

Pencil

Anker Innovations Limited. All rights reserved. eufy Security and eufy Security Logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. All other trademarks are the property of their respective owners.

51005003051 V01

7

3 NOTICE

FCC Statement This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure Statement The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure condition. The min separation distance is 20cm.

Notice: Shielded cables All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

The following importer is the responsible party Company Name: POWER MOBILE LIFE, LLC Address: 10900 NE 8TH ST, STE 501, BELLEVUE, WA 98004 Telephone:1-800-988-7973

Customer Service

Warranty 12-month limited warranty

Call Us United States +1 (800) 988 7973

United Kingdom +44 (0) 1604 936 200

Germany +49 (0) 69 9579 7960

Mon-Fri 6:15-17:00(PT) Sat-Sun 6:30-16:30(PT)

Mon-Fri 6:00-17:00 Sat-Sun 6:00-14:00

Mo-Fr 8:00-16:00

Email Us support@eufylife.com

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong


@EufyOfficial

@EufyOfficial

@EufyOfficial

8

Documents / Resources

	eufy SECURITY T7401 Smart Safe [pdf] User Guide T7401 Smart Safe, T7401, Smart Safe, Safe
---	--