



Eugad B09W2QNYN4 Automatic Cat and Dog Feeder Instruction Manual

[Home](#) » [Eugad](#) » Eugad B09W2QNYN4 Automatic Cat and Dog Feeder Instruction Manual 

Eugad B09W2QNYN4 Automatic Cat and Dog Feeder Instruction Manual



Contents

- [1 Specifications](#)
- [2 Appliance Overview](#)
- [3 Display Screen](#)
- [4 Assembly](#)
- [5 Operation Instructions](#)
- [6 Important Safeguards](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

Specifications

Programming: Maximum 5 meals per day, 10g each portion, maximum capacity 400g.

Weight: 1.9kg

Overall dimensions: L374mm*W190mm*H299mm

 
Capacity: 4L (kibbles smaller than 15mm only)

Dual power mode: 5V 1A DC power output adaptor & 3 D type batteries

! Notes:

- The appliance works for up to 30 days on batteries as the only power source.
- To prevent jamming, fill in kibbles smaller than 15mm in diameter.
- Batteries are not included. To avoid malfunction and injury, check the condition of your appliance regularly.
- Do not put anything other than dry pet food into the appliance.

Appliance Overview

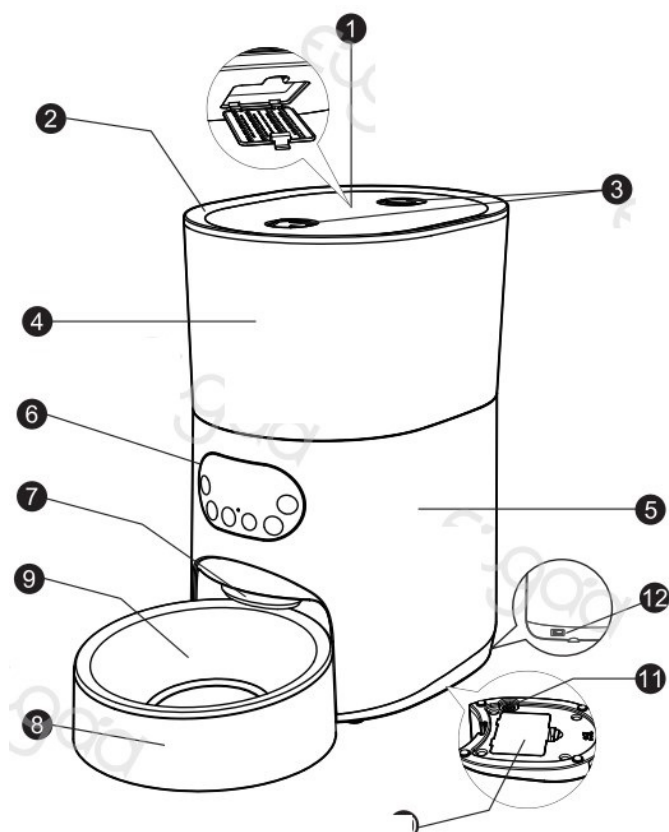


- Desiccant Carrier
- Cover
- Cover Buckle
- Hopper
- Base
- Control Panel
- Food Chute
- Bowl Holder
- Stainless Steel Bowl
- Battery Chamber
- Speaker
- Power Socket

Display Screen



 
Notes:

- The screen will automatically be locked in 1 minute if without any further operations.
- Press and hold "  " for 2 seconds to lock/unlock.
- The appliance can work for 30 days or so on batteries without connecting to other power sources. x
- The appliance is suitable for multiple cats and small dogs.


Assembly

1. Assemble the hopper, cover and bowl with its holder.


1. Insert the hopper into the base and twist to lock in place.

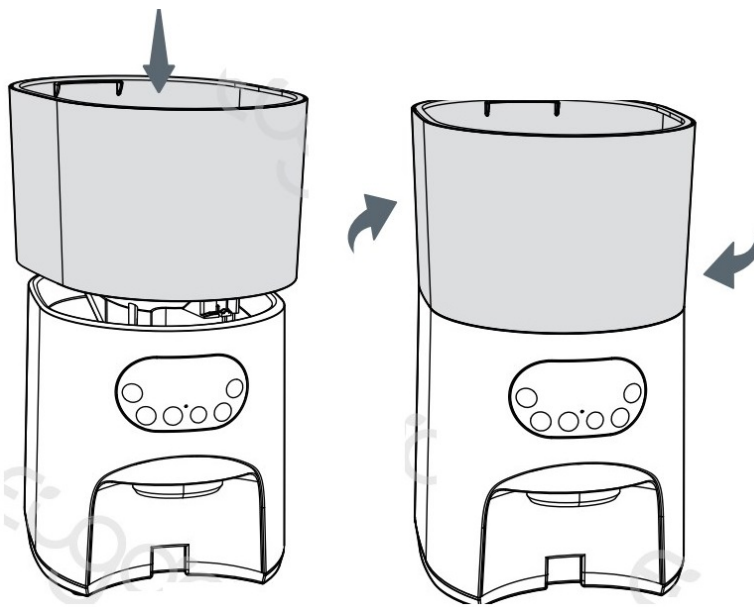

 2. Fix the cover.

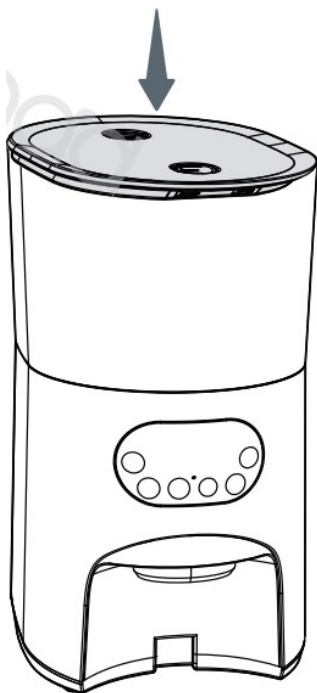


 3. Connect the bowl holder with the appliance, and place the stainless steel bowl in the holder.

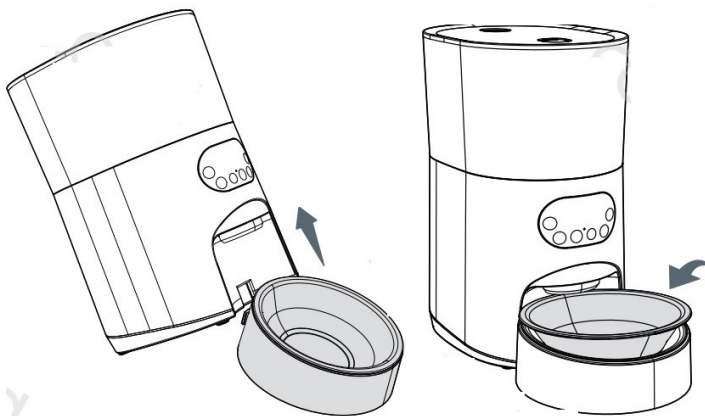


2. Connect to power supply (dual power mode recommended)

 1. Plug the **USB** cord, then connect to the power supply.

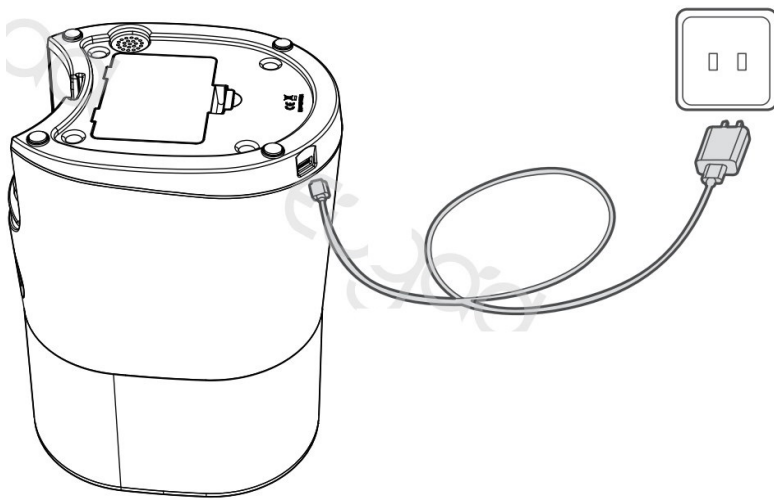

 2. Without connecting to power supply, 3 D type batteries (not included) are required into the bottom of the base.

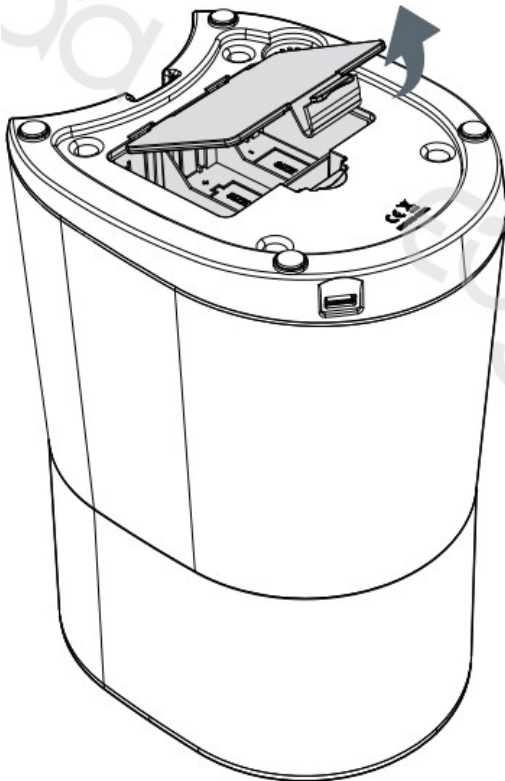


3. Place the desiccant

Desiccant keeps food fresh and dry. Replace it every 60 days. Remove it when cleaning the cover.



 4. Add food to the hopper

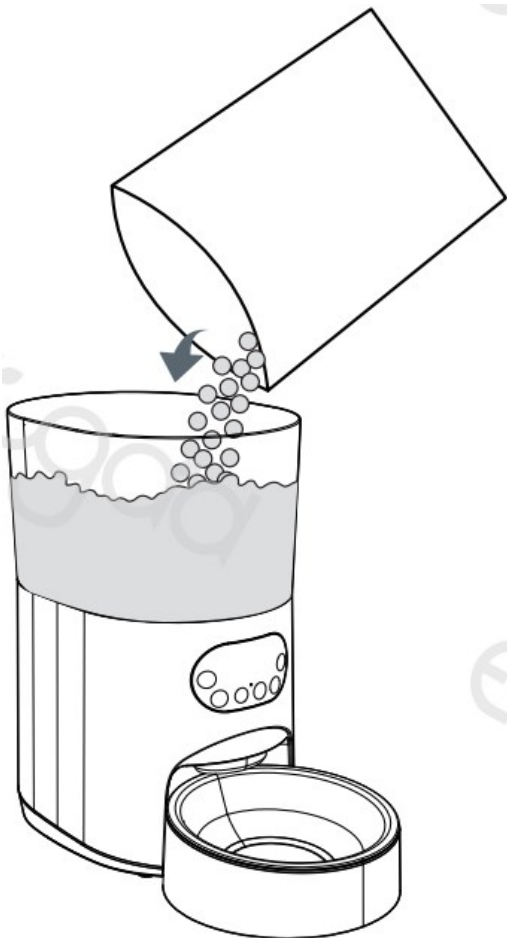

Operation Instructions

 
Press and hold “+” and “-” for 5 seconds to restore factory settings.”

Press and hold “🔒” for 2 seconds to unlock or lock.

Set Current Time


- Press and hold “⚙️” for 2 seconds to set.
- When it flashes, “🕒” press or “+” “-” to set the hour.
- Press again, “⚙️” then press or “+” “-” to set the minute.
- Press “⚙️” again to confirm the current time setting and move on to set meal.

For example: the current time is 20:30.

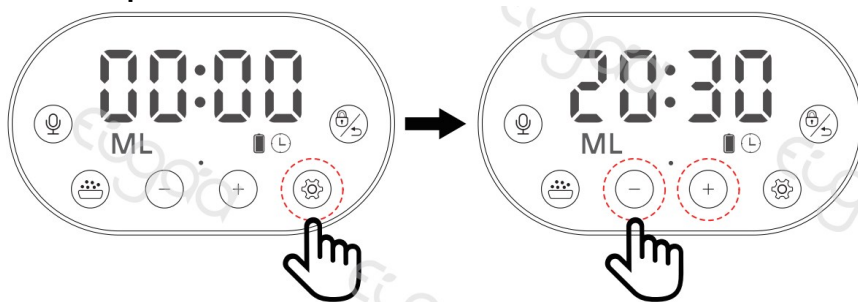


Set Meal

 - When it flashes “ML 1”, set the first meal.
- Press “⚙️” shown. to confirm the meal and move on to portion size setting as

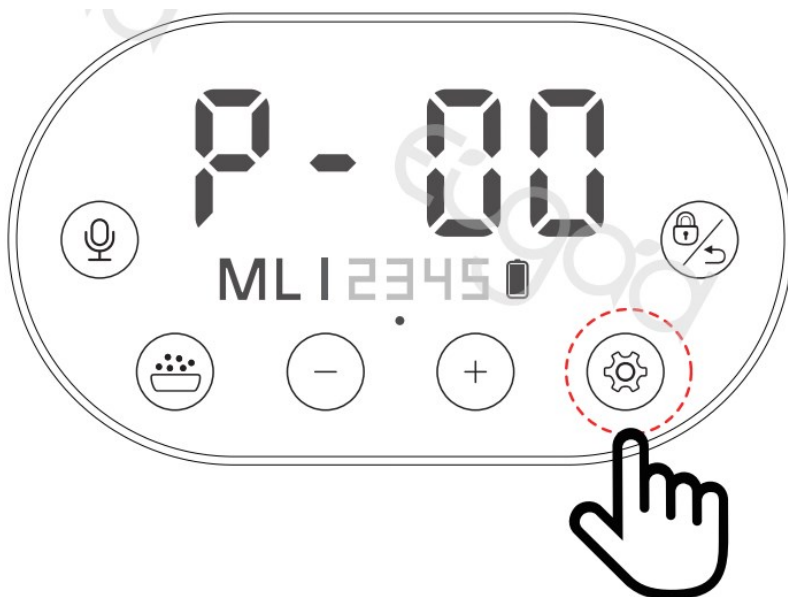


Set Portion Size


- Portion sizes are multiples of 10g, up to 400g. Ex. P-40: 40*10g=400g Example: If you want to set 10g per portion, adjust the quantity to 1 (P-01); if 20g, set P-02; if 50g, set P-05 as shown.

  - If you do not want to set this meal, set the portion size to 0 (P-00) as shown.
- When the portion is set, press  to set the feeding time.



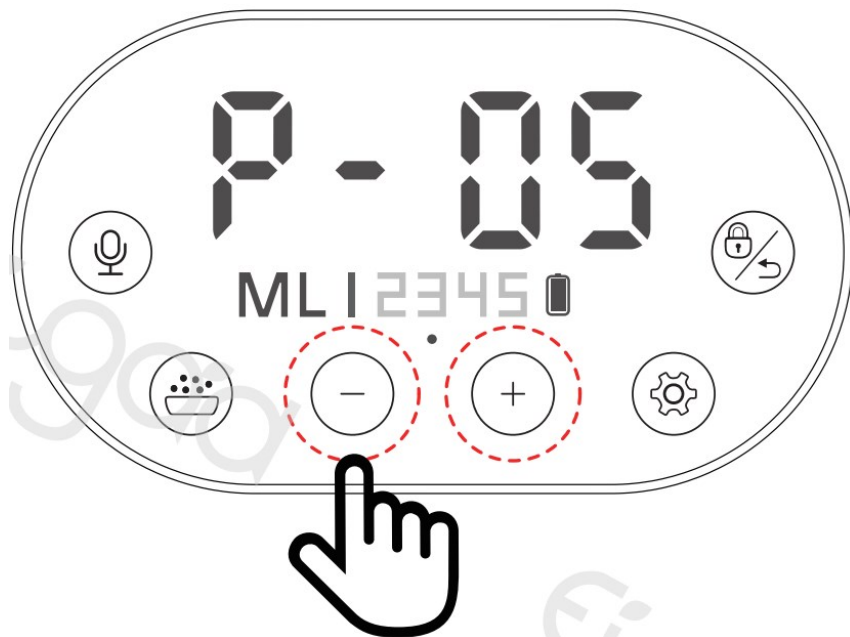

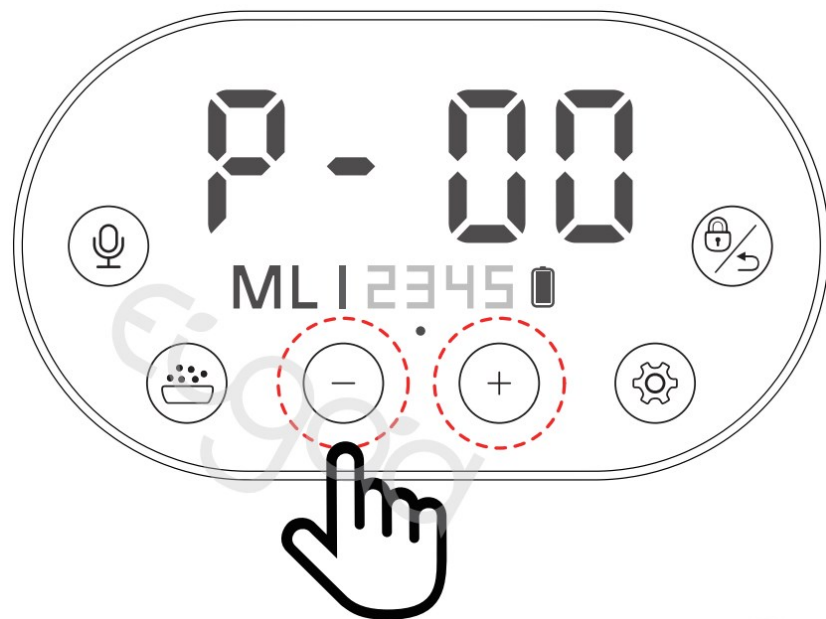


Adjust the quantity to 5.



Adjust the quantity to 0.



Set Feeding Time

- Set the hour by pressing “” “or” “” e. g. 8:00, then press “” “@” again to adjust the minute with “” “or” “” .
- Press “” again to move on to the next meal. Repeat the steps for meal 2-5. Once finished, press “(&)” “@)” to save the setting.
- If you set less than 5 meals. & press and hold “” again after setting the desired number of meal to save the setting.
- Once finished, the screen will read how many meals a day you have set. E.g. ML 1: 1 meal a day; ML 1 2: 2


meals a day; ML 12345: 5 meals a day.

Voice Recording


! Notes:

The playback volume may sound low, but bear in mind that pets have better hearing than humans, so just speak in a normal tone of voice while recording.


a Start recording

Press and hold "  ". When you hear a beep, it starts recording. Speak your message and release the button when you finish. The recording will automatically play back. Max. recording time: 10 seconds.

b Play recording

Press "  " to play back the recorded message.

c Delete recording

 
Press and hold "  " until you hear a beep, then release without recording a message.



Important Safeguards

Cleaning and Maintenance

1. Please clean the appliance regularly.
2. Following parts are dishwasher safe: Cover (without desiccant), hopper, bowl holder and stainless steel bowl.
3. The main body cannot be washed in the sink or dishwasher. Please use a damp cloth to clean it.

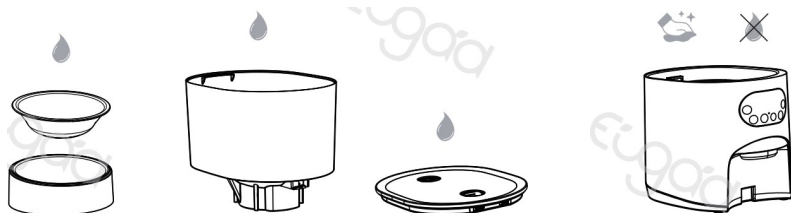

Different colours of battery icon

- Battery indicator shows which power source is being used and the battery level.

Battery Icon Flashing: No batteries

White Icon: More than 50% battery left

 
Pink Icon: 50%~20% battery left

Red Icon: Less than 20% battery left

Warnings

- Do not put your fingers into the chute or the rotor.
- Three (3) D type batteries are required for the appliance.
- Remove the batteries if not in use for a long period of time.
- Applicable for dry food only.
- The size of kibbles should not exceed 15mm to prevent jamming. The appliance can work for up to one month if on batteries only.
- Batteries are not included.

Symbols

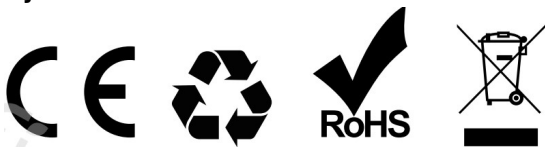

Eugard

Documents / Resources



[Eugard B09W2QNYN4 Automatic Cat and Dog Feeder](#) [pdf] Instruction Manual
B09W2QNYN4 Automatic Cat and Dog Feeder, B09W2QNYN4, Automatic Cat and Dog Feeder, Cat and Dog Feeder, Dog Feeder, Feeder