

EUHOMY IM-06D Ice Maker Machine Countertop with Handle Instruction Manual

Home » Euhomy » EUHOMY IM-06D Ice Maker Machine Countertop with Handle Instruction Manual







Contents

- 1 IM-06D Ice Maker Machine Countertop with
- **Handle**
- 2 Q&A
- 3 Safety Precautions
- 4 Operation & Installation
- 5 Maintenance & Tips
- **6 Technical Parameters & Circuit Diagram**
- 7 Packing List
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

IM-06D Ice Maker Machine Countertop with Handle

Congratulations

Dear Customer:

Welcome to the Euhomy family. Thank you for purchasing one of our products.

Our goal is to provide you with superior service. If there is anything missing from or wrong with your order, or if you have any questions about using our ice maker, PLEASE contact us.

Email: support@euhomy.com
Facebook: @Euhomy.Official

The Euhomy team is available 24/7 to address your questions, comments, and concerns. Your satisfaction is our ultimate goal. We want to make everything right so you'll share your positive experience with other shoppers on Amazon.

If you experience any problems, please send an email to support@euhomy.com.

Our mission:

- To be the most trusted appliance brand.
- To create practical, compact appliances that better your life.

Q&A

1. How often do I need to clean my ice maker?

Your ice maker's deep cleaning routine should be performed monthly to maintain optimal performance. Neglecting this maintenance can result in excessive scale buildup, potentially eading to a machine malfunction.

2. How should I clean the machine?

Do not clean the ice maker with acidic substances like lemon juice or vinegar as they can corrode the evaporator and ead to a blue-green residue. Use a neutral, nickel-safe cleaner available on Amazon. f you must use an acid, unplug the machine, soak the tank for 30 minutes, and then drain. Always rinse with clean water. Regularly drain the ice maker to prevent scale and impurity buildup.

3. Why is my ice cube cloudy?

Cloudy ice results from turbid water. We recommend that you use either distilled water or high-quality tap

water n your ice maker. If your tap water is of low quality, we recommend that you install a water filtration system.

4.Can I put milk, juice, or other liquids into the water tank to make ice cubes?

We do not recommend making ice cubes out of liquids other than pure water. Our research has found that the particles in milk and other beverages can block the pump and reduce its life. Also, the protein in milk is prone to calcification, which chemically reacts with and eventually breaks the PU water pipe nside the machine, causing the ce maker to fail. For optimal operation of this ice maker, avoid using distilled water, as t can erroneously activate the ow water indicator. nstead, opt for purified or bottled water to ensure proper functionality.

5. Why do my ice cubes melt so quickly?

Because the ce maker is not a refrigerator or freezer, t does not have a heat-reduction function. High ambient temperatures in warm climates and seasons will accelerate the melting of ice cubes. You can close the lid of the machine to maintain the internal temperature. If you wish, you can try placing electric fans close to the machine to reduce the air temperature. However, if you won't be using the ce cubes immediately, we recommend removing them from the ce basket and storing them in the freezer.

6. Why are my ice cubes stuck together?

Either the ce-making cycle is too ong or the water temperature in the nner tank is too low. You can solve this problem by stopping the ce maker and restarting the ice maker once the ice blocks have melted. Then refill the water tank. We recommend that you always use water that is between 40 °F and 90 °F.

7. Why do my ice cubes smell of plastic?

The ice cubes themselves are tasteless. If you detect an odor of plastic, clean the nside of the machine with a weak solution of lemon juice in water. Run the ice maker through a few cycles. Finally, rinse the appliance with pure distilled water.

8. Why is my machine making noise?

It is normal for the machine to make a faint sound when it s running. Closing the lid can reduce this noise. If the water pump makes any noise during use, we recommend turning off the machine and cleaning the filter n the water tank. Then restart the machine to see f the noise has disappeared.

9. Why is water leaking from my machine?

It may be that the PVA tube nside the machine fell off during shipping. You can remove the back cover of the machine and reconnect t yourself. If you don't know how to do this, please contact the Euhomy team. We will send you a professional video to help you solve the problem.

10. Why is there water flowing but not making ice?

Be sure to operate your ice maker in a room temperature between 50 °F and 105 °F. The water temperature

should be between 40 °F and 90 °F. If you have followed these instructions, then the refrigerant has eaked. Please send us a video or picture, and the Euhomy team will help you.

Safety Precautions

Important Safety Instructions / For Household Use Only

Your safety and the safety of others are very important.

- We have provided many important safety messages in this manual and on your appliance.
- Always read and obey all safety messages.
- This is the safety alert symbol:

All safety messages are preceded by the safety alert symbol and the word "DANGER" or "WARNING".





These words mean:

When you see one of these warnings, know that you can be seriously injured or even killed if you don't follow the immediate instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed,

When using electrical appliances, basic safety precau tions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using this or any appliance.

- Do not operate this or any other appliance with a damaged cord. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified individual to prevent a hazard.
- his ice maker must be positioned so that the plug is accessible. Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully nserted into the receptacle.
- This ice maker must be positioned so that the plug is accessible. Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully nserted into the receptacle.
- We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. If you must use an extension cord, use No.14A WG minimum size and rated no less than 1875 watts.
- Unplug the ce maker before cleaning or making any repairs or servicing.
- Exercise caution and use reasonable supervision when appliance is used near children.
- Do not use your ce maker outdoors. Place the ice maker out of direct sunlight. Be sure that there is at least 4 inches of space between the back of your unit and the wall. Keep a minimum distance of 4 inches on each side of your unit clear.
- Do not use any liquid other than pure water to make ce cubes.
- Do not clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not allow the ice maker to tip over or be knocked over.
- If the ice maker s brought in from outside n wintertime, give it a few hours to warm up to room temperature before plugging t in.



MARNING: This appliance must be grounded,

- DANGER Risk of fire or explosion. Flammable refrigerant used. Do not use mechanical devices to defrost ice maker. Do not puncture refrigerant tubing.
- DANGER = Risk of fire or explosion. Flammable refrigerant used. To be repaired only by trained service
 personnel. Do not puncture refrigerant tubing.
- CAUTION Risk of fire or explosion, Flammable refrigerant used. Consult repair manu- al/owner's guide before attempting to install or service this product. All safety precautions must be followed.
- CAUTION Risk of fire or explosion, Flammable refrigerant used, Dispose of property in accordance with federal or local regulations.
- CAUTION Risk of fire or explosion. Flammable refrigerant used. Follow handling instructions carefully to
 prevent puncture of refrigerant tubing,
- The ice maker should be installed in accordance with the ASHRAE Safety Standard for Refrigeration Systems,
 Standard 15.
- All maintenance and repairs of the unit, including replacement of components, shall be done by factoryauthorized service personnel so as to minimize the risk of possible ignition due to incorrect parts or improper service.

⚠ Note:

The wires in this mains lead are colored in accordance with the following code:


COLOR	WIRING
Yellow	Grounding
White	Neutral
Black	Live

To prevent hazards resulting from instability, the appliance must be placed on an even or flat surface.


Operation & Installation

MAIN UNIT CONSTRUCTION

- 1. Ice scoop
- 2. Ice Full sensor
- 3. Ice basket
- 4. Top cover with transparent window
- 5. Air exhaust
- 6. Water drain cap: at bottom front of the unit
- Maximum water evel ndicator: — —
 Remove the ce basket to see the water level mark.
- 8. Handle

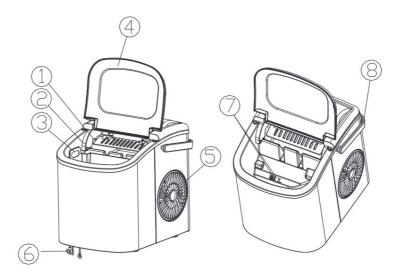

Exploded – view drawing

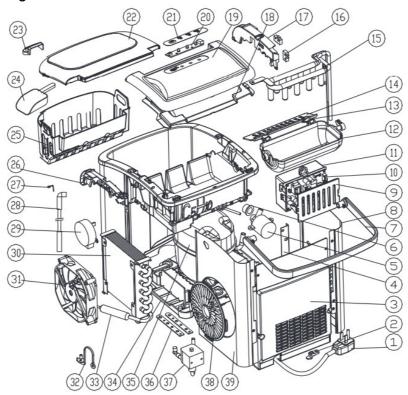

S/N	Part description	Qty/ Per	S/N	Part description	Qty/ Per	S/N	Part description	Per/
1	Power cord	1	14	Ice shove	1	27	Stainless wire	1
2	Plastic clip	1	15	Evaporator	1	28	Water supply pipe	1
3	Back panel	1	16	Micro switch	2	29	Synchronous motor	1
4	Plate back support	1	17	Inner tank bracket, L H	1	30	Condenser	1
5	DC water pump	1	18	Back bottom panel	1	31	DC fan motor	1
6	Silicon pump sealin	1	19	Back top panel	1	32	Nylon plug drain	1
7	Handle	1	20	Displaying PCB	1	33	Copper tube filter	1
8	Left side panel	1	21	Touch pad	1	34	Plastic bottom	1
9	Control box cover	1	22	Front top panel	1	35	Compressor	1
10	Main PCB	1	23	Water filter	1	36	Plate bottom suppor t	2
11	Control box	1	24	Ice scoop	1	37	Magnetism valve	1
12	Ice making box	1	25	Ice basket	1	38	Air exhaust	1
13	Ice scoop link	2	26	Inner tank bracket, RH	2	39	_ Right side panel	1

POSITION & FUNCTIONS OF CONTROL PANEL


Control panel: Easy-to-use, easy-to-read touch display.

A. Power ON/OFF button

B. Power ndicator

C. Ice Full indicator

D.Add Water indicator

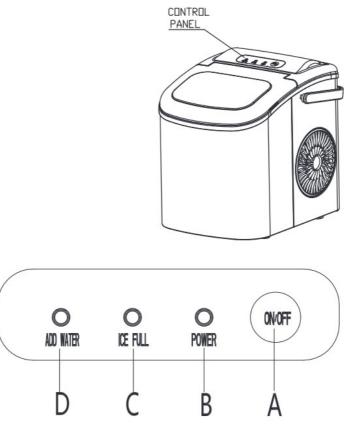


UNPACKING YOUR ICE MAKER

- Remove the exterior and interior packaging. Check if ice basket and ce scoop inside. If any parts are missing, please contact our customer service.
- Remove the tape securing the ice shovel, ice basket, and ice scoop. Clean the tank and ice basket.
- Put the ice maker on a flat, level countertop, out of direct sunlight and away from other sources of heat (e.g., stove, furnace, radiator). Ensure that there is a gap of at least 4 nches between the unit and any walls or other vertical surfaces. Keep the ice aker's cooling vents clear to ensure proper heat release and efficient performance.
- Allow one hour for the refrigerant fluid to settle before plugging the ice maker in.
- The appliance must be positioned so that the plug s accessible.

MARNING: Fill with potable (drinking) water only.

ASSEMBLE HANDLE

Rotate the handle to the same angle as the mounting hole on the machin, Put It on the machine.

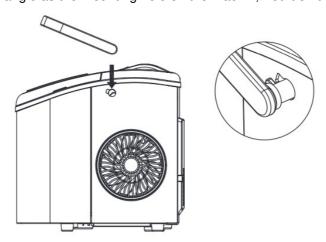

DANGER: Improper use of the grounded plug can result n electric shock. If the power cord is damaged, please call our customer service.

- This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a
 three-prong plug which mates with standard three-prong wall outlets to minimize the possibility of electric
 shock.
- Plug your appliance nto an exclusive, properly installed, grounded wall outlet. Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician.
- This appliance requires a standard 110-120 V, 60 Hz electrical outlet with three-prong ground. electrician.

AUTOMATIC SELF-CLEANING PROGRAM

- Plug in the unit. Press the Power button and hold it for at east 5 seconds to activate the self-cleaning program.
 The cleaning cycle takes 30 minutes.
- The Ice Full and Add Water indicators will flash alternately during the cleaning cycle.
- After the cleaning cycle has ended, drain the water from the inner tank through the drainage outlet at the bottom of the machine.

USING YOUR ICE MAKER

- Open the cover. Remove the ice basket. Pour water into the tank. Keep the water level below the mark.
- Press the Power button on the control panel to begin the ice-making cycle.
- The ice-making cycle takes 6-13 minutes, depending on the room temperature. The recommended room temperature s 50 °F to 105 °F.
- If the water pump can't inject water, the ice maker will stop automatically and the Add Water indicator will come on. Power off the unit. Fill the water tank to the Maximum Water Level mark. Power on the unit. Allow the refrigerant liquid nside the compressor at least 3 minutes to settle before the ice-making cycle resumes.
- When the ice basket is full, the ce maker will stop automatically and the Ice Full indicator will come on.
 WARNING: Direct or reflected sunlight may cause nfrared sensor malfunction. If the unit does not stop once the ice basket s full and ice cubes are obstructing the sensor, move the unit out of the sunlight.
- Change the water every 24 hours to keep the unit and your ice sanitary. If the unit will not be used for at east one day, drain all the water and dry the tank.

Maintenance & Tips

CLEANING AND MAINTAINING YOUR ICE MAKER

Before using your ice maker, it s strongly recommended to clean it thoroughly.

- Take out the ice basket.
- Clean the interior with warm, soapy water and a soft cloth. Use a mild dishwashing iquid or liquid hand soap for this purpose.
- Rinse the interior and nside parts with clean water. Drain out the water by unplugging the drain cap at the bottom front.

- The outside of the ce maker should be cleaned regularly with a mild detergent solution and warm water.
- Dry the interior and exterior of the unit with a clean, soft cloth.




Do not use organic solvents, hot water, harsh detergents, or strong acids or bases for cleaning. Empty and dry the water tank before storing the ce maker.

Technical Parameters & Circuit Diagram

Technical Parameters


Model	IMO6D
Protection Type	1
Power	115V/60Hz
Ice—Making Current	1.5A
Ice—Harvest Current	1.8A
Refrigerant	R600a, 0.74oz/21g 🔨
Design Pressure, High Side	290psig
Low Side	88psig
Vesicant	CsHio
Net Weight	6.2kg
Dimensions	222x294x290mm
Enclosure	Plastic

CIRCUIT DIAGRAM

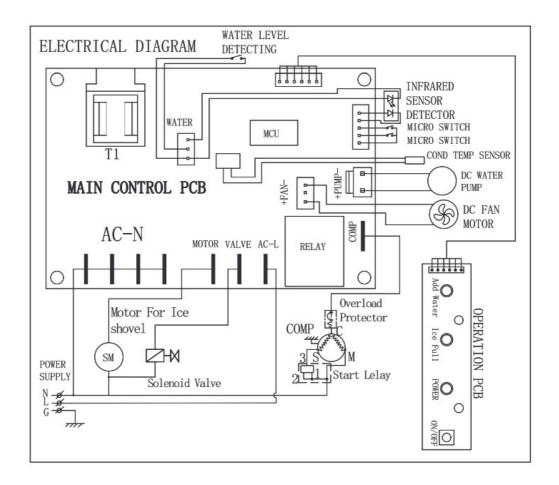

Packing List

ADDITIONAL ACCESSORIES

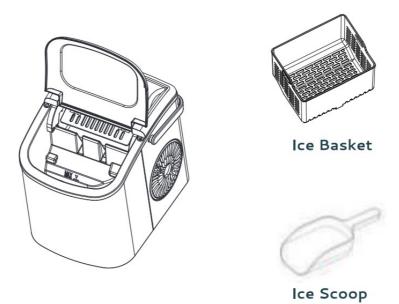

NO.	Description	Quantity
1	Manual	1 pc
2	Ice Basket	1 pc
3	Ice Scoop	1 pc
4	Handle	1 pc

Warranty

Euhomy offers a limited 1-year warranty ("warranty period") on all of our products purchased new and unused from Euhomy company, with an original proof of purchase and where a defect has arisen, wholly or substantially, as a result of faulty manufacture, parts, or workmanship during the warranty period. The warranty does not apply where damage is caused by other factors, ncluding without limitation:

- (a) normal wear and tear;
- (b) abuse, mishandling, accident, or failure to follow operating instructions;
- (c) exposure to liquid or infiltration of foreign particles;
- (d) servicing or modifications of the product other than by Euhomy;
- (e) commercial or non-household use.

The Euhomy warranty covers all costs related to restoring the proven defective product through repair or replacement of any defective part and necessary labor so that it conforms to its original specifications. A replacement product may be provided nstead of repairing a defective product. Euhomy's exclusive obligation under this warranty is limited to such repair or replacement. A receipt ndicating the purchase date s required for any claim, so please keep all receipts n a safe place. Although greatly appreciated, the product registra tion is not required to activate any warranty and product registration does not eliminate the need for the original proof of purchase. The warranty becomes void if attempts at repair are made by non-authorized third parties and/or if spare parts, other than those provided by Euhomy, are used.

You may also arrange for service after the warranty expires at an additional cost. These are our general terms for warranty service, but we always urge our customers to reach out to us with any ssue, regardless of warranty terms. If you have an ssue with a Euhomy product, please contact us (support@euhomy.com), and we will do our best to resolve it for you.

Troubleshooting (support@euhomy.com)

Problem	Possible Cause	Solution		
Add Water indicator is on.	Lack of water.	Power off the ice maker. Add water. Press the Power button again to restart the unit.		
		Remove ice from ice basket.		
Ice Full indicator is on.	Ice basket is full.	The unit could make ice 10 cycles after pressing the "ON/OFF" button 5 seconds.		
log cubos stick together	The ice-making cycle is too long.	Power off the ice maker and let the ice mel t. Then power on the unit.		
Ice cubes stick together.	Water temperature in inner tank is to o low.	Replace the water. Recommended water t emperature is 40 °F to 90 °F.		
Ice-making cycle is normal, but no ice forms,	Room temperature or water temperature in inner tank is too high.	Ideal room temperature is 50 °F to 105 °F. Ideal water temperature is 40 °F to 90 °F.		
	Refrigerant in cooling system leaks.	Please contact_support@euhomy.com		
	Pipe in the cooling system is blocked.	Please contact support@euhomy.com		



Documents / Resources



EUHOMY IM-06D Ice Maker Machine Countertop with Handle [pdf] Instruction Manual IM-06D Ice Maker Machine Countertop with Handle, IM-06D, Ice Maker Machine Countertop with Handle, Machine Countertop with Handle, Handle, Handle

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.