

EVA LOGIK ZW30S Smart On and Off Switch User Manual

Home » EVA LOGIK » EVA LOGIK ZW30S Smart On and Off Switch User Manual

Contents

- 1 EVA LOGIK ZW30S Smart On and Off
- **Switch**
- 2 Specifications
- 3 Identify the wires
- 4 Single switch
- 5 Way switch option 1
- 6 Way switch option 2
- **7 FCC Caution**
- 8 Documents / Resources
- 9 Related Posts







Specifications

• Model: ZW30S

• 120VAC, 60Hz

• Frequency:908.4M Hz

• FCC ID: 2AQURZW30S


• Temperature Range: 32° F~104° F

Switch xl


Switch xl

Identify the wires


- LINE (Hot)- Black (connected to power)
- NEUTRAL -White
- LOAD- Black (connected to lighting)
- GROUND- Green/Bare
- TRAVELER Red/Other(only in 3-way installations)

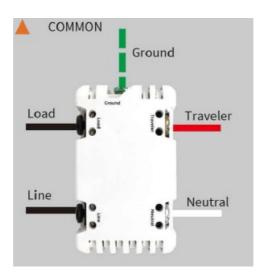


Single switch

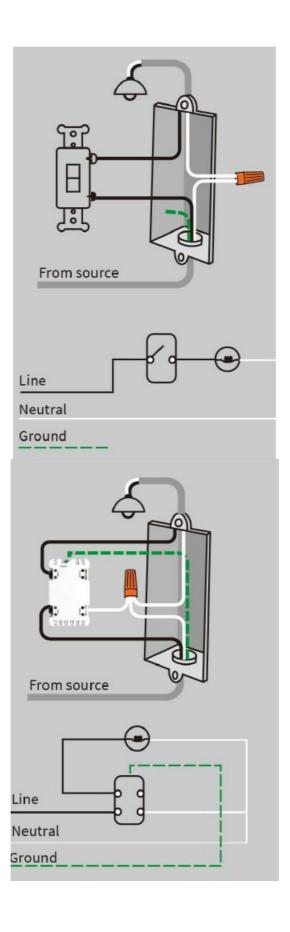

Way switch option 1

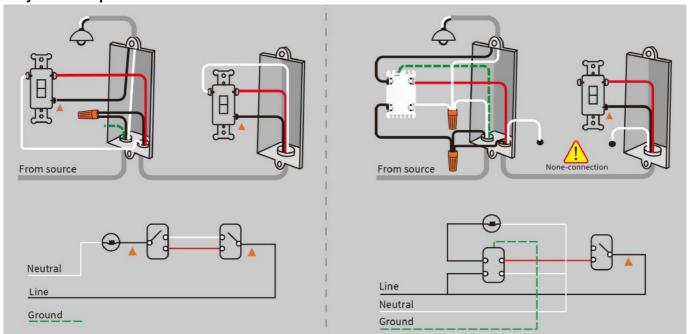

Way switch option 2

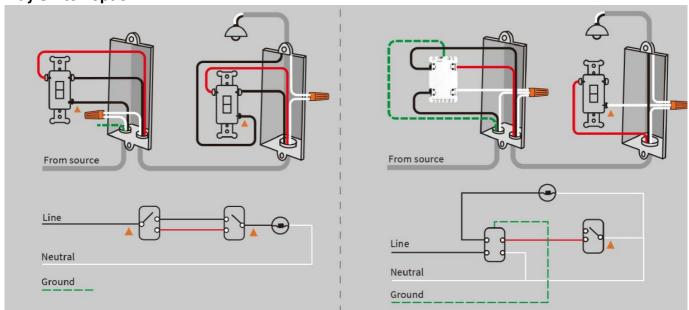

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired
 operation. Any changes or modifications not expressly approved by the party responsible for compliance could
 void the user's authority to operate the equipment.


Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may 1 cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, 1 which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and 1 receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

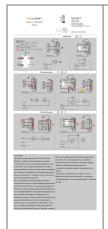

EVA LOGIK ZW30S Smart On and Off Switch [pdf] User Manual ZW30S, 2AQURZW30S, ZW30S, Smart On and Off Switch

Manuals+,