


## Contents [ [hide](#) ]

- [1 Evanly Decor Multi-Play Tower and Slide](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 SAFETY & WARNINGS](#)
- [5 PART LIST](#)
- [6 ASSEMBLY](#)
- [7 FAQs](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)

# Evanly Decor

## Evanly Decor Multi-Play Tower and Slide

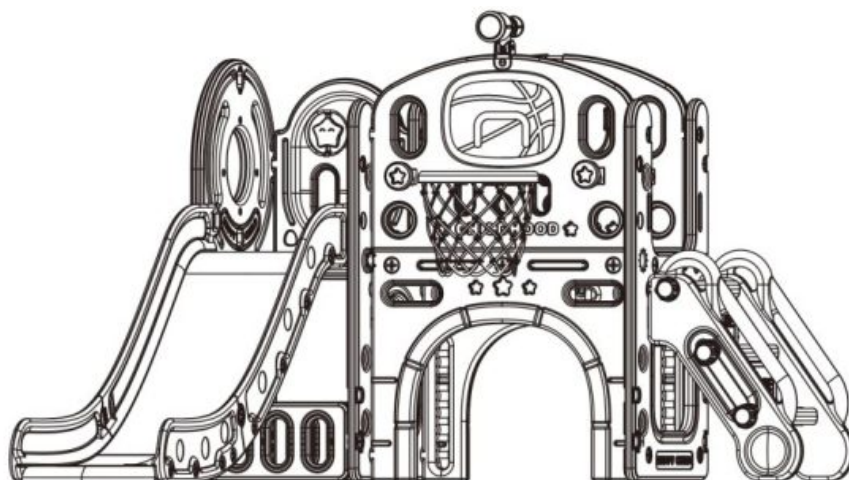

## Product Information

The Multiplay Tower & Slide is a fun and interactive outdoor playset designed for children

to enjoy hours of playtime. It features a tower structure with a slide for added excitement.

### **Specifications:**

- **Recommended Age:** 3-8 years
- **Material:** Durable plastic
- **Dimensions:** 5ft (height) x 3ft (width) x 4ft (length)
- **Weight Capacity:** Up to 100 lbs

### **Product Usage Instructions**

#### **Assembly:**

1. Ensure all parts are included in the package before starting assembly.
2. Follow the step-by-step assembly instructions provided in the manual.
3. An adult assembly is required for the safe setup of the playset.

#### **Safety Guidelines:**

- Adult supervision is recommended while children are using the playset.
- Ensure the playset is placed on a flat and stable surface to prevent tipping.
- Regularly inspect the playset for any signs of wear or damage and make necessary repairs.


## **SAFETY & WARNINGS**

### **ADULT ASSEMBLY REQUIRED**

- Keep these instructions for future reference.
- This product is intended for indoor, outdoor, family, and domestic use only.
- Place this product on level ground and at least 6.6' away from a fence, building, overhead branches, laundry lines or electrical wires. This product should be placed away from furniture that could cause injury if a fall occurs.
- Ensure the installation area is ventilated.
- Do not use the product if it is damaged or defective. If it is damaged or defective, please contact a qualified technician.

- Check that all parts are assembled well and are stable before use. Defective parts must be changed immediately as they can impair the function and the safety of the product.
- When temperatures fall below freezing (0°C/32°F), outdoor use of this product is not recommended. In extreme cold, plastic materials lose resilience and may become brittle and crack with impact. Store the product in a warmer, protected place.
- Keep away from fire or any source of ignition.
- Packing materials are not toys; keep them away from children.
- Instruct children on proper use of this product: only after properly assembled and installed, and not in a manner other than intended.
- Dress children appropriately: do not allow children to wear loose-fitting clothing including ponchos, scarves and garments with drawstrings. Well-fitting shoes must be worn at all times.
- Avoid placing equipment in direct sunlight, as hot surfaces could cause serious burns.
- Provide adult supervision at all times.


## PART LIST

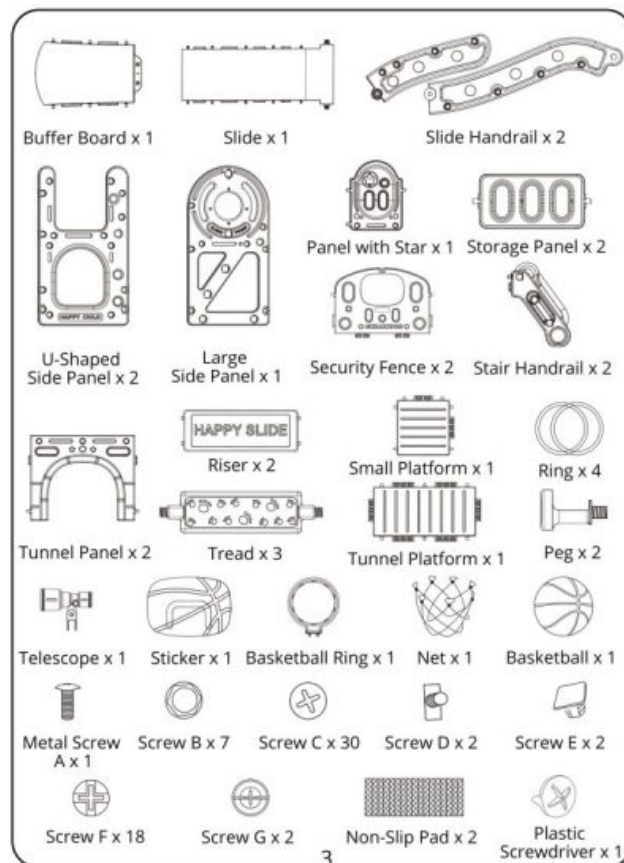

## ASSEMBLY


- **Step 1**

- Attach the Slide to the Buffer Board, and secure with Screw A on the back.
- Attach the Non-Slip Pads under the Slide for extra stability.

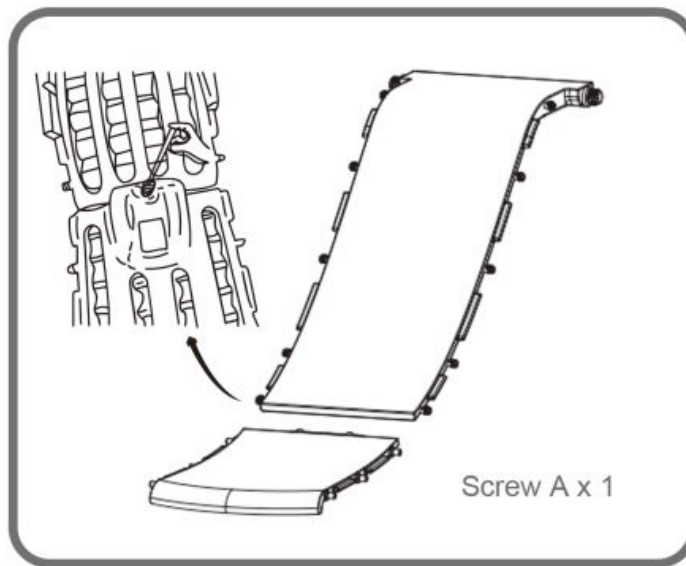


- **Step 2**

Connect the Handrails together with Long Square Screw D, and then attach the Long handrail to Slide, secure with 9pcs Screw F on each side, 18pcs Screw F intotal. Tighten with Plastic Screwdriver.

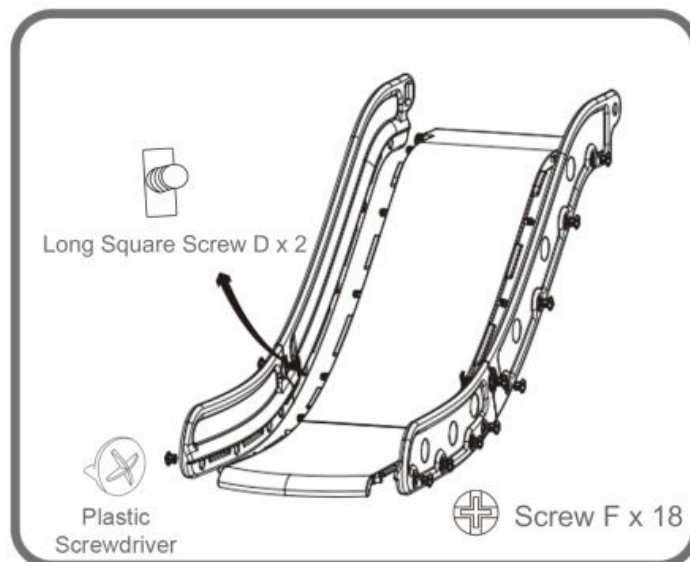


- **Step 3**

Connect the Small Platform with Panel with Star, secure with 2pcs Screw C.

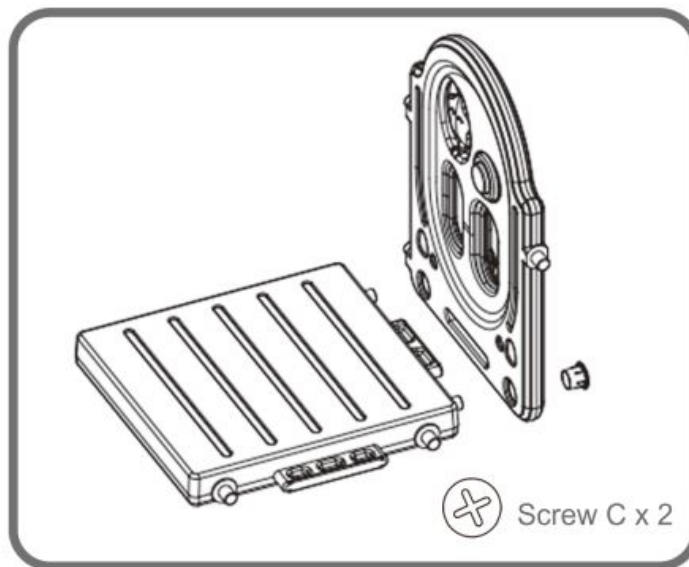


#### • Step 4

- Install the 2 Storage Panels at the bottom of Large Side Panel, secure with 2pcs Screw C.
- Then connect the small platform to the Large Side Panel, secure with 2pcs Screw C. Secure the Panel with Star with 1 pc Screw C.

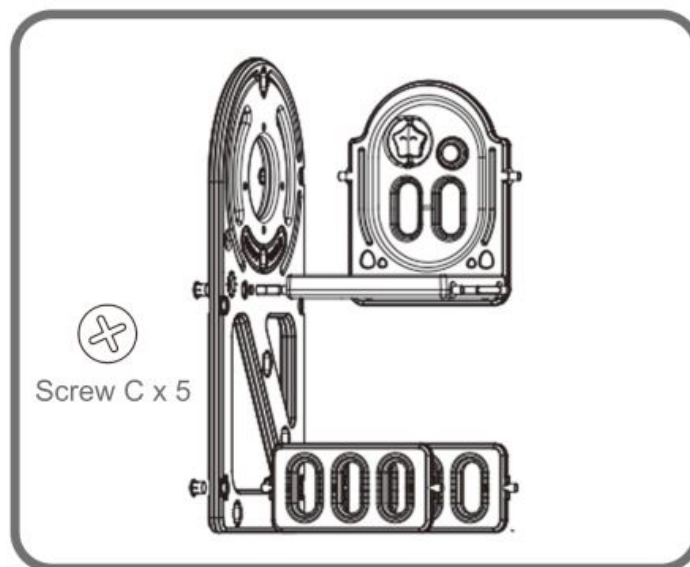


#### • Step 5

Connect the Slide section to the Platform, secure the Handrail to the Large Side Panel with 1 pc Square Screw E and 1 pc Screw C, secure the Slide to the Side Panel with 1 pc Screw G.

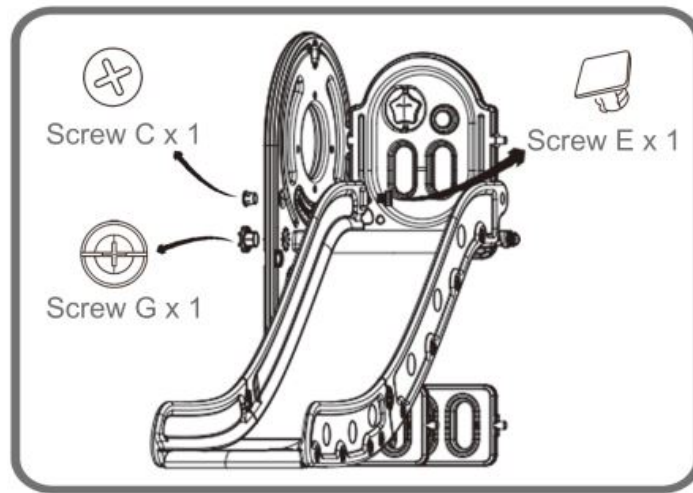


- **Step 6**

Attach the U-Shaped Panel, secure this side with 6pcs Screw C, 1 pc Screw G and 1 pc Square Screw E.

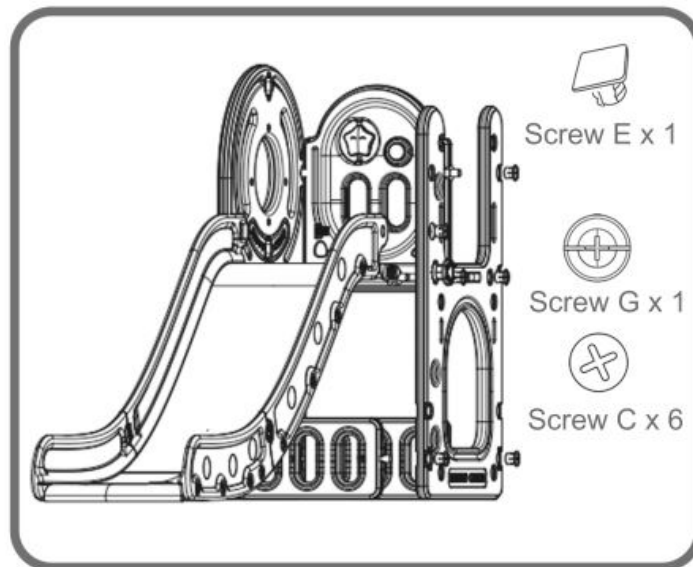


- **Step 7**

Connect the Tunnel Platform with 2 Tunnel Panels, secure with 6pcs Screw C.

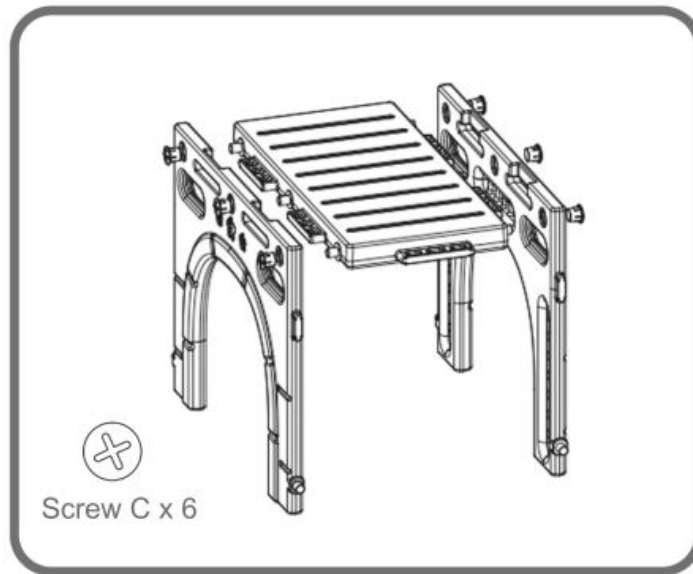


- **Step 8**

Install the 2 Security Fences on the Tunnel Panel.

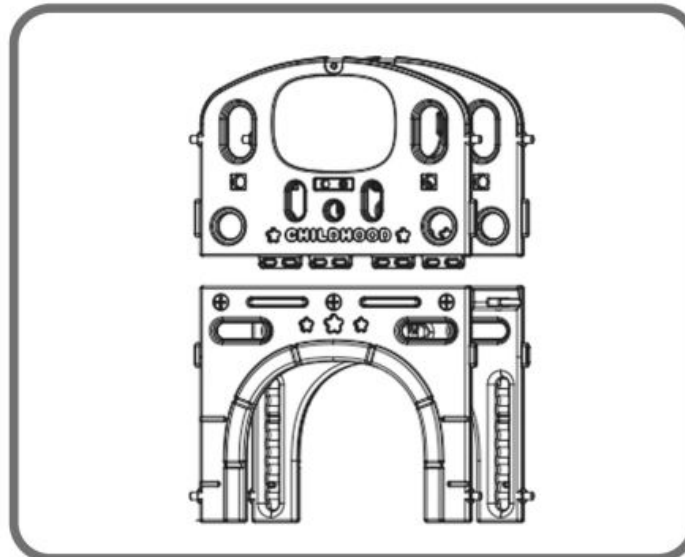


- **Step 9**

Connect the Slide section with Tunnel section, secure with 2pcs Screw C at the bottom, and 2pcs Screw C in the upper part.

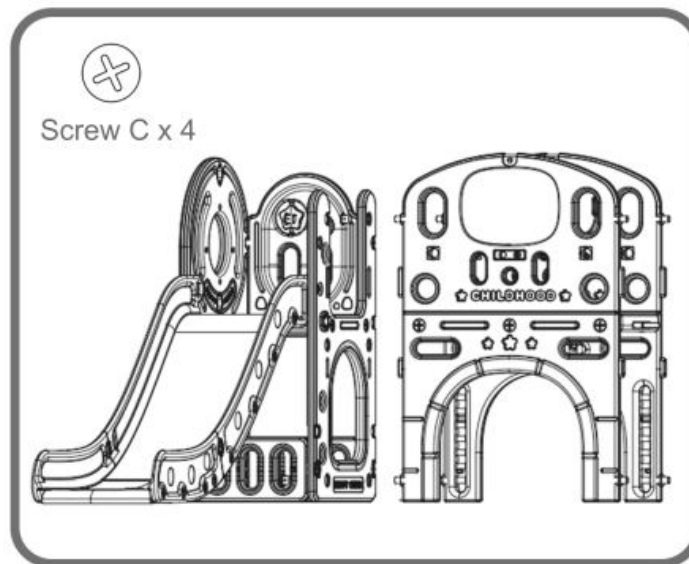

- **Step 10**


Combine the Tread, Riser and Stair Handrails, secure with 6pcs Screw B.

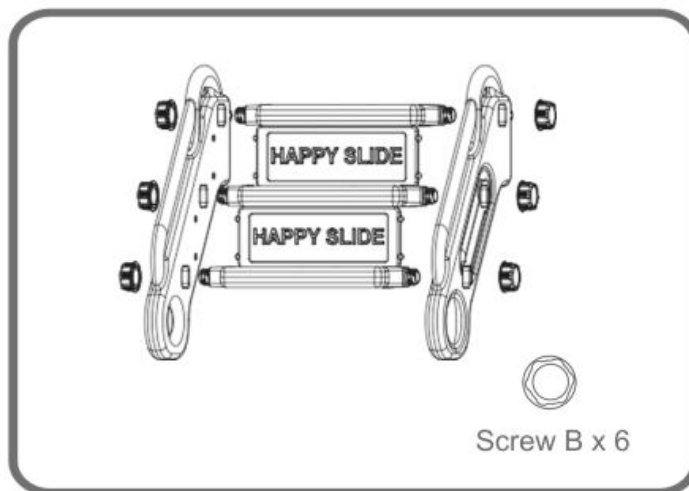

- **Step 11**


Insert the Stair set into the 2nd U-Shaped Side Panel as illustrated, secure with 2pcs Screw C.



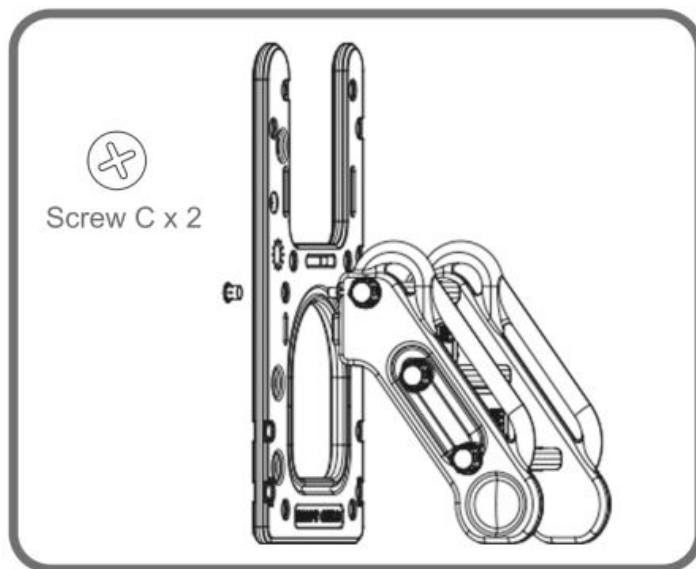

### • Step 12

- Attach the U-Shaped Side Panel to the tunnel section, secure with 4pcs Screw C.
- Install the Basketball Hoop, secure with 1 pc Screw B.
- Install the Telescope and Ring Toss Pegs.
- Put a Sticker on the Fence Panel as illustrated.

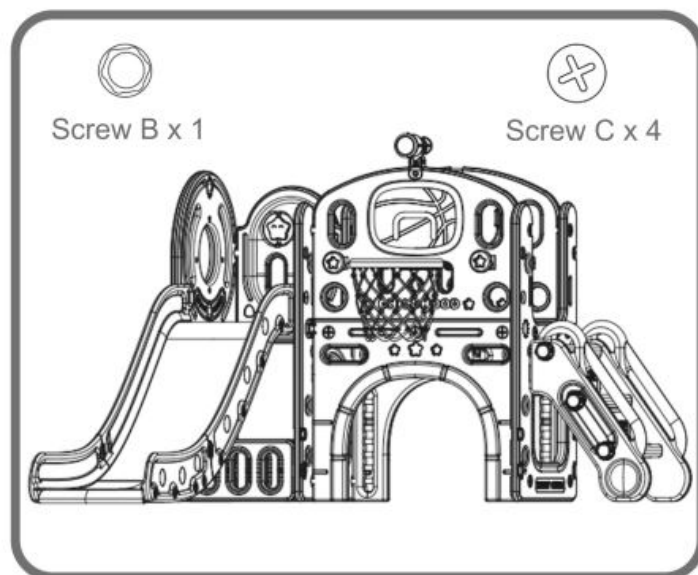


## FAQs

### What should I do if I encounter any issues with the assembly?

If you have trouble with assembly or find any missing or damaged parts, please contact the seller for assistance. Do not return the product to the retailer.

## Documents / Resources

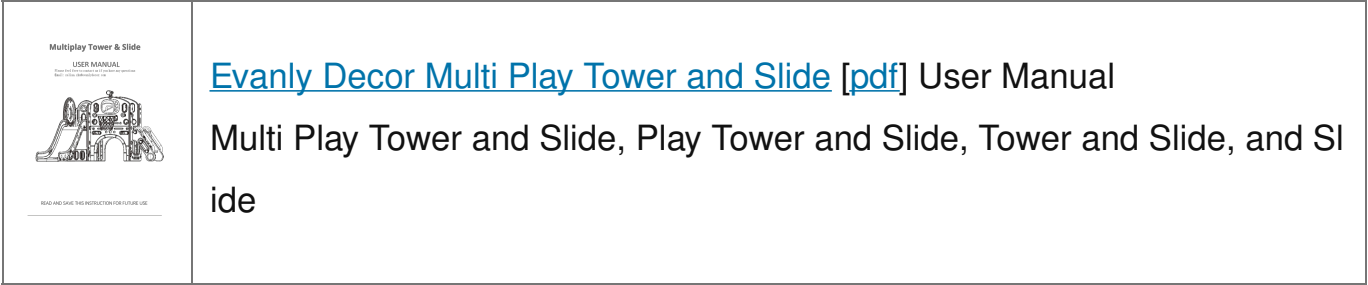

- User Manual

## Leave a comment

Comment \*

## Post Comment

## Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.