



EVELO LCD-SE Display Panel Owner's Manual

[Home](#) » [EVELO](#) » EVELO LCD-SE Display Panel Owner's Manual 

Contents

- [1 EVELO LCD-SE Display Panel](#)
- [2 Display and Keypad](#)
- [3 Using Your Bike](#)
- [4 Settings Menu](#)
- [5 Settings Menu](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



EVELO LCD-SE Display Panel



Display and Keypad



Using Your Bike

ON/OFF and Lights

Press the ON/OFF button to power on the bike. Press the ON/OFF button again to turn on the lights, and again to turn them off. Hold down the ON/OFF button for three seconds to turn the bike off.

Speedometer

The speed is shown in the middle of the screen. You can choose miles or kilometers in the settings menu.

Pedal Assist Level Selection

Press the + or – button to select your pedal assist level. You can choose from 0 to 5, with 0 being no assistance and 5 the most assistance.

Battery Indicator

The battery frame has five segments, each representing 20% of the battery's capacity. When the battery is full, the five battery segments are all lit. When the outside edge of the battery frame flashes it indicates that the battery is severely low and needs to be recharged immediately.

Riding Mode Selection

There are three modes for riding that can be selected using the SET button, including POWER STD and ECO. The default option is STD. You can adjust this setting on the display, but this function is not used on your bike. All modes will work the same.

Error Code Indicator

If there is something wrong with the electronic control system, the error code and error message will display in the top of screen.

Settings Menu

MENU	<< General Setup	<< General Setup
1.General Setup	1.1.Trip Clear N	⏴
2.Advanced Setup	1.2.Brightness 5	1.6.Battery 36V
3.Information	1.3.Speed Limit 99	1.7.Mode ECO
4.Save & Exit	1.4.Wheel Size 20	1.8.Exit
	1.5.Units KMH	
	⏵	

MENU	<< General Setup	<< General Setup
1.General Setup	1.1.Trip Clear N	⏴
2.Advanced Setup	1.2.Brightness 5	1.6.Battery 36V
3.Information	1.3.Speed Limit 99	1.7.Mode ECO
4.Save & Exit	1.4.Wheel Size 20	1.8.Exit
	1.5.Units KMH	
	⏵	

Hold the SET button for 2 seconds to enter the Settings menu, click + or – to select the item, then click SET again. When the color of the setting item turns green, then press + or – to select the desired parameter, and after the

parameters have been changed, click SET again. The color will turn white to indicate the change to the setting is complete.

Trip Clear

N means NO Y means YES Select “Y” and when you return to the main interface, you will find the Trip Odometer has been cleared.

Brightness

Adjust the brightness of your display panel

Settings Menu

Speed Limit

The max speed is 20 mph by default. When you reach that specified speed, assistance will be turned off. The limit can be raised as high as 25 mph, but you should check your local laws before doing so.

Wheel Size

Set your wheel size. It is set correctly from the factory. You can refer-ence the tire size printed on the tire or contact us for more information if needed.

Units: KPH and MPH

Select MPH or KMH for the speed and mileage.

Battery

You can set the battery’s voltage here. The bike will malfunction and the battery may possibly be damaged if you choose an incorrect voltage. It is set correctly from the factory; please contact us if you need to know the voltage of your bike.

Advance Setting

No changes are available.

Information

Lists the hardware and software version numbers.

Save & Exit

Click SET, the changes will be saved and the setting interface will close.

Auto Sleep After 5 Minutes

When the bike does not move for 5 minutes, it will power down automatically.

Questions? Get In Touch:

- 877-991-7272
- contact@evelo.com

Documents / Resources

	<p>EVELO LCD-SE Display Panel [pdf] Owner's Manual</p> <p>LCD-SE Display Panel</p>
--	--

References

- [🔧 Best Electric Bikes With 4-Year Warranty & At-Home Trial | EVELO](#)