




# EVER ADVANCED TR-21836 Side Unzip Wagon Stroller for 2 Kids Instruction Manual

[Home](#) » [EVER ADVANCED](#) » EVER ADVANCED TR-21836 Side Unzip Wagon Stroller for 2 Kids Instruction Manual 

## Contents

- 1 [EVER ADVANCED TR-21836 Side Unzip Wagon Stroller for 2 Kids](#)
- 2 [Product Usage Instructions](#)
- 3 [EA KIDS PARKVIEW STROLLER WAGON](#)
- 4 [Parts in the box](#)
- 5 [ASSEMBLY INSTRUCTIONS](#)
- 6 [Installation](#)
- 7 [SET UP AND USE](#)
- 8 [BRAKING SYSTEM](#)
- 9 [USE OF HARNESS](#)
- 10 [DISASSEMBLY INSTRUCTIONS](#)
- 11 [CARE AND MAINTENANCE](#)
- 12 [Documents / Resources](#)
  - 12.1 [References](#)
- 13 [Related Posts](#)



**EVER ADVANCED**

**EVER ADVANCED TR-21836 Side Unzip Wagon Stroller for 2 Kids**



### **Specifications:**

- Recommended age: 9 months+
- Maximum combined weight for two children: 110 lbs
- Each seat holds up to: 55 lbs
- UV50+ fabric canopy
- Adjustable push handle
- 3-Section telescopic pull handle
- 5-point harness on two sides of the wagon
- Rear basket bag
- Easy lock/unlock step
- Quick mount rear wheels
- Auto lock
- Removable rear axle with anti-shock system
- Zipper bag for storing canopy pole set
- Brakes and anti-shock system
- Bench function hook
- Cup holder
- Paper towel draw pocket
- Quick mount swiveling front wheels

### **Product Usage Instructions**

#### **Assembly Instructions:**

Unpacked product for assembly:

1. Remove all the parts from the packaging.
2. Ensure all the necessary parts are present.

#### **Installing rear axle:**

1. Locate the rear axle slot on the wagon frame.
2. Insert the rear axle into the slot until it clicks into place.

#### **Installing rear wheels:**

1. Take the rear wheels and align them with the rear axle.
2. Push the wheels onto the axle until they are securely attached.

#### **Installing front wheels:**

1. Take the front wheels and align them with the front wheel slots on the wagon frame.
2. Push the wheels into the slots until they click into place.

#### **Unfolding the product:**

1. Hold the handle and release the auto-lock mechanism.
2. Gently pull up on the handle until the wagon is fully unfolded.

#### **Adjusting the push and pull handle:**

1. To adjust the push handle height, locate the push handle adjustment button.
2. Press the button and slide the handle up or down to the desired height.
3. Release the button to lock the handle in place.

#### **Adjusting the rear basket bag:**

1. Locate the rear basket bag straps on the wagon frame.
2. Adjust the straps to tighten or loosen the bag as needed.

#### **Installing the canopy:**

1. Insert the canopy pole into the designated slot on the wagon frame.
2. Attach the fabric canopy to the pole using the provided fasteners.

#### **Folding and locking the product:**

1. Ensure all loose items are removed from the wagon.
2. Pull up on the auto lock mechanism to release it.
3. Gently push down on the handle while simultaneously folding the wagon until it locks in place.

#### **Set Up and Use:**

**WARNING:** Please read and follow all of these instructions to ensure the safety of your child. Keep these instructions for future use. Failure to follow these instructions could result in serious injury or death. The EA KIDS PARKVIEW STROLLER WAGON is recommended for children age 9 months and older. It is designed with a unique bench-style function and various features to make your ride more fun.

## **FAQ (Frequently Asked Questions):**

- Q: What is the maximum weight capacity for this stroller wagon?  
A: The maximum combined weight for two children is 110 lbs, with each seat holding up to 55 lbs.
- Q: Can the canopy be adjusted for shade?  
A: Yes, the fabric canopy has UV50+ protection and can be adjusted to provide shade.
- Q: Is the handle adjustable?  
A: Yes, the push handle has adjustable height settings to accommodate different users.
- Q: Are there safety features included?  
A: Yes, the stroller wagon is equipped with a 5-point harness on two sides, brakes, and an anti-shock system for added safety.
- Q: Can the wagon be folded for storage?  
A: Yes, the wagon can be folded and locked in place for easy storage and transport.

**READ ALL INSTRUCTIONS BEFORE ASSEMBLY AND USE OF PRODUCT. KEEP INSTRUCTIONS FOR FUTURE USE.**

The EVER ADVANCED Parkview stroller wagon is a new product that is for two kids to ride and has a unique bench-style function. It features two seats for children aged 9 months and the maximum combined weight for two children is 110LBS. Each seat holds up to 55 lbs. It is designed with an adjustable push handle, a telescopic pull handle, a 5-point harness, front and rear locking wheels, a canopy for shade, and much more. Various usage makes your ride more fun.

## **WARNING**

**PLEASE READ AND FOLLOW ALL OF THESE INSTRUCTIONS TO ENSURE THE SAFETY OF YOUR CHILD. KEEP THESE INSTRUCTIONS FOR FUTURE USE.**

**FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.**

- **IMPORTANT!** This wagon is recommended for children aged 9 months.
- **WARNING! CHOKING HAZARD.** Adult assembly is required because of small parts. Keep assembly parts out of reach of children under 3 years.
- **WARNING! NEVER** leave children unattended. **ALWAYS** keep children in view while in the product. **WARNING!** This wagon is suitable for use with one or two child occupants. The use of more than two children may cause an unstable condition which can injure your child. The maximum combined weight for two child occupants is 110 lbs. Each seat holds up to 55 lbs.
- **WARNING!** Check that the harness and all attachment devices are correctly engaged before use. Ensure your child is properly positioned and using the harness during use.
- **WARNING!** Ensure that all locking devices are engaged before use.
- **WARNING!** Check that the fabric is correctly engaged before use.
- **WARNING! DO NOT** use the product if any parts are missing or broken.
- **WARNING!** Children must remain seated, secured by a harness, and **ALWAYS** keep their arms and legs inside while riding.
- **WARNING! WARNING! ALWAYS** apply brakes when taking children in or out, always apply brakes when using the bench function, and never leave the child unattended.
- **WARNING!** Make sure all items in the wagon are properly secured and away from children to reduce the risk of injury.
- **WARNING!** To avoid injury, ensure that your child is kept away when unfolding and folding this product. There

are pinch points between the product supports and frame that may injure fingers. Stay clear of pinch points when opening or closing the product or when adjusting.

- WARNING! DO NOT allow the child to climb on, into, or out of the product unassisted. DO NOT allow child to jump on the seat.
- WARNING! This wagon is NOT A TOY! DO NOT let your child play in or around this product. WARNING! Load attached to the handle or sides will affect the stability of the wagon.
- WARNING! DO NOT hang items on the product at any time. The product may become unstable. WARNING! DO NOT sit on the top rail or canopy, this may cause serious injury.
- WARNING! The maximum weight capacity of the rear basket bag is 10.8 LBS, and the maximum weight capacity of the paper towel draw pocket and cup holder is 1.54 LBS/bag.
- WARNING! DO NOT place hot liquids in storage pockets. Spills can burn you or your child. Sharp or heavy objects placed in pockets may cause damage to the product or injury to the child
- WARNING! DO NOT make any alterations or modifications as this may cause instability or structural damage not covered under warranty or lead to injury. If a parcel bag other than one recommended by the manufacturer is used, the product may become unstable. DO NOT install mattresses or similar items in the wagon.
- WARNING! DO NOT use as a child car seat or to transport children in a motor vehicle.
- WARNING! DO NOT use the product on stairways, escalators, or moving walkways.
- WARNING! Use at a normal walking pace only; faster strolling can cause a loss of control and injury to the child.
- WARNING! DO NOT use the product while running or jogging, with bicycles or motor vehicles, or while skating or during other similar activities.
- WARNING! DO NOT park on elevated or sloped surfaces with children on board, even if the brakes have been locked. Use caution on uneven surfaces.
- WARNING! DO NOT use near open flames or other sources of heat. This product is flammable. WARNING! AVOID STRANGULATION: – DO NOT suspend strings or toys from the canopy.
  - DO NOT place product anywhere near cords from window blinds, draperies, phones, etc.
  - DO NOT place items with a string around your child's neck such as hood strings or pacifier cords.
  - If not properly secured, the child may slip into leg openings and strangle.

## **EA KIDS PARKVIEW STROLLER WAGON**



## Parts in the box



Rear wheels (x2)



Front wheels (x2)



Canopy set  
(fabric canopy and canopy pole set)



Locking rear axle

 


Assembly wagon

## ASSEMBLY INSTRUCTIONS



## Unpacked Product For Assembly

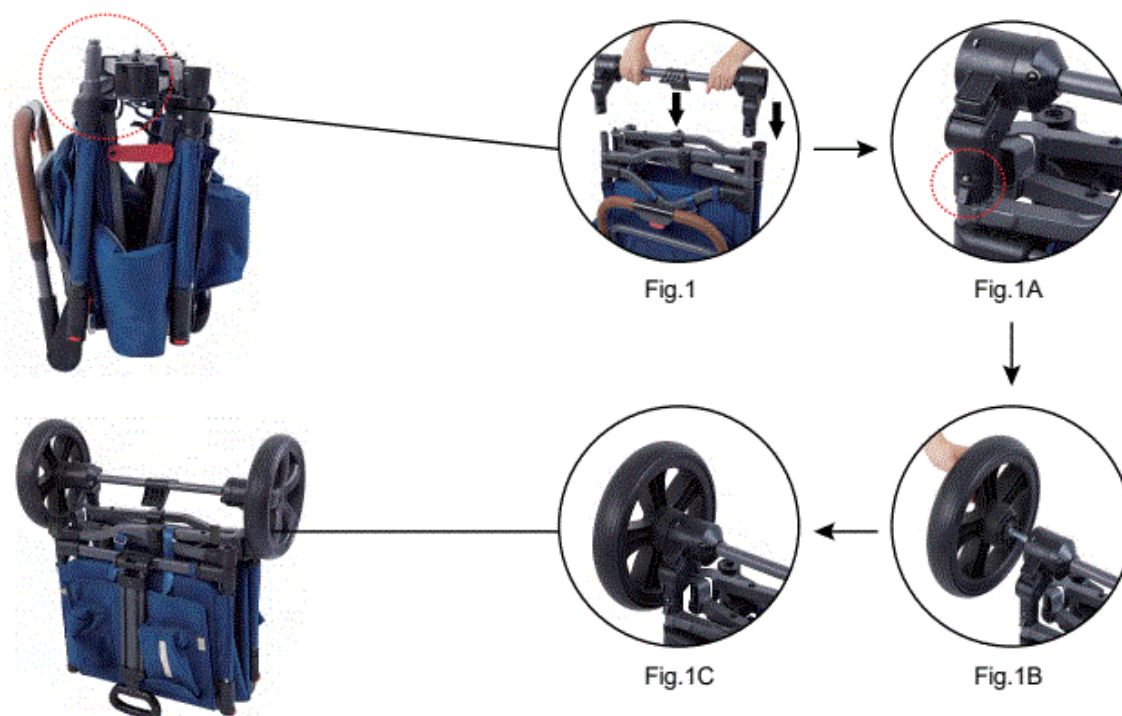

## Installation

### Installing rear axle

1. Position the rear axle on the kids' wagon frame with the pin facing outward as shown below. Fig.1
2. Make sure the position of the pin is aligned with the hole site. Fig.1
3. Push the axle assembly down on the frame as shown. Fig.1
4. The axle is shown properly locked to the kids' wagon frame. Fig.1A

### Installing rear wheels

1. Put the rear wheels' face toward the axle as shown. Fig.1B
2. Insert the wheels on the axle and make sure the wheels are secured. Fig.1C



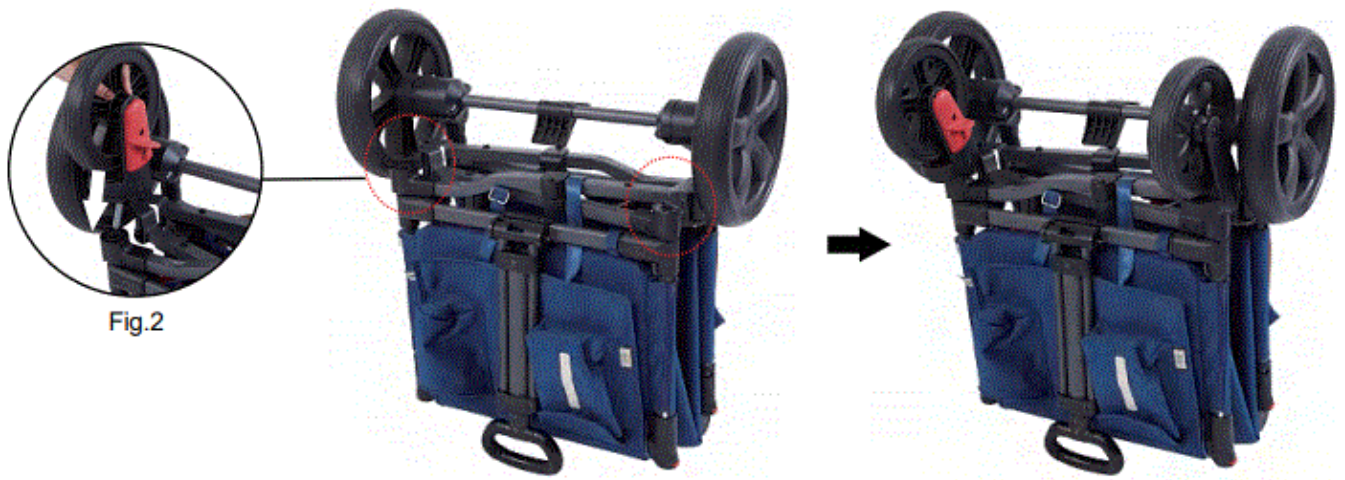 


Fig.2

## Installing front wheels

1. Put the front wheels face downwards as shown. Fig.2
2. Insert the wheel on the kid's wagon frame and make sure the front wheels are secured. Fig.2A

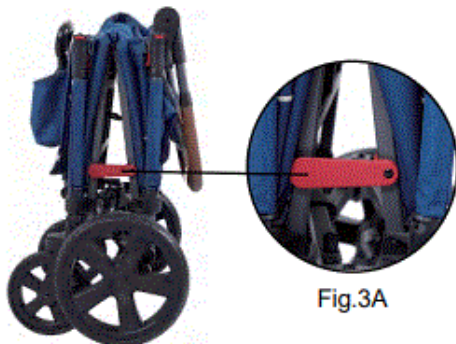 


Fig.3

Fig.3A

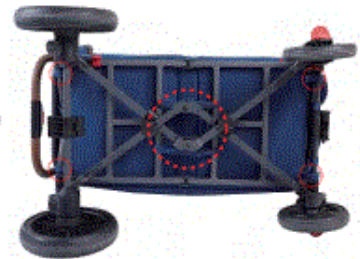 
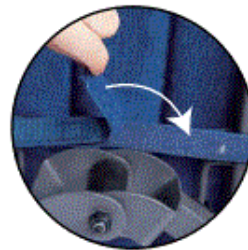 


Fig.3C

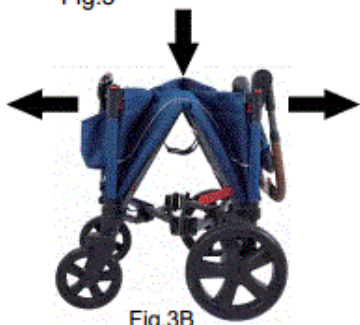 


Fig.3B



Fig.3D



Fig.3E

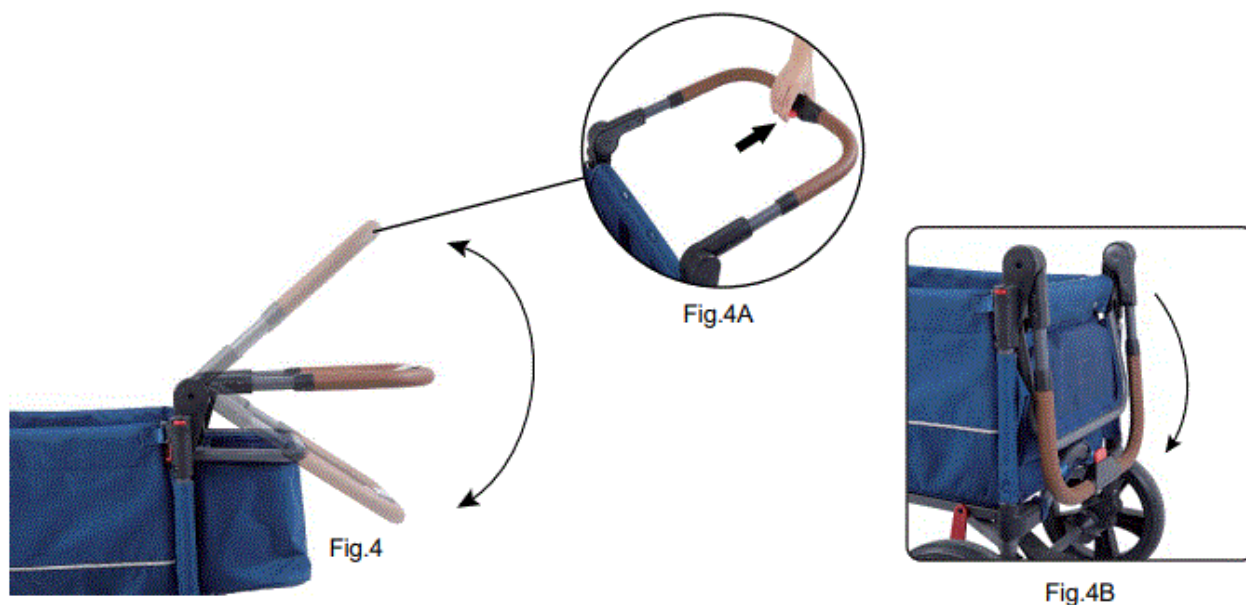 


Fig.3F

## Unfolding the product

 
1. Unlock the side auto lock. Fig.3 3A
2. Pull to the sides to open the product and unfold. Fig.3B
3. Put the kid's wagon side down, and make sure all the hook-and-loop closures are fastened. Fig.3C
4. Right the kid's wagon, ensure the zippers of the sleeve that wraps the four vertical frame tubes are closed. Fig.3D
5. Make sure the zipper on the side curtain is closed and the hook is locked as shown. Fig.3E
6. Press the middle of the wagon until the bottom seat is fully flat and the wagon fully opened. Fig.3F





### Adjusting the push handle

1. Push the red button on the center of the push handle to make adjustments. Fig.4 Fig.4A
2. When not using the push handle, press the red button continuously until the handle folds downward. Fig.4B

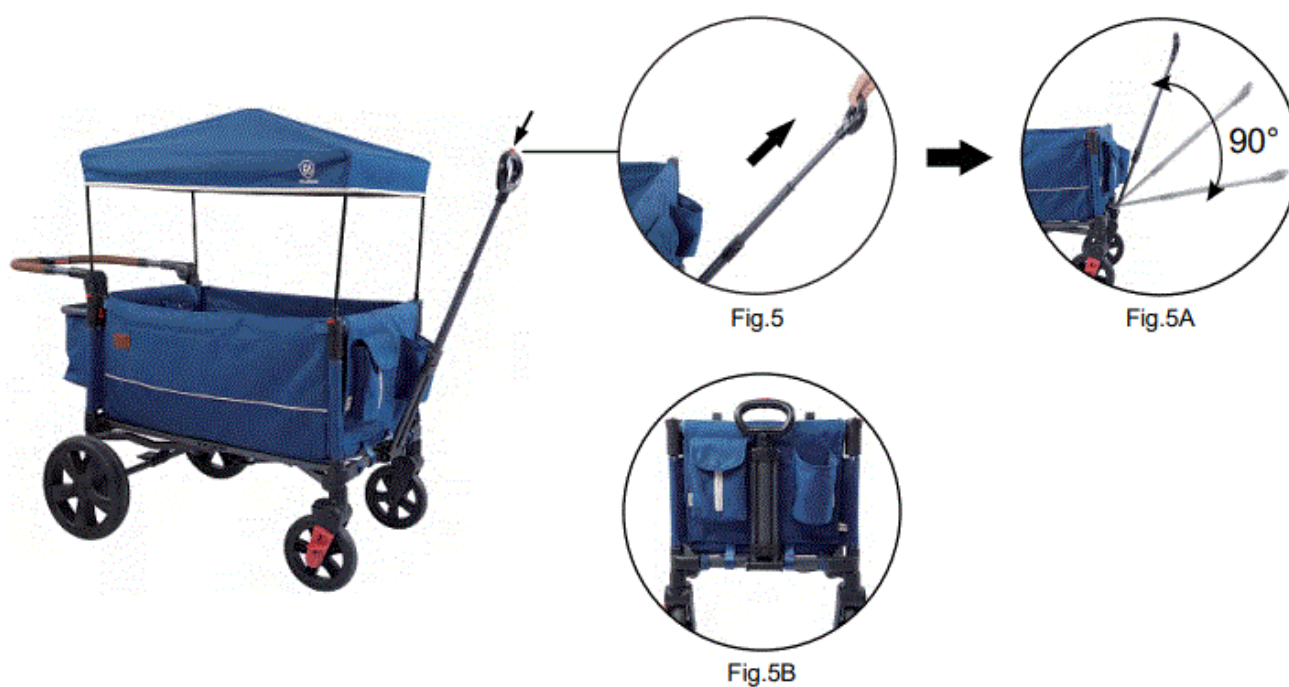

### Adjusting the pull handle

1. Press the red button on the “D” shape handle and pull out directly. Fig.5
2. In this range, the pull handle can be used and held at whatever position is best for your needs. Fig.5A
3. When not using the pull handle, press the red button on the “D” shape handle then push back until it is completely closed. Fold the pull handle toward the wagon vertically. Fig.5B



Fig.6



Fig.6A



Fig.6B



Fig.6C

### Adjusting the rear basket bag

1. Lift the basket tube to the horizontal position and the tube will automatically lock as shown. Fig.6
2. Undo the hook-and-loop closure inside the basket, and press the basket bottom to be flat. Fig.6A
3. Make sure the zipper on the basket is closed and the basket is fully opened. Fig.6B



Fig.7

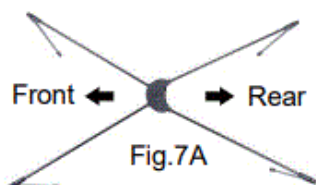 


Fig.7A

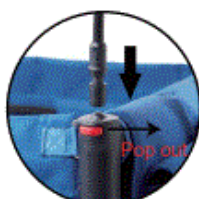 


Fig.7B

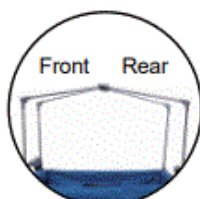 


Fig.7C

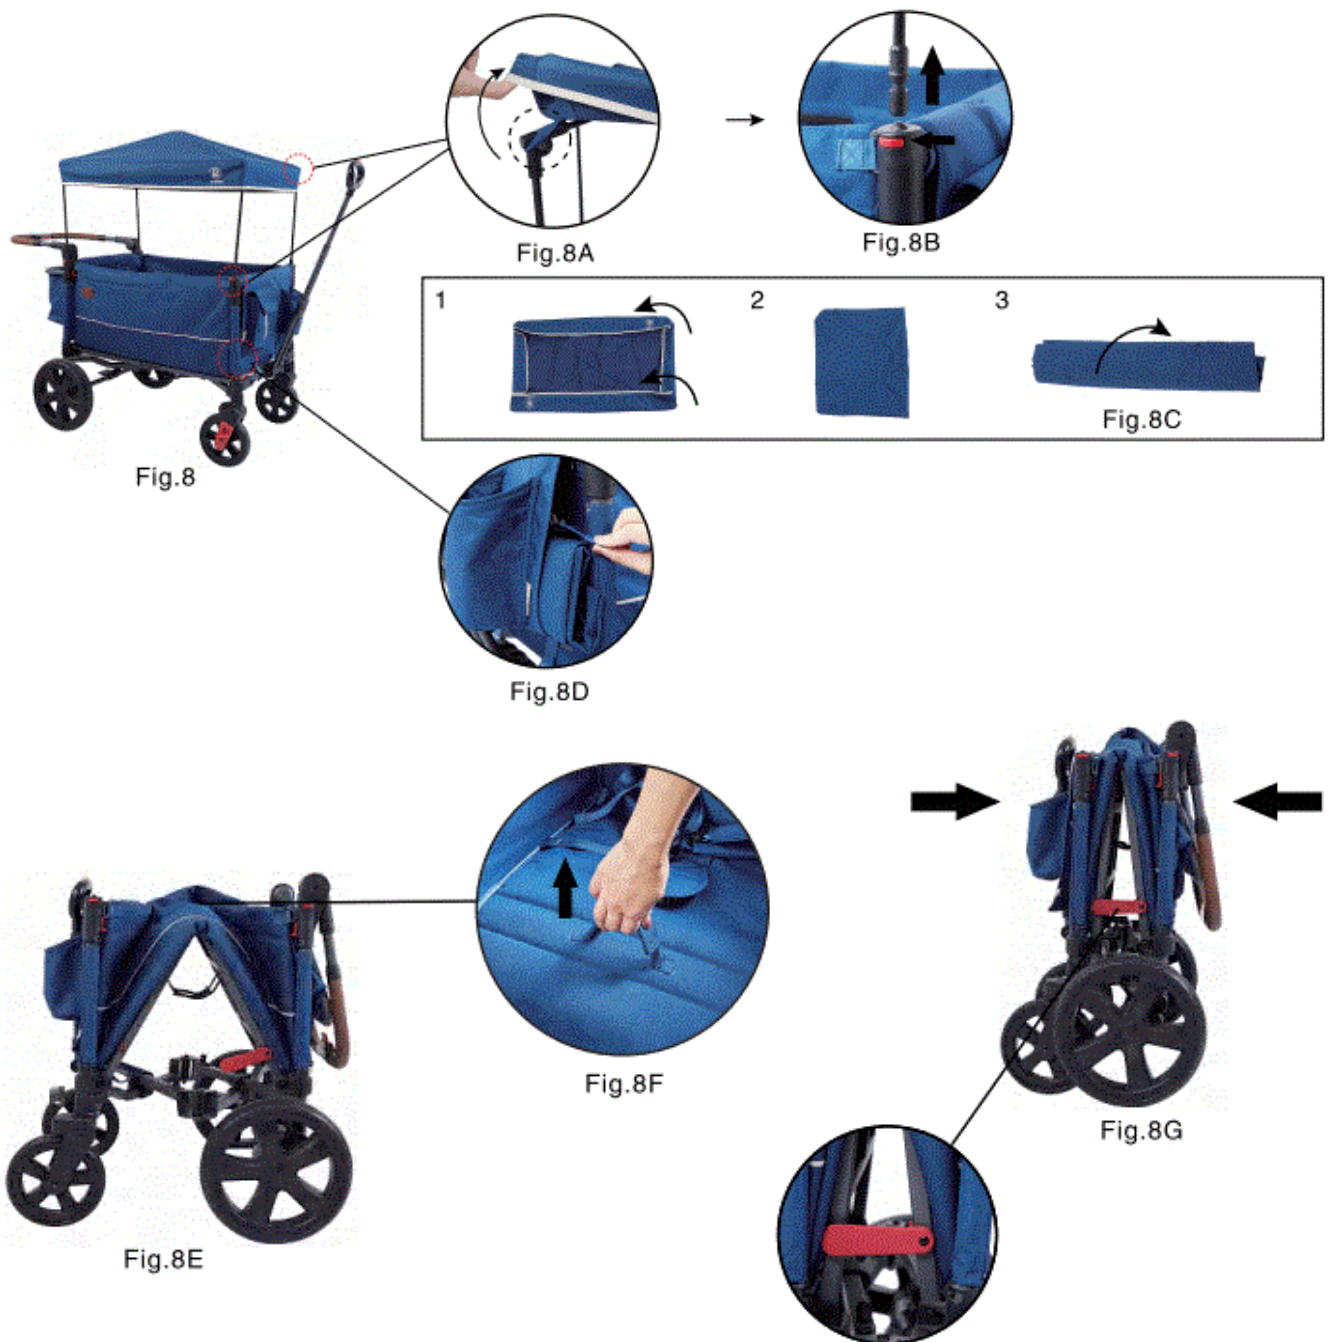 


Fig.7D

### Installing the canopy

1. Unfold the canopy support pole. Fig.7
2. Please make sure the hub is facing the direction as shown. Fig.7A
3. Using a small amount of force, insert the canopy support pole ends directly into the housing one by one. When firmly fixed in place, the red buttons will pop out. Once the buttons have popped out, that will ensure the four canopy support poles are firmly inserted. Fig.7B 7C
4. Put the canopy on the top, tie the inner elastic rope to the head of the plastic joints. Make sure all four corners

are fastened. Fig.7D



 
### Folding and locking the product

1. Take off the canopy fabric. Fig.8A
2. Press the red button then take out the canopy pole directly. Fig.8B
3. Put the canopy pole set on the canopy fabric, wrapped as shown. Fig.8C
4. Put the whole canopy set in the front zipper bag and zip it. Fig.8D
5. Press the red button on the push handle and adjust it to the "Not in use" position. Fig.8E (Fig.4B)
6. Press the red button on the pull handle then push back, and adjust it in the "Not in use" position. Fig.8E(Fig.5B)
7. To fold the kids wagon, pull up on the strap located at the interior center of the wagon. Fig.8F
8. Fold on both sides to lock. Fig.8G

### SET UP AND USE



**WARNING!** Always apply brakes when using the bench function!

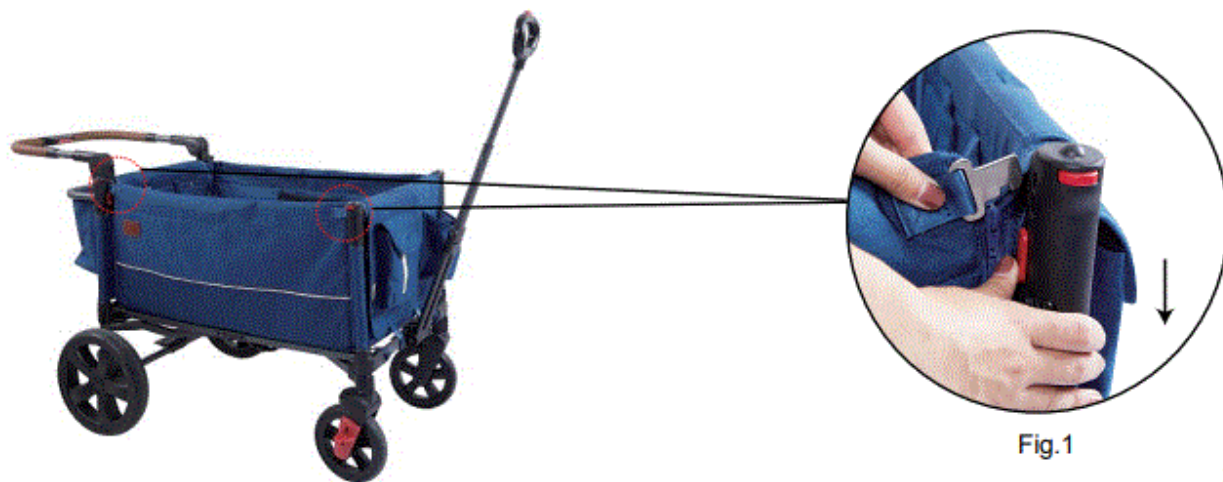

### Bench function

1. First, you must apply the brakes and make sure the front and rear wheels are both locked.
2. Press the red button as shown in the picture and move it down, the metal hook that holds it will loosen and you can take it out. Repeat steps on both sides. Fig. 1
3. Pull down the zipper on both sides, Fig.1A. Lay the side curtain flat on the wagon to avoid getting dirty. When the side is fully opened, this wagon changes to a “bench”. Fig.1B
4. The bench function could be used with a canopy on and off as the pictures show.

**Note:** To Change back to the full wagon version, just follow these steps in reverse.



Fig.1



Fig.1A



Fig.1B

### Use of pull handle

1. Please refer to “Adjusting the pull handle” on page 7.

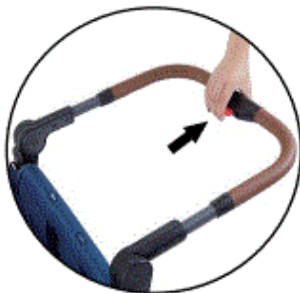 


Fig.2



Fig.2A



Fig.2B

### Use of push handle

1. Please refer to “Adjusting the push handle” on page 7.
2. Place both hands on the handle to maneuver.



Fig.3A



Fig.3B



Fig.3C



Fig.3D

### Use of the Front and Rear Bags

1. The photo shows the front bags. One cup holder bag, one paper towel draw pocket, and one zip bag for storing canopy set. Fig.3A
2. The rear basket bag is foldable. When not in use, fasten the hook-and-loop closure first, Fig.3B. Hold the tube, pull it out horizontally to unlock then fold it right away as shown.Fig.3C & 3D

### BRAKING SYSTEM

**WARNING!** Always apply brakes when taking children in or out.

- Always apply brakes when taking items in or out.

 


- Always apply brakes when not holding the handle or leaving the wagon unattended.



### Front-wheel brakes

1. To lock: Step downward on the side of the pedal of each wheel. Push down on the pedal with your foot as far as the pedal goes down to lock the wheels. The front wheels will not move. Fig.4 .
2. To unlock: Place your foot on the underside of pedal of the each wheel. Lift the pedal up with your foot as the pedal goes up. The front wheels will move. Fig.4A

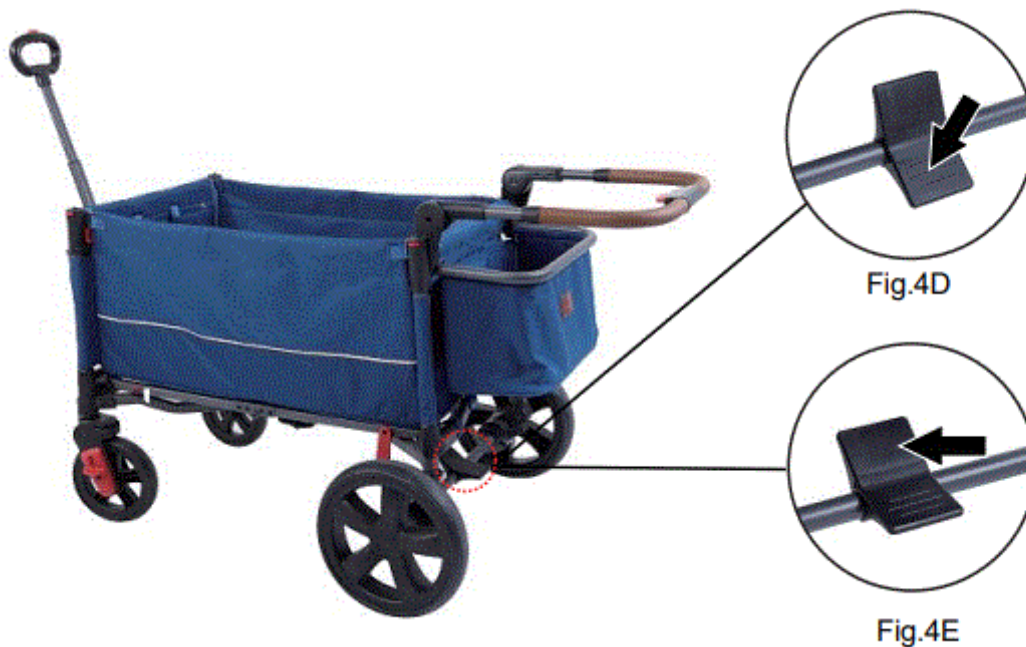

### Locking rear axle

1. To lock: Step downward on the top of the pedal as far as the pedal will go. Make sure the pedal is fully depressed and that the rear wheels will not move. Fig.4D
2. To unlock: Place your foot on the pedal and press forward fully. The rear wheels will move. Fig.4E

## USE OF HARNESS

**WARNING!** Before placing your child in or out of the wagon, make sure the brake pedals are pressed down completely.

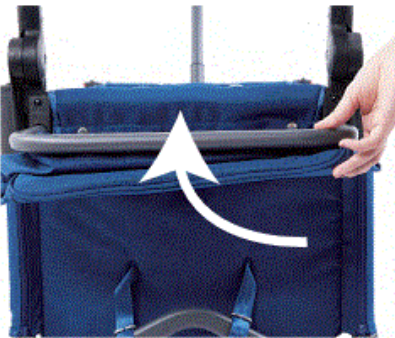 


Fig.1A



Fig.1B



Fig.1C



Fig.1D

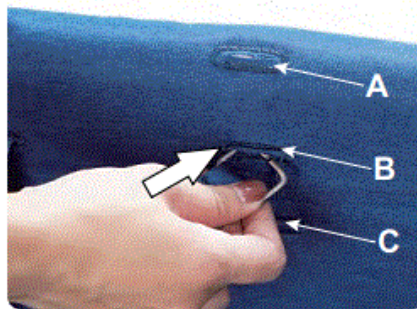 


Fig.1E



Fig.1F

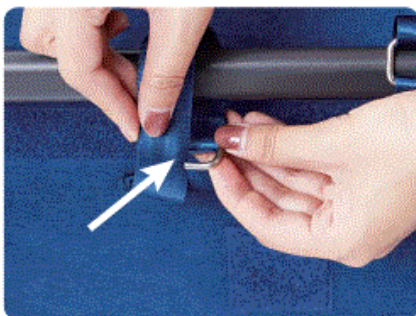 


Fig.1G

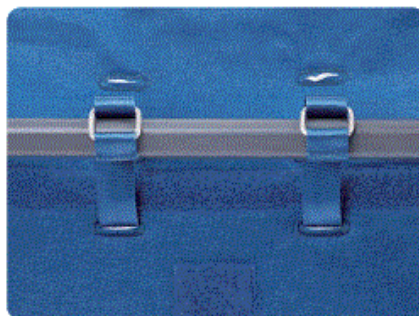 


Fig.1H



Fig.1I

### Changing shoulder harness anchor points

1. The shoulder harness straps can be adjusted to fit your child. Has three(3) positions A.B.C. Fig.1E
2. Before adjusting the straps, let your child sit on the seating area, and confirm which position fits your child best.  
For example: For a child height of 42" and weight of 45LBS, we suggest using position A.
3. To move shoulder harness straps to a lower/higher position, undo snaps and the hook-and-loop closure behind the front/rear pocket, Fig.1A 1B. unbuckle the harness straps, Fig.1C. pull the straps back through the fabric as shown. Fig.1D
4. Push shoulder harness straps through the anchor point slot, Fig.1E. undo snaps and hook-and-loop closure, Fig.1F. pull shoulder straps out then back, Fig.1G Wrap the bar then clip as shown. Fig.1H



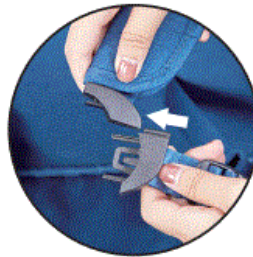
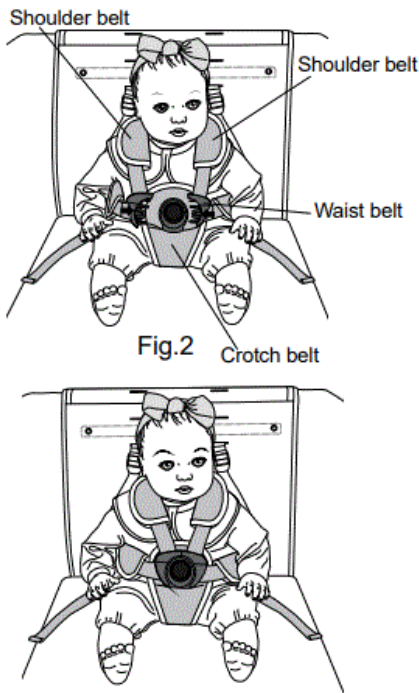 


Fig.2A

 

Fig.2B



Fig.2C



Fig.2D

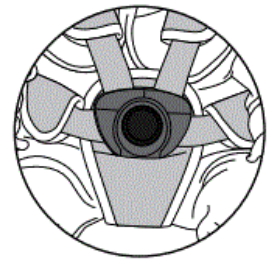 


Fig.2E

### Locking and unlocking the harness

1. Place your child in the wagon, Position the crotch belt between your child's legs. Fig.2
2. Pull the shoulder belt over the child's arm and shoulder, then pull the waist belt over the child's waist, and fit these two together as one large male buckle. Fig.2A 2B.
3. Fasten the large male buckle to the female buckle on the crotch belt making sure you hear a "click" on both sides. Fig.2C. Fig.2D.
4. Check to make sure the harness is securely attached. Fig.2E



Fig.3A



Fig.3B

### Unlock the harness

1. Press down on button to release the two fastening points. Fig.3A Fig.3B

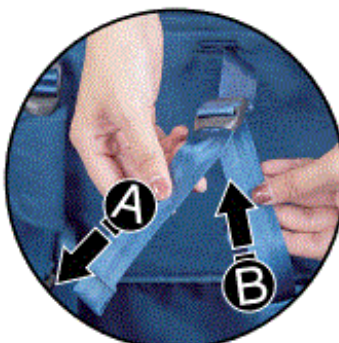 


Fig.4A

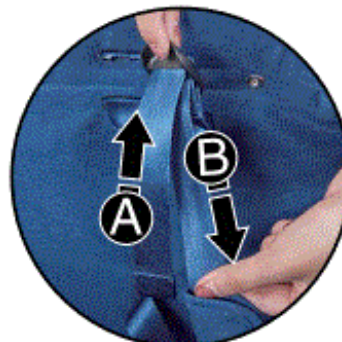 


Fig.4B

## Adjusting the length of the harness

1. Both shoulder and waist belts are adjustable.
2. Pull the free end of the straps (A) to tighten the harness. Fig.4A
3. Lift the black buckle as shown and pull the straps (B) to loosen the harness. Fig.4B

## DISASSEMBLY INSTRUCTIONS



Fig.1A

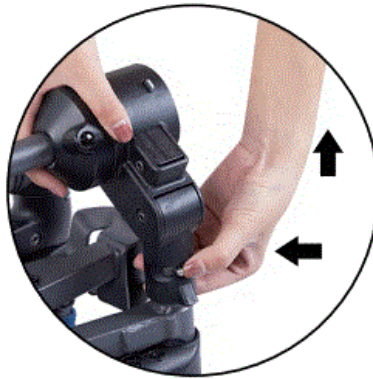 


Fig.1B



Fig.1C

## Remove wagon wheels

1. Remove rear wheels: Invert the wagon, Press the lock continuously as shown, then take the rear wheel off. Fig.1A
2. Remove the rear axle: press the pin on each side, and lift the rear axle up to remove it from the frame. Fig.1B
3. Remove front wheels: Press the lock continuously as shown, then take the front wheel off. Fig.1C



Fig.2

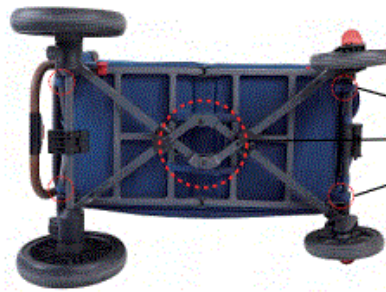
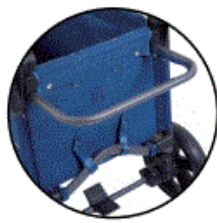 


Fig.2A

 

Fig.2B

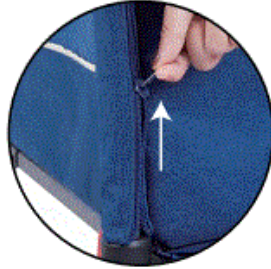 


Fig.2C



Fig.2D

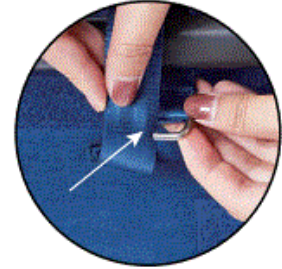 


Fig.2E



## Remove fabric

1. Unzip the zipper on the rear basket bag. Fig.2
2. Turn the wagon on its side, undo the underside hook, and loop straps from the frame. Fig.2A
3. Right the wagon, and release the metal hooks on the four corners as shown.Fig.2B
4. Unzip the zippers on the four vertical tubes Fig.2C
5. Remove shoulder harness straps and waist harness straps from the wagon frame.Fig.2D

**Note:** Installing fabric just follow these steps in reverse.

## CARE AND MAINTENANCE

### Frame and fabric care

1. Avoid prolonged exposure to direct sunlight as this may cause materials and fabric to fade.
2. Periodically wipe down plastic parts. Always dry any metallic parts to prevent it from getting rusty.
3. Regularly check the condition of the wheels.
4. Do not fold or store the kid's wagon if the frame or fabric is wet. Do not store kids' wagons in a damp environment.
5. Use a mild household soap with cold water.






- Wash by hand in cold water
- Do not bleach
- Dry Flat
- Do not iron
- Do not dry-clean

---

## Documents / Resources

	<p><a href="#">EVER ADVANCED TR-21836 Side Unzip Wagon Stroller for 2 Kids</a> [pdf] Instruction Manual TR-21836-GY, TR-21836, TR-21836 Side Unzip Wagon Stroller for 2 Kids, Side Unzip Wagon Stroller for 2 Kids, Unzip Wagon Stroller for 2 Kids, Wagon Stroller for 2 Kids, Stroller for 2 Kids, 2 Kids</p>
---	---

## References

- [User Manual](#)

### Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.