



EVERDURE ED9QW Oscillating Desk Fan Instruction Manual

[Home](#) » [everdure](#) » EVERDURE ED9QW Oscillating Desk Fan Instruction Manual 

EVERDURE ED9QW Oscillating Desk Fan Instruction Manual



Contents

- [1 Important Safety Instructions](#)
- [2 Product Description](#)
- [3 Operation](#)
- [4 Cleaning and Maintenance](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Important Safety Instructions

Read the safety precautions of this booklet carefully before attempting to assemble, install, operate, or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and/or property damage. If you are unsure about anything regarding your fan or these instructions, please contact Everdure by email at sales@shrirousa.com before operating your appliance

1. Read all instructions carefully before using the fan.
2. Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons. Do not modify this appliance. Do not try to repair this appliance – there are no user serviceable parts within.
3. Remove the packaging and ensure that the appliance is undamaged (keep packing box for later storage). In case of doubt do not use the appliance and contact Everdure Service. Do not let children play with any parts of the packaging.
4. Before you use the appliance, check if the voltage marked on the rating label corresponds to the mains in your home.
5. Do not use this appliance with a programmer, timer or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
6. Do not pull the power cord to disconnect with the power source. Always grasp the plug to pull it out..
7. Do not run power cords under rugs, curtains, or other combustible materials. Do not place power cords in areas where they can be a tripping hazard. Do not operate directly below a power outlet.
8. Do not insert any objects into the appliance as it may cause an electric shock or fire or damage to the appliance. Do not block or tamper with the appliance in any manner while it is in operation. To prevent a possible fire, do not cover the appliance in any manner. Do not place on soft surfaces, like a bed, where openings may become blocked.
9. Do not leave the appliance unattended. Always unplug the appliance when not in use. Take care that it is not obstructed when oscillating.
10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of
WARNING: The Function Switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the appliance.
11. The appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
12. Keep materials such as hair, net curtains, tablecloths & clothes away from the openings of the fan, as material may be sucked into the appliance causing injury or damage to property or the appliance.
13. The appliance has hot and arcing or sparking parts inside. It must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden, corrosive, salty or wet atmospheres. This appliance is intended for general indoor domestic use ONLY.
14. This appliance is not intended for use in a bathroom. Never locate it where it may fall into a bathtub or other water container.
15. Always place the appliance on flat, stable surfaces before use. Always place the appliance vertically on its base.
16. Use only on GFCI protected socket while operating outdoors

NOTE: Over time, the grills at the front and rear of the appliance will build up dust & dirt. This should be cleaned regularly to maintain optimum efficiency. Follow the cleaning procedure within this instruction.


To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer, its Service Agent, or similarly qualified persons in order to avoid a hazard.

In order to avoid overheating, do not cover the appliance.

Do not use the appliance in the immediate surrounding of a bath, shower or swimming pool.

To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.

Product Description

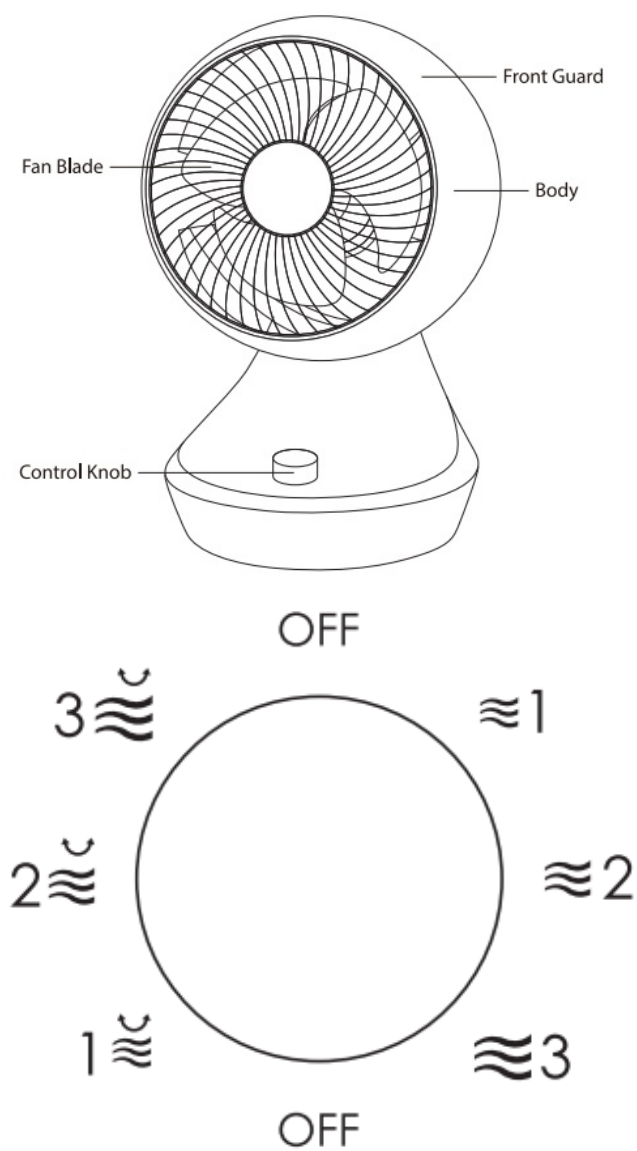

| | |
|-----------------|---------|
| MODEL: | ED9QW |
| Rated Voltage: | 120 Vac |
| Rated Frequency | 60 Hz |
| Rated Frequency | 30 W |

Operation

- Connect the plug into power supply socket and switch on the power.
- Switch on the fan by turning the speed control knob for Low, Medium, High settings.
- Turn the control knob to oscillation function for swing to left and right.
- The fan position can be manually adjusted for up and down vertically.
- To stop the fan, turn the control to OFF position.

Cleaning and Maintenance

- Always unplug the product from the wall socket prior to cleaning.
- Do not use abrasive sponge, scouring pads or stiff brush to clean the appliance.
- Please be cautious when cleaning the product near to the motor housing area.
- Occasionally wipe the exterior surfaces with a damp cloth.
- In an unlikely event of the appliance malfunctioning, it should be taken to the nearest authorized service center.
- Do not allow the motor or other electrical components to be exposed to water.
- For proper storage, always place the fan in a low humidity environment.

Cleaning the Fan Blade


- Firstly, loosen the three screws which are on the rear cover then remove the front guard by turning anti-clockwise.
- To remove the fan blade for clean up by rotate the blade knob clockwise.
- Dry thoroughly before re-assemble

It is important that you retain these instructions, proof of purchase as well as other important documents about this product for future reference. Due to continual product development, Everdure reserves the right to alter specifications or appearances without notice.

Dispose of packaging responsibly – recycle where facilities are available.

SHRIRO USA INC. Incorporation Number 7164875
25541 Arctic Ocean Drive
Lake Forest, CA 92630 USA
Tel (Toll Free): +1 877 794 2622
Email: sales@shrirusa.com
Website: www.everdure.com

EVERDURE

| | |
|--|--|
|  The image shows the front cover of the instruction manual for the Everdure ED9QW Oscillating Desk Fan. At the top, it says 'READ AND SAVE THESE INSTRUCTIONS'. Below that is the 'EVERDURE' brand name. In the center is a line drawing of the desk fan, which has a circular head on a swivel base. Below the drawing, it says 'OPERATION, MAINTENANCE AND SAFETY INSTRUCTIONS'. At the bottom, the model number 'ED9QW' is printed. | <p>EVERDURE ED9QW Oscillating Desk Fan [pdf] Instruction Manual ED9QW Oscillating Desk Fan, ED9QW, Oscillating Desk Fan, Desk Fan, Fan</p> |
|--|--|

References

- E. [Everdure USA](#)
- [User Manual](#)