



Home » EVERINT » EVERINT RFID-PBA1 UHF RFID Reader Module User Manual 172





User's Manual

RFID-PBA1

Ver. 1.00


Copyright © 2025 by EVERINT, all rights reserved.

Contents [hide]

- 1 Overview
- 2 Composition
- 3 Operation Description
- 4 Specifications
- 5 FCC Statement
- 6 Documents / Resources
 - 6.1 References

Overview

Composition

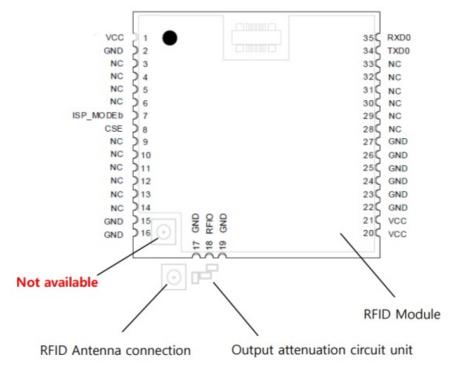


Module Pin Details

Pin No	Pin name	Description
1	VCC	DC Power
2	GND	Ground
3	NC	Not Connection
4	NC	Not Connection
5	NC	Not Connection
6	NC	Not Connection
7	ISP_MODEb	Mode settings
8	CSE	Chip select enable
9	NC	Not Connection

10	NC	Not Connection
11	NC	Not Connection
12	NC	Not Connection
13	NC	Not Connection
14	NC	Not Connection
15	GND	Ground
16	GND	Ground
17	GND	Ground
18	RF IO	Rx Input / Tx Output
19	GND	Ground
20	VCC	DC Power
21	VCC	DC Power
22	GND	Ground
23	GND	Ground
24	GND	Ground
25	GND	Ground
26	GND	Ground
27	GND	Ground
28	NC	Not Connection
29	NC	Not Connection
30	NC	Not Connection

31	NC	Not Connection
32	NC	Not Connection
33	NC	Not Connection
34	TXD0	UART Output
35	RXD0	UART Input

Operation Description

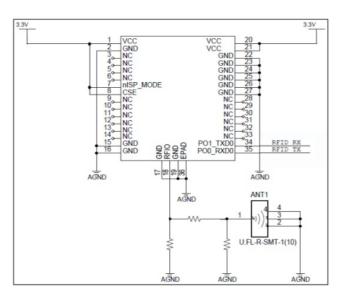

< Application Circuit >

ANT1 Info

- Model part No.: U.FL-R-SMT-1

- Connector type: Coaxial Micro-Receptacle


- Manufacturer: HIROSE

3-1 Power Supply

3.3V DC power is supply to the VCC (Pin1, 20, 21).

3-2 Interface

The serial interface is assigned with two pins. RXD0 assigned to Pin35 is the pin for receiving commands from the host, and TXD0 assigned to Pin34 is the pin for transmitting responses from the host. Pin connection is shown as below figure.

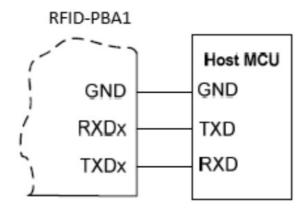

3-3 RF IO

The RF I/O assigned to Pin18 is optimized at 50ohm impedance.

3-4 CSE (Chip select enable)

CSE assigned to Pin8 is '1': Operation / '0': Not Operation

3-5 Mode settings

ISP_MODEb assigned to Pin7 is set to logic '1'. (Use pull-up resistor)

Specifications

No.	Item	Unit	Specification		
			Min	Тур.	Max
1	Frequency Range	MHz	903.		927.
2	Operating Temperature	°C	-20		70
3	Operating Humidity	%	0		90
4	DC Power	V	3.		4.
5	Host Interface		UART (Tx, Rx)		
6	RF Output	dBm			23
7	RF 10 Impedance	ohm		50	

• FCC ID: 2AKMF-RFID-PBA1

• IC: 22266- RFID-PBA1

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Caution

- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- A minimum separation distance of 20 cm must be maintained between the antenna and any person to satisfy RF exposure requirements.

Radio Frequency Interference

This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

OEM Integration Requirements

General Conditions

This device is intended only for OEM integrators under the following conditions:

- The module must be installed such that a minimum separation distance of 20 cm is maintained between the radiator (antenna) and all persons.
- The module is limited to installation in mobile or fixed applications.

- The transmitter module must not be co-located or operating in conjunction with any other antenna or transmitter, except in accordance with FCC multi-transmitter product procedures.
- The module must only be used with the included onboard antenna or antennas
 approved by the manufacturer (EVERINT CO., LTD.). Use of unauthorized antennas is
 strictly prohibited.
- Ensure that the power supply to the module is clean, regulated 3.3V DC.
- Use appropriate decoupling capacitors near the VCC pins to minimize noise.

Installation and End-User Manual

- The OEM integrator is responsible for ensuring that the end-user manual does not contain instructions on how to install or remove the RF module.
- The OEM integrator must include the required FCC statements (per Part 15.19 and 15.21) in the user manual of the host device.
- The user manual for the host product must clearly indicate the operating requirements and conditions to ensure compliance with current FCC RF exposure guidelines.

Labeling Requirements

Module Labeling

The module is labeled with its own FCC ID. If the FCC ID is not visible when the module is installed inside another device, the outside of the device must also display a label referring to the enclosed module:

Example:

"Contains FCC ID: 2AKMF-RFID-PBA1 or "Contains Transmitter Module FCC ID: 2AKMF-RFIDPBA1" End Product Labeling To satisfy FCC exterior labeling requirements, the final product must include the above statement in a visible location.

Additional Compliance

- As long as the above conditions are met, further transmitter testing will not be required.
- However, the OEM integrator is still responsible for testing the final product for any additional compliance requirements (e.g., digital device emissions under Part 15B).
- If the module is used in configurations not covered by the original certification (e.g.,

portable use, different antennas), separate FCC authorization is required.

Power Supply Requirements for FCC/IC Compliance

- This module has to install the input the 3.3V, cause there is no regulator in the device.
- The host system must ensure that a regulated 3.3V DC is supplied to the module.
- Since the module lacks an onboard voltage regulator, the responsibility for voltage regulation lies entirely with the host system.

This device may only operate using an antenna of a type and maximum (or lesser) gain approved by (EVERINT CO., LTD.). Antenna types not included in the list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this transmitter.

Note

No.	Antenna model	Peak gain	Туре
1	KSA-920MS4510A	-35.44dBi	PCB Antenna
2	KSA-875MS1008A	-8.68dBi	PCB Antenna

Canada IC approval statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Revision History

Ver.	Date	Page	Description
1	6/23/2025	_	New



Documents / Resources



EVERINT RFID-PBA1 UHF RFID Reader Module [pdf] User Manual RFID-PBA1, RFID-PBA1 UHF RFID Reader Module, UHF RFID Reader Module, RFID Reader Module

References

- User Manual
- **EVERINT**

Website

► EVERINT, Reader Module, RFID Reader Module, RFID-PBA1, RFID-PBA1 UHF RFID Reader Module, UHF RFID Reader Module

Leave a comment

Your email address will not be published. Required fields are marked*

Comment*

Name

Email

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.