

EVERSTEIN SFS1024 LED Thermostatic Dual Function Shower Head System Installation Guide

Home » EVERSTEIN » EVERSTEIN SFS1024 LED Thermostatic Dual Function Shower Head System Installation Guide [™]

Contents

- 1 EVERSTEIN SFS1024 LED Thermostatic Dual Function Shower Head System
- 2 Installation and maintenance matters
- **3 TOOLS NEEDED**
- **4 Accessories List**
- 5 Essential dimensions & wapipelineline
- 6 Piping Instructions Before Tiling
- 7 Main Body Valve Installation
- **8 LED Touch Remote Instruction**
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**



EVERSTEIN SFS1024 LED Thermostatic Dual Function Shower Head System



IMPORTANT NOTICE

Ensure the pipes are clear and flush or blow out debris before installation to prevent blockages.

- Please read this manual carefully before installation.
- For installation videos, please scan the QR code on the instruction manual.



- Ensure all parts are included before starting the assembly.
- For replacement parts, please contact us using the contact information in the footer.

Installation and maintenance matters

1. Check the accessories list to verify that all parts are complete in this package.



- 2. Do not disassemble the main body by yourself.
- 3. Connect inlet pipes to supply valves.
- 4. Make sure inlet pipes and supply valves have no impurities and are cleaned, with no impurities in the pipeline.



- 5. After installation, check all joints for leakages.
- 6. Do not leave the rain shower system exposed to a severely corrosive environment.



Do's


- 1. To keep the mixer surface bright, please clean the mixer regularly.
- 2. Rinse the faucet with clean water and wipe it with a soft cotton cloth.
- 3. Use one of the following cleaners to remove dirt from the surface: a Mild liquid cleaner.b. Colorless glass cleaner and powder cleaner that do not cause abrasion and can be dissolved completely.c. Polish liquid that does not cause abrasion.



Don'ts


- 1. Avoid using cleaning powder, harsh cleaning chemicals, brushes, and coarse cloth to prevent scratching and friction
- 2. Do not use acid cleaners to clean the faucet,s they may cause surface corrosion of the faucet. If the faucet is exposed to harmful acid substances, please rinse it immediately with water.


TOOLS NEEDED

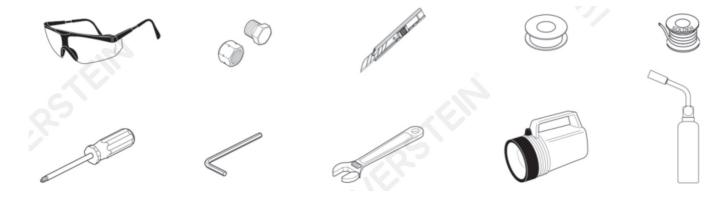

Function Luxury Thermostatic Shower Faucet

Accessories List

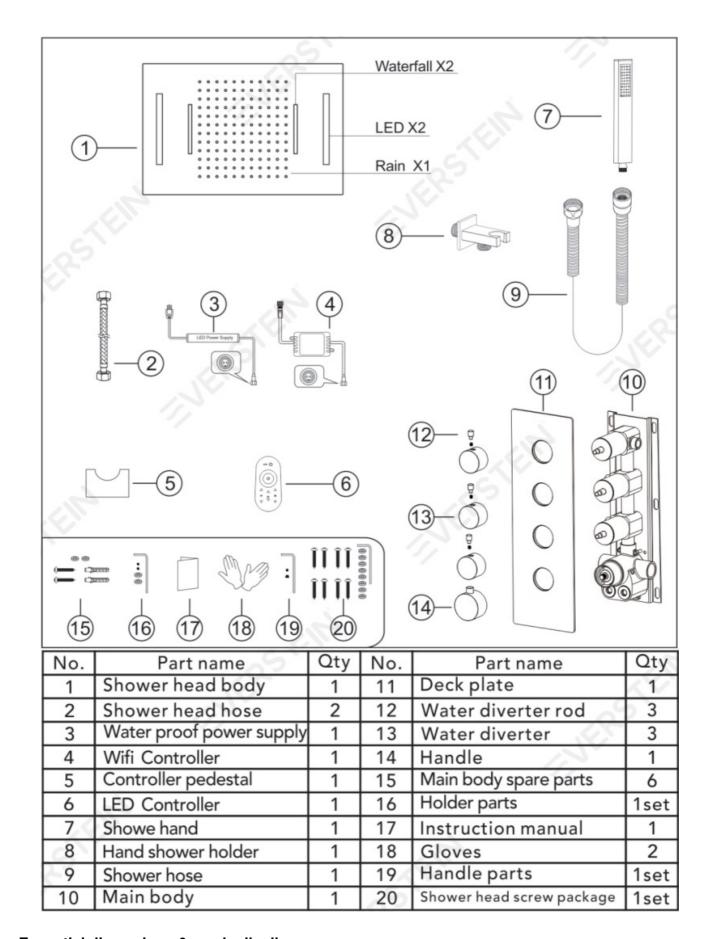

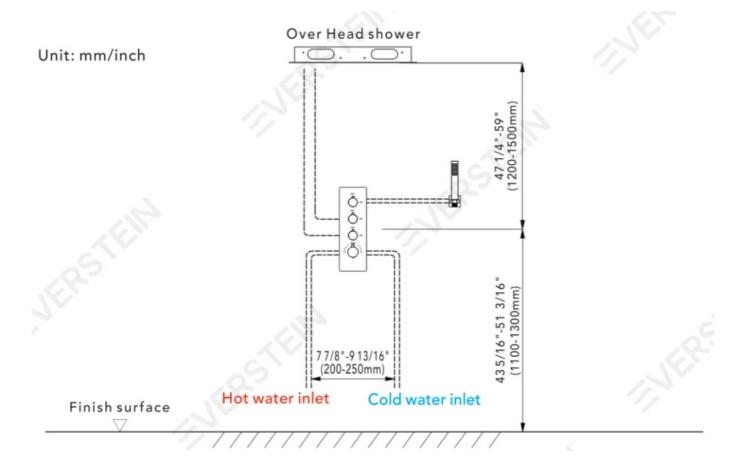


The installation depth of the shower holder



The thickness of the tile must be calculated for installation. Connector size of male thread: USA: 1/2"-14NPT, Canada: 1/2"-14NPT, Europe: G1/2".


Installation Depth Of Main Body

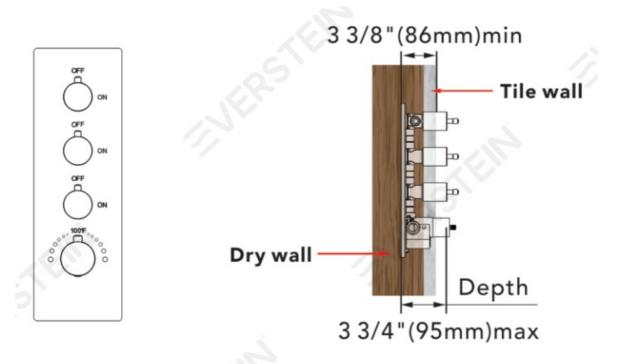

Notice:


- 1. The installation depth of the main body should be no less than 3 3/8" (86mm) and no more than 3 3/4" (95mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
- 2. The opening size of ceramic tile shall be smaller than the deck plate size.

Piping Instructions Before Tiling

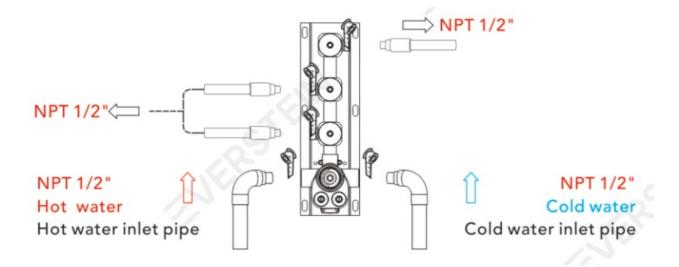

- 1. As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction when installing the pre-buried main body.
- 2. Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage. Then, adjust the flow switch to the "on" position to check for leaks in the mixed outlet pipes.


Main Body Valve Installation

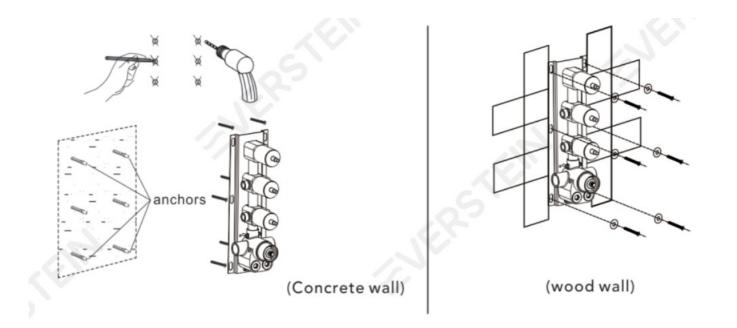

- 1. Make marks according to the dimensions of the main body valve, then drill anchors into the wall (for a concrete wall).
- 2. Secure the main body directly to a wood wall using screws.
- 3. When installing the main body, ensure the "UP" side is facing upwards; do not install it upside down.


Please note: The level meter should be parallel to the wall; otherwise, the deck plate cannot be installed properly.

Step2

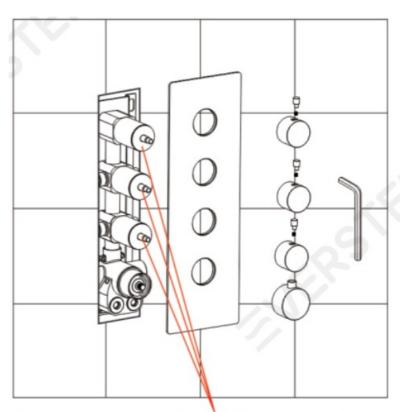

Do not remove the white wear ring; otherwise, the handwheel will be damaged.

Water flow control: Turn clockwise to decrease and stop; turn anti-clockwise to increase to the maximum

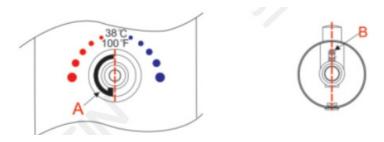

- 1. Please install the deck plate, water diverters, and water diverter rods step by step.
- 2. Install the handle using the screw provided, and then secure it with the handle cap.


Precautions for Handwheel Installation

1. The line can't be misplaced; it should be kept in line. Otherwise, the water temperature of 100°F or 38°C will not be correct.



2. Please ensure that the plastic locating ring (A) and handwheel locating pin (B) are kept in the same line with 100°F or 38°C. Otherwise, the water temperature will be incorrect.

Main Body Water Outlet Switch Control

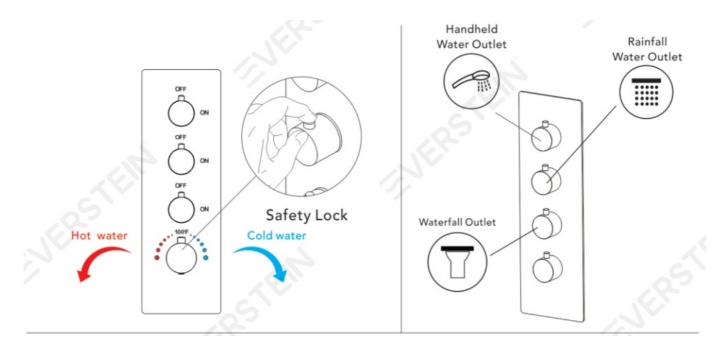

1. Temperature Control

Increase Temperature: Turning the switch to the left (or sliding up according to device instructions) can increase the water temperature. This operation increases the proportion of hot water, thereby raising the output water temperature. Decrease Temperature: Turning the switch to the right (or sliding down according to device instructions) can decrease the water temperature. Doing so increases the proportion of cold water, thereby lowering the output water temperature.


2. Function Switching

For devices with multiple water output modes (such as rain shower, handheld showerhead, columnar flow, etc.), the direction of the function switch usually determines the selected output mode:

3. Safety Lock


Temperature control devices are equipped with a safety lock feature. It is necessary to unlock first (e.g., by pressing the center part of the switch) before adjusting the temperature, to prevent accidental adjustments to excessively high or low temperatures.

Plumbing Layout of Shower Head

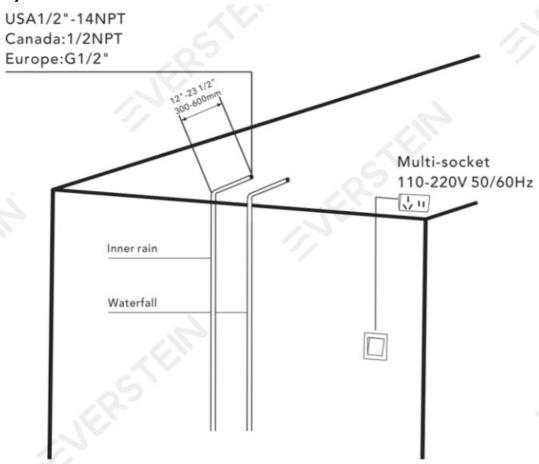


Install the power switch in the appropriate position, lay out the water pipeline, and connect it to the main body.

Holes in the Ceiling

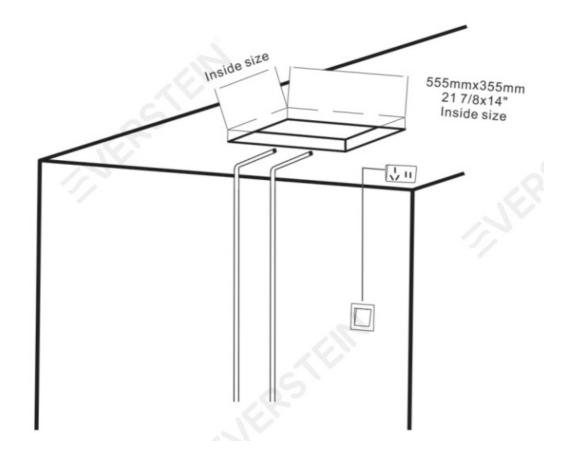


Shower Head Exploded View

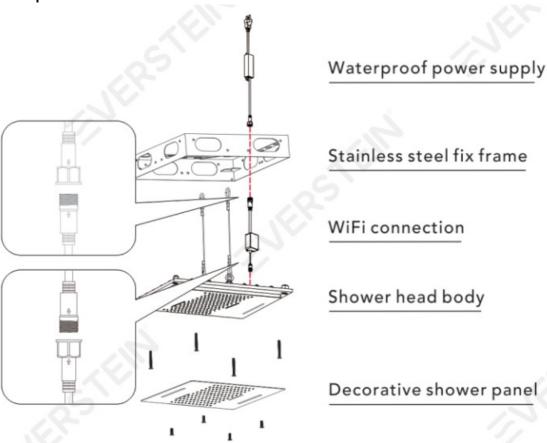


According to the mark (Remove/Install) on the top of the shower head panel, unscrew the decorative shower panel, shower head body, and fix frame respectively.


Fix Frame Installation

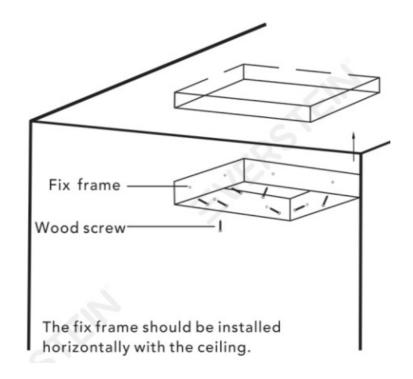


Layout for power

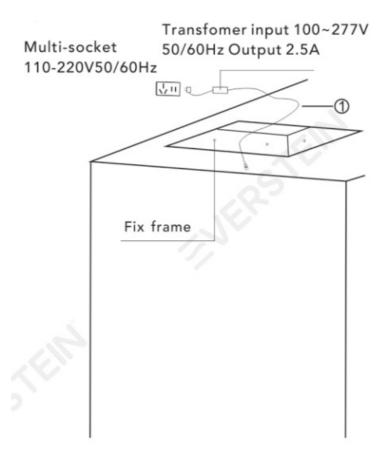


LED (Single Line) Connection

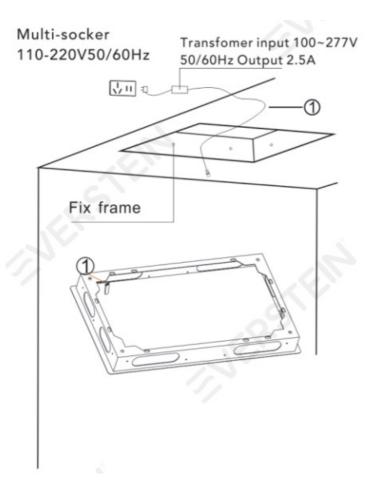


- 1. To attach the WiFi controller, wrap it with adhesive tape to prevent it from falling off.
- 2. To connect the power supply and WiFi

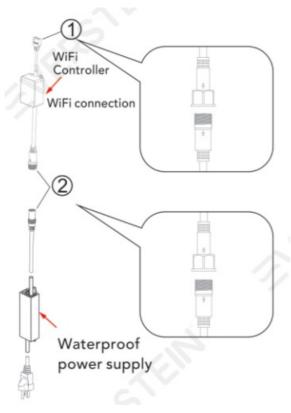


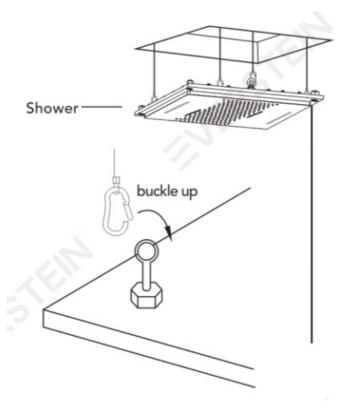


Layout for Water Pipe

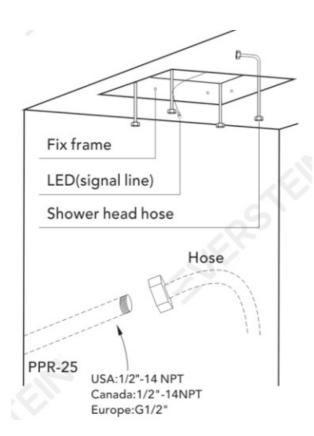


Water Inlet Pipe Connection

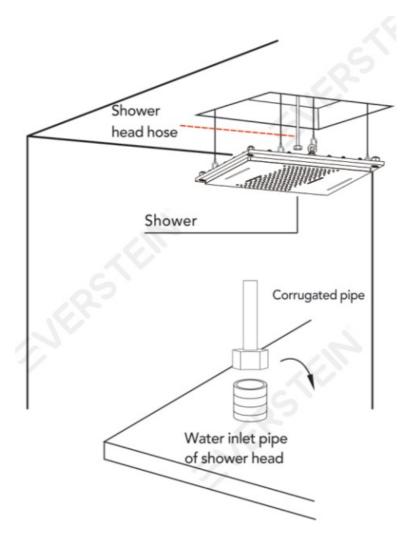


Water Testing

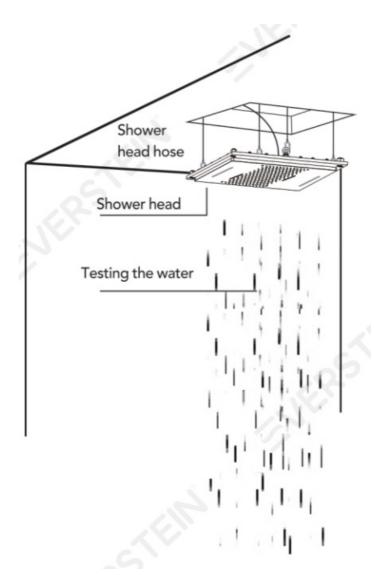


Shower Head Installation

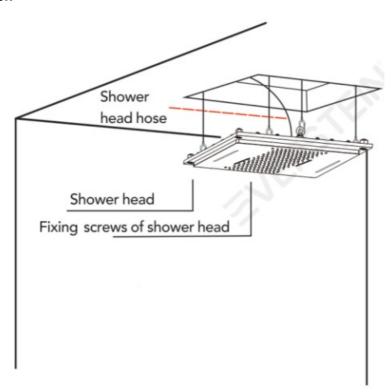

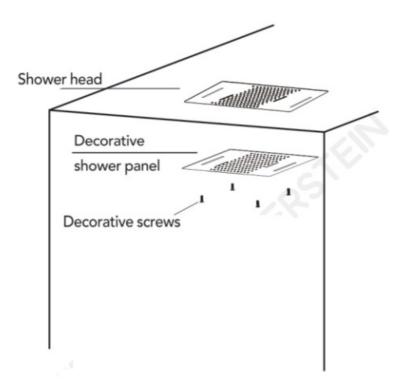

LED Touch Remote Instruction

The touch remote has 9 touch keys, each of which functions as follows: Controller connections shown:

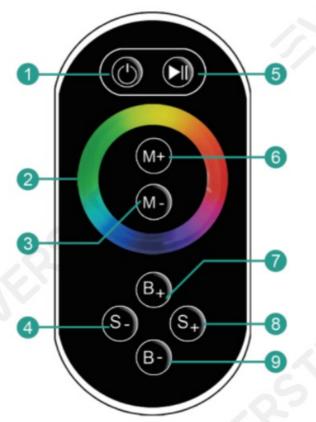

- 1. Turn ON/OFF
- 2. Color Touch Ring
- 3. Color Temperature adjusting
- 4. Dynamic Speed adjusting

- 5. Mode Switch
- 6. Color Temperature adjusting
- 7. Dynamic Brightness adjusting
- 8. Dynamic Speed adjusting
- 9. Dynamic Brightness adjusting

Mode

NO.	FUNCTION	REMOTE
1	Static red	Brightness is adjustables. speed is unadjustable.
2	Static green	
3	Static blue	
4	R G B Jumping	
5	Static blue-green	
6	Static yellow	
7	Static white	
8	Static purple	Brightness is adjustable Speed is adjustable
9	R G B Gradual	
10	7-Colors Jumping	
11	7-Colors Gradual	

1. Power supply management:

The remote will enter standby mode (untouchable state) if pressed for more than 20 seconds. If this occurs, please slightly shake it once and the remote will return to normal working state (touchable state).

2. Indicator light instruction:

- 1. When the PWR indicator light is bright, the remote is either idle or sending a signal; when the PWR light is off, it will enter standby mode.
- 2. When RF is bright, it means the remote is sending signal; off means there is no signal sending.

Remarks:

- 1. This product should be commissioned and installed by qualified personnel.
- 2. This product cannot be waterproof; it needs to be protected from the sun and rain. If installed outdoors, please use a waterproof box.
- 3. Good heat dissipation conditions will extend the life of the LED controller. Please install the product in a well-ventilated environment.
- 4. Please do not install or use such products in lightning, thunder, strong magnetic, or high voltage applications.
- 5. Please check whether the output voltage of the LED power supply used meets the product voltage range requirements.
- The diameter of the wire used must be sufficient to support the connected LED luminaire and ensure that the wiring is secure to avoid the wire overheating or poor contact, triggering an accident.
- 7. Before power-on debugging, ensure that all wiring is correct to avoid damage to the luminaire due to wiring errors.

Documents / Resources



EVERSTEIN SFS1024 LED Thermostatic Dual Function Shower Head System [pdf] Installat ion Guide

SFS1024 LED Thermostatic Dual Function Shower Head System, SFS1024, LED Thermostatic Dual Function Shower Head System, Thermostatic Dual Function Shower Head System, Dual Function Shower Head System, Shower Head System, System

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.