




evil CONTROLLERS B4210 Rapid Fire Remote Controller Instruction Manual

[Home](#) » [evil CONTROLLERS](#) » evil CONTROLLERS B4210 Rapid Fire Remote Controller Instruction Manual 



Contents

- 1 evil CONTROLLERS B4210 Rapid Fire Remote Controller
- 2 ABOUT PROFILES
- 3 PROGRAMMING MODS
- 4 PROGRAMMING MODS
- 5 ADVANCED MODS
- 6 PROFILE FEATURES
- 7 MOD GLOSSARY
- 8 Documents / Resources
- 9 Related Posts

evil CONTROLLERS B4210 Rapid Fire Remote Controller



ABOUT PROFILES

Your Evil Controller comes with 20 customizable profiles. They operate just like classes in Call of Duty® Simply select the p Profile (class) and assign mods (perks).

By default, the first 10 profiles have a fire rate equal to that of their profile number. For exam p le, profile 5 = 5 shots per second. Learn how to modify these defaults under ADJUSTABLE RAPID FIRE.

UPON PROFILE ACTIVATION, PROFILE 1 WILL AUTOMATICALLY BE SELECTED



PROGRAMMING MODS

SELECT/CLEAR PROFILE


Tap □ (profile#) of times to choose the desired profile. For example, tapping D 5 times = profile 5



Hold for 2 seconds.

CLEAR ALL

Clear all functions in the current profile

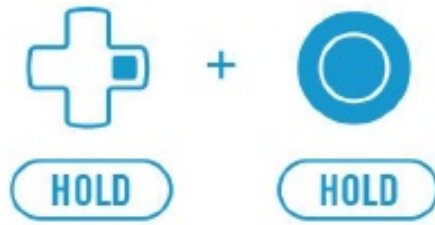

Hold for 2 seconds

PROGRAMMING MODS


RAPID FIRE

Increase the rate of fire of semi-automatics weapons.



See Advanced Mods for adjusting the rate of fire.

LEFT TRIGGER RAPID FIRE

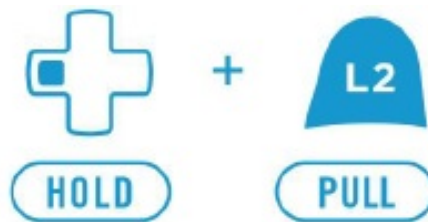


AKIMBO RAPID FIRE




ADVANCED MODS

ADJUSTING YOUR RATE OF FIRE

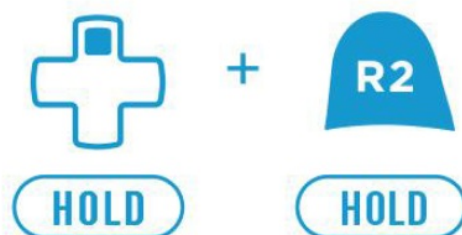

Hold for 2 seconds

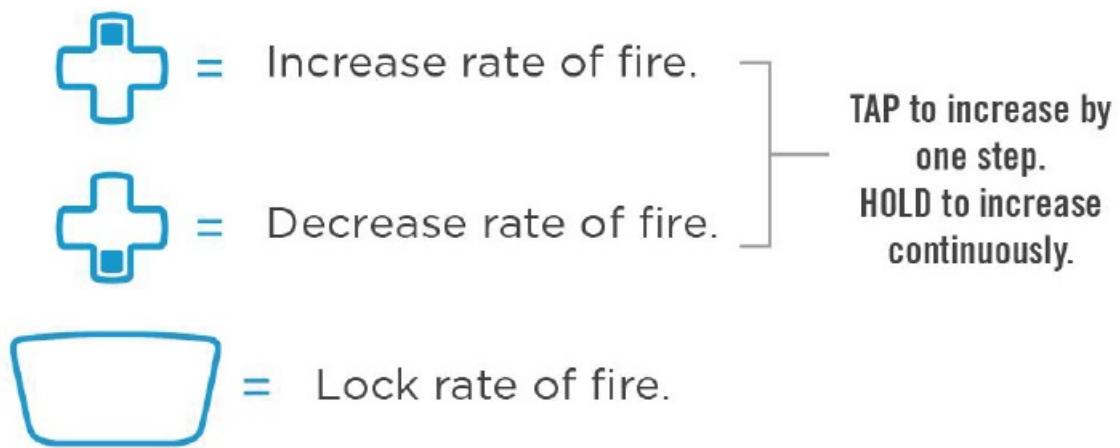 

Each profile has its own adjustable rate of fire

It's possible for the rate of fire to be so fast that it doesn't register in-game. Slowing automatic weapons down to reduce recoil and increase accuracy can be effective. Features 15,000 speed increments.



PROFILE FEATURES

CHECK PROFILE

Check the current profile number. LED will blink # to indicate the profile



TOGGLE PROFILES ON/OFF

Quickly return the controller to stock functionality.



LOCK

Prevent mods from being turned on/off during gameplay.

Hold for 3 seconds.

When the light bar pulses, release



MASTER RESET

Restore the controller to factory settings. Do not perform this operation unless you want to overwrite all of your customized profiles.

This action cannot be undone.

Note: Mods must be toggled off in order to perform Master Reset.



Hold for 10 seconds



[HOW-TO VIDEOS ON TINYURL.COM/EVIL-PLAYLIST](https://tinyurl.com/evil-playlist)

MOD GLOSSARY

RAPID-FIRE

Increase the rate of fire of pistols and semi-automatics.

Unload your magazine faster than your opponent.

LEFT TRIGGER RAPID FIRE

Increase the rate of fire of pistols and semi-automatics equipped on your left trigger.


AKIMBO RAPID FIRE

Increase the rate of fire on both triggers while dual wielding your primary weapon.

ADJUSTING YOUR RATE OF FIRE

Create a preferred rate of fire for any weapon.

Documents / Resources

	<p>evil CONTROLLERS B4210 Rapid Fire Remote Controller [pdf] Instruction Manual B4210 Rapid Fire Remote Controller, B4210, Rapid Fire Remote Controller</p>
---	--

Manuals+.